


Room&Board

SPECIAL CONSIDERATIONS:

CHRONICLE FLOOR LAMP

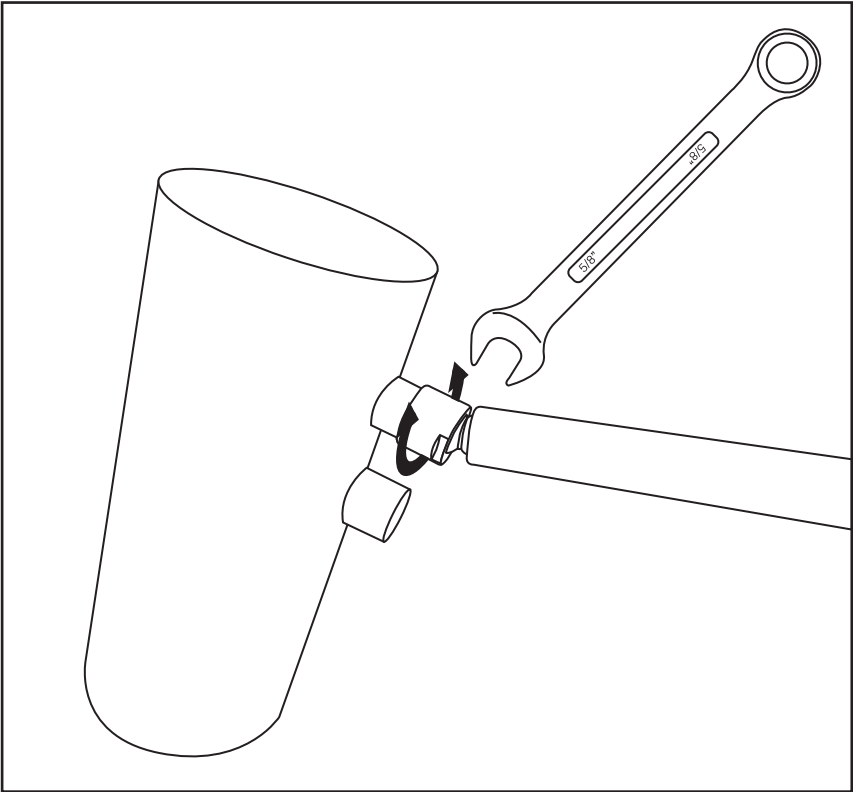

The lamp head can loosen over time. Use a 5/8" wrench to adjust the tension of the lamp head if necessary. Consider placing a fabric cloth or other protective barrier between your lamp and the wrench to protect its finish.