



INSTRUCTIONS FOR SECURING MODA CHANGING TRAY

DO NOT USE POWER TOOLS!

Please read all instructions before use of the add-on changing unit.

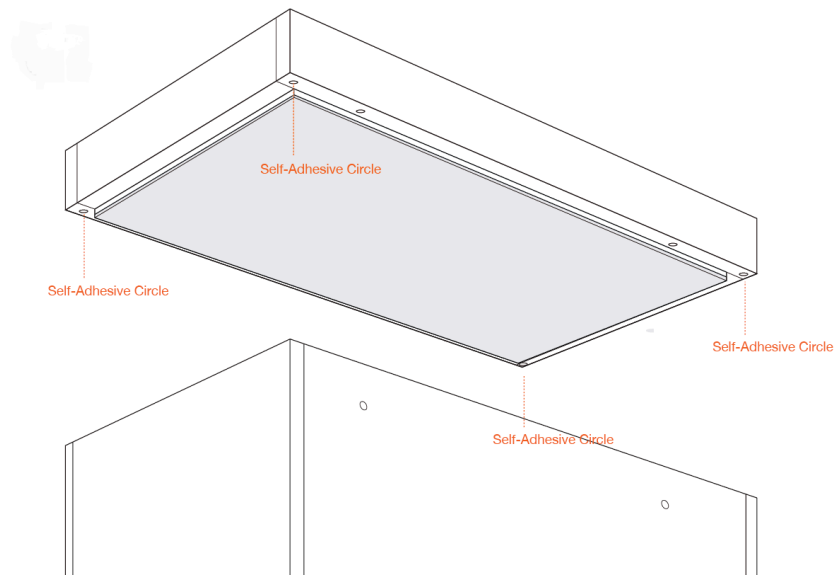

- 1) Place one self-adhesive circle under each corner of the changing tray to protect the top of your dresser.

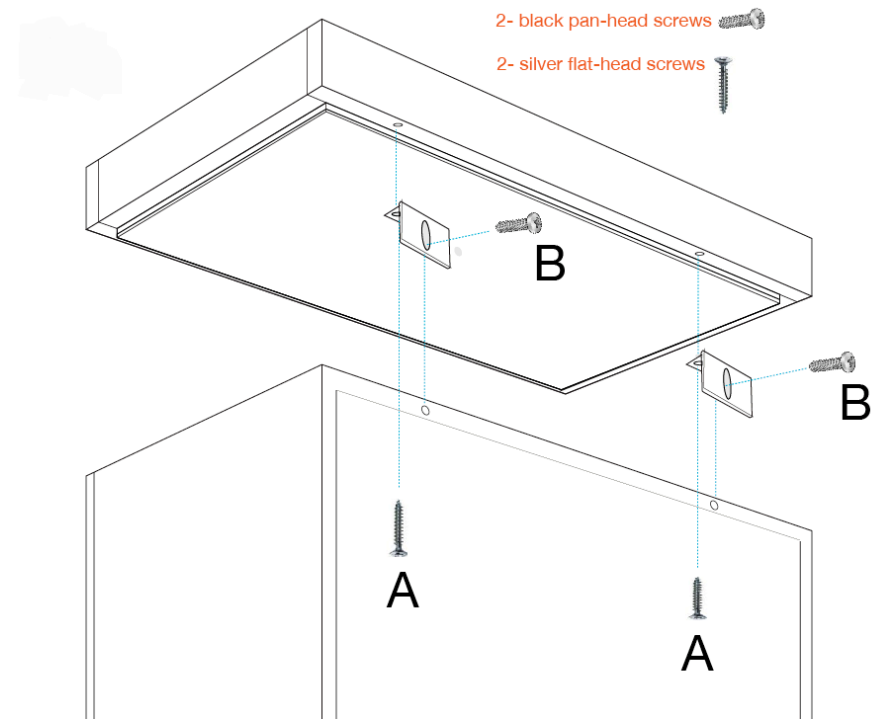

- 2) Use the silver flat-head screws (A) to fasten each metal bracket to the bottom of the changing tray using the pilot holes provided. Use the black pan-head screws (B) to secure the changing tray to the back of the dresser through the slot in the bracket and into the back of the dresser.

CHANGING TRAY

- 3) Discard the plastic bag covering the pad and put pad in the changing tray. We have also provided a cloth cover for your pad. The changing tray is now ready for use. This product is not intended to be used as a changing tray without enclosed pad. Use of product without this may result in death or serious injury to your child from falling. Follow all instructions on attaching and using the Changing Tray and Pad.
- 4) Use the buckle strap attached as a restraint system. The buckle operates by inserting one side into the other until it snaps closed. Pinch the sides to release.

Restraint System

When placing infant into the changing tray on his or her back, bring the safety straps around from both sides of the pad so they align over the abdomen. Buckle securely. To tighten the safety strap around the child, pull the loose end of the strap away from the buckle. To release the safety strap, simply squeeze the buttons together on both sides of the buckle.

Care and Cleaning instructions

This changing tray will provide many years of reliable use if treated with the care normally given to fine furniture. It has been carefully finished with a durable, non-toxic finish. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the unit is finished with a protective lacquer.

The foam pad can be wiped with a damp cloth and mild detergent.



WARNING: FALL HAZARD –To prevent death or serious injury, always keep child within arm's reach.

This Changing Tray may be attached to a Dresser or any surface that is level, stable, and structurally sound with minimum surface dimensions of 38" x 18".

Recommended maximum weight of child for which this changing tray is intended is 30 lbs.

The safety strap is only intended to HELP hold an infant while using the changing tray.

NEVER LEAVE CHILD UNATTENDED on changing tray.

Periodically check that all bolts and screws are securely tightened to insure stability and safety of changing tray.

Read all instructions before use.

Keep instructions for future use.

DO NOT use the changing tray or pad if it is damaged or broken.

This product is not intended to be used as a changing tray without the supplied pad and safety strap. Use of the product without this may result in death or serious injury to your child from falling. Follow all instructions on attaching and using the changing tray.

**Manufactured by El Greco Woodworking, Inc.
608 Allen Street , Jamestown, New York 14701**