
Keep these instructions for future use

HARVEY SOLAR LIGHT

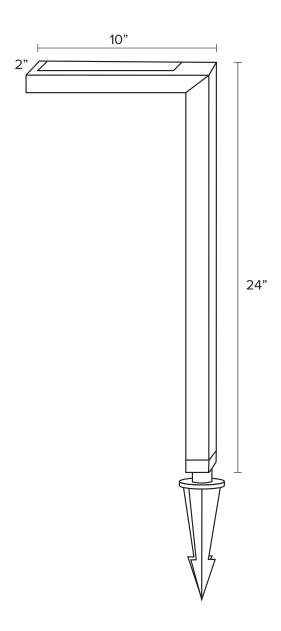

Recommended Tools:

- Rubber mallet
- 3/4"-1" plastic conduit such as PVC pipe

This Product Includes

- · Aluminum housing
- Removable solar module
- Stake

Installation Instructions

Note: Prior to installation, place the solar module in direct sunlight for a minimum of 7 hours to charge the batteries so you can program the settings. For best performance, place lights in locations with a minimum of 7 hours of direct sun. Try to avoid areas with fertilizer, machinery or heavy foot traffic.

- 1 Remove mulch and rocks around desired light location.
- 2 Use a rubber mallet and a 3/4-inch PVC pipe or stake to make a hole in the ground that will fit the light's stake.
- 3 Stick the stake into the ground so the threaded base is just above ground. Do not pack the soil around it yet.
- 4 Place the charged solar module into the aluminum housing. Tighten the single screw on the side of the housing to secure the solar module.
- **5** Program your desired settings.
- 6 Place the light onto the ground stake. Spin it to tighten it onto the stake's threaded base.
- Adjust the light's position as needed before tightly packing the soil around it, then rearrange rocks and mulch.