



TRUE RESIDENTIAL®

ADA HEIGHT INSTALL GUIDE AND USER'S MANUAL



825304



PRESERVE THE MOMENT®

THANK YOU

FOR YOUR PURCHASE

INSTALLATION CHECKLIST

To ensure no part of the installation process has been overlooked, complete the checklist below.

- ☐ Have all packaging materials been removed?
- ☐ Are the anti-tip brackets securely installed and properly engaging the unit?
- ☐ Has the unit been properly leveled? Do all leveling legs touch the floor?
- ☐ Is the kickplate Installed?
- ☐ Is the doorstop being installed (if needed)?
- ☐ Does the customer understand the unit's operation?
- ☐ Has the customer been given the key and literature package?
- ☐ Have all stainless steel surfaces been inspected for imperfections?*
- ☐ Is the unit operating correctly? If not, is the unit plugged in? Is the control turned on?

*To be completed by either an installer with the customer or an authorized True dealer upon completion of installation. Stainless steel doors, handles, and shelves are covered by a limited 30-day warranty for cosmetic defects.

CONTENTS

INSTALLATION CHECKLIST **3**

INSTALLATION

SAFETY PRECAUTIONS **8**

OWNERSHIP **12**

OUTDOOR USE **12**

CABINET LOCATION & SPECIFICATIONS **13**

ELECTRICAL INSTALLATION & SAFETY **16**

UNCRATING **18**

ANTI-TIP BRACKET INSTALLATION **19**

LEVELING LEGS **20**

LEVELING **21**

KICKPLATE INSTALLATION **21**

CABINET SETUP

SHELF INSTALLATION **24**

90° DOORSTOP INSTALLATION **25**

CABINET OPERATION

CABINET COMPONENTS / ELECTRONIC
CONTROL AND LIGHT SWITCH LOCATION **28**

ELECTRONIC CONTROL DISPLAY CODES **31**

UNLOCK THE CONTROL **32**

TURN OFF / ON CONTROL **32**

CHANGE THE SET POINT **33**

INITIATE MANUAL DEFROST **34**

CHANGE DISPLAY READOUT **34**

MAINTENANCE, CARE & CLEANING

CONDENSER COIL CLEANING **38**

CONDENSATION **39**

STAINLESS STEEL EQUIPMENT CARE
& CLEANING **40**

ADJUSTMENTS, SERVICING & REPLACING COMPONENTS

SERVICING & REPLACING COMPONENTS **44**

REVERSING DOOR **45**

FREQUENTLY ASKED QUESTIONS **46**

CONTACT US

CONTACT US **48**

WARRANTY

ENGLISH **49**

FRENCH **50**

INSTALLATION

SAFETY PRECAUTIONS

OWNERSHIP

OUTDOOR USE

CABINET LOCATION & SPECIFICATIONS

ELECTRICAL INSTALLATION & SAFETY

UNCRATING

ANTI-TIP BRACKET INSTALLATION

LEVELING LEGS

LEVELING

KICKPLATE INSTALLATION



PRESERVE THE MOMENT®

HOW TO MAINTAIN YOUR TRUE REFRIGERATOR TO RECEIVE THE MOST EFFICIENT AND SUCCESSFUL OPERATION

You have selected one of the finest commercial refrigeration units made. It is manufactured under strict quality controls with only the best quality materials available. Your TRUE cooler, when properly maintained, will give you many years of trouble-free service.

WARNING – Use this appliance for its intended purpose as described in this Installation Manual.

REFRIGERANT SAFETY & WARNING INFORMATION

See the serial label inside the cabinet for the units refrigeration type. For Hydrocarbon Refrigeration (R290 only), see below:



DANGER – Risk of fire or explosion. Flammable refrigerant used. DO NOT use mechanical devices to defrost refrigerator. DO NOT puncture refrigerant tubing;

follow handling instructions carefully. To be repaired only by trained service personnel.



DANGER – Risk of fire or explosion (flammable refrigerant used), consult repair manual/owner's guide before attempting to service this product.

All safety precautions must be followed. Dispose of properly in accordance with local and federal regulations. Follow all safety precautions.



CAUTION – Keep all ventilation openings clear of obstruction in the appliance enclosure or in the structure housing the appliance.

BASIC SAFETY & WARNING PRECAUTIONS

- Take care during operation, maintenance or repairs to avoid cuts or pinching from any part/component of the cabinet.
- Units may pose a tipping hazard while uncrating, during installation, or when moving the unit.

- Ensure the unit is properly installed and located in accordance with the Installation Instructions before use.
- This appliance is not to be used, cleaned or maintained by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
- **DO NOT** allow children to play with the appliance or climb, stand, or hang on the unit's shelves to prevent damage to the refrigerator and personal injury.
- **DO NOT** touch the cold surfaces in the freezer compartment when hands are damp or wet. Skin may stick to these extremely cold surfaces.
- Unplug the refrigerator before cleaning and making repairs.
- Setting temperature controls to the 0 position or powering off an electronic control may not remove power from all components (e.g., light circuits, perimeter heaters, and evaporator fans).
- **DO NOT** store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.
- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep fingers out of the "pinch point" areas; clearances between the doors and cabinet are necessarily small; be careful closing doors when children are in the area.
- **DO NOT** use electrical appliances inside the food storage compartments of the units unless the appliances are of the type recommended by the manufacturer.

NOTE: ALL SERVICING MUST BE PERFORMED BY A QUALIFIED TECHNICIAN.

CABINET DISPOSAL WARNING



DANGER! RISK OF CHILD ENTRAPMENT

PROPER DISPOSAL OF THE CABINET

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous, even if they will sit for "just a few days." If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.

Before throwing away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.



DANGER – Risk of fire or explosion.
Flammable insulation and/or refrigerant used. Dispose of all in accordance with local and federal regulations. Follow all safety precautions.

COMMENT ENTREtenir VOTRE RÉFRIGÉRATEUR TRUE POUR UN FONCTIONNEMENT OPTIMAL ET PERFORMANT.

Vous avez choisi l'un des meilleurs réfrigérateurs commerciaux existants. Il a été fabriqué selon les normes de qualité les plus exigeantes et avec les meilleurs composants disponibles sur le marché. S'il est correctement entretenu, votre réfrigérateur TRUE vous offrira des années de fonctionnement sans souci.

AVERTISSEMENT – Utilisez cet appareil uniquement pour l'usage prévu dans ce manuel d'utilisateur

INFORMATIONS DE SÉCURITÉ ET D'AVERTISSEMENT CONCERNANT LE FRIGORIGÈNE

Consultez l'étiquette de numéro de série à l'intérieur de l'armoire pour connaître le type de réfrigération des appareils. Pour une réfrigération aux hydrocarbures seulement (R290), voir ci-dessous



DANGER – Risque de feu ou d'explosion. Le frigorigène utilisé est inflammable. **Ne PAS** utiliser des appareils mécaniques pour dégivrer le réfrigérateur.

Ne PAS percer les tuyaux de réfrigérant ; suivre scrupuleusement les instructions de manutention. Les réparations doivent être effectuées seulement par un technicien qualifié.



DANGER – Risque d'incendie ou d'explosion (réfrigérant inflammable utilisé), consultez le manuel de réparation/guide d'utilisation avant toute tentative d'intervention sur ce produit. Toutes les mesures de sécurité doivent être respectées. Mettez au rebut conformément aux règlements fédéraux ou locaux. Respectez toutes les précautions de sécurité.



ATTENTION – Éviter toute obstruction des ouvertures de ventilation dans la pièce où l'armoire est située ou sur l'armoire elle-même.

PRÉCAUTIONS DE BASE EN MATIÈRE DE SÉCURITÉ ET AVERTISSEMENTS

- Lors de l'utilisation, de l'entretien ou des réparations, il faut prendre soin d'éviter les coupures et les pincements pouvant survenir au contact des pièces ou des composantes de l'armoire.
- Les appareils présentent un danger de basculement pendant la sortie de la caisse, l'installation et lors de leur déplacement.
- Assurez-vous que l'appareil est installé et positionné correctement selon les Instructions d'installation avant l'utilisation.
- Cet appareil n'est pas destiné à être utilisé, nettoyé ou entretenu par des personnes (y compris des enfants) aux capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience ou de connaissances, sauf sous supervision ou après instruction concernant l'utilisation de l'appareil.
- **NE PAS** laisser les enfants jouer avec l'appareil ni grimper, monter ni se suspendre aux clayettes de l'appareil pour éviter des blessures comme des dommages au réfrigérateur.
- **NE TOUCHEZ PAS** les surfaces froides dans le compartiment du réfrigérateur avec les mains humides ou mouillées. La peau peut coller à ces surfaces extrêmement froides. La peau peut adhérer à des surfaces extrêmement froides
- Débranchez le réfrigérateur avant de le nettoyer ou d'effectuer des réparations.
- Le réglage des commandes de température en position 0 ou la coupure par une commande électronique peut ne pas couper l'alimentation de tous les composants (par exemple : circuit d'éclairage, chauffages périphériques, ventilateurs d'évaporateur, etc.).

- **NE STOCKEZ** ni n'utilisez de l'essence ou un autre produit volatile ou liquide inflammable à proximité près de cet appareil ou de tout autre appareil.
- **NE STOCKEZ PAS** de substances explosives tels que bombes aérosol à propulseur inflammable dans cet appareil.
- Maintenez les doigts à distance des endroits où vous pourriez vous pincer, les espaces entre les portes et entre les portes et l'armoire sont nécessairement très réduits. Faites attention en fermant les portes quand des enfants se trouvent à proximité.
- **NE PAS** utiliser des appareils électriques à l'intérieur des compartiments de stockage pour aliments des appareils, à moins qu'ils ne soient d'un type recommandé par le fabricant.

REMARQUE: TOUTES LES INTERVENTIONS DOIVENT ÊTRE EFFECTUÉES PAR UN TECHNICIEN QUALIFIÉ.

AVERTISSEMENT DE MISE AU REBUT DE L'ARMOIRE



DANGER! RISQUE DE COINCEMENT POUR LES ENFANTS

MISE AU REBUT CORRECTE DE L'ARMOIRE

Les enfermements et étouffements d'enfant ne sont pas des problèmes du passé. Les réfrigérateurs mis au rebut ou abandonnés restent dangereux...même s'ils ne sont mis là que pendant quelques jours. En cas de mise au rebut de votre ancien réfrigérateur, suivre les instructions ci-dessous pour éviter les accidents.

Avant de mettre au rebut votre ancien réfrigérateur ou congélateur:

- Enlevez les portes.
- Laissez les étagères en place pour éviter que les enfants puissent facilement grimper à l'intérieur.



DANGER – Risque de feu ou d'explosion. Isolation et/ou réfrigérant inflammable utilisé. Toujours mettre au rebut conformément aux règlements fédéraux

ou locaux. Respectez toutes les précautions de sécurité.

OWNERSHIP

To ensure that your unit works properly from the first day, it must be installed properly. We highly recommend a trained refrigeration mechanic and electrician install your True equipment. The cost of a professional installation is money well spent.


Before you start to install your TRUE unit, carefully inspect it for freight damage. If damage is discovered, immediately file a claim with the delivery freight carrier.

TRUE is not responsible for damage incurred during shipment.

For any questions about installation, please contact your True dealer or True Residential Technical Service at **844-746-9423** or **TrueResidentialService@TrueMfg.com**. Please have your model and serial number available.

NOTICE TO CUSTOMER

Loss or spoilage of products in your refrigerator/freezer is **not covered by warranty**. In addition to following recommended installation procedures, run the refrigerator/freezer for 24 hours prior to usage to verify its proper operation.

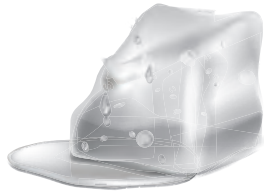

OUTDOOR USE

All True undercounter units are rated for outdoor use.

- In regions with high dewpoints or humidity, condensation may appear on the glass and around gasket seals. For best operation, keep the unit fully stocked with product.
- In areas where the ambient temperature regularly exceeds 95°F (35°C), vent the rear of the rough opening for optimum performance. Recommended vent size is 4" x 10" (102 mm x 254 mm).
- For the best operation, install your True unit with your outdoor bar/kitchen countertop covering the door or drawer gasket (flush install). The rough opening should be at least 24" (606.6 mm) deep.

NOTE: DOOR AND DRAWER GASKETS DO NOT PROVIDE A WATERTIGHT SEAL AGAINST THE ELEMENTS.

When the temperature consistently reaches 32°F (0°C) or below, winterize your unit. Remove all product from the unit, unplug or turn the unit off, and place a cover over the unit.




CABINET LOCATION & SPECIFICATIONS

- Appliance is NSF 7 approved.
- Appliance is UL rated for outdoor use.
- Appliance is not suitable for an area where a pressure washer or hose may be used.
- Ensure the location will provide adequate clearances and sufficient airflow for the cabinet.
- Ensure the power supply for the cabinet matches the cabinet specification sheet or cabinet data plate and is within the rated voltage ($\pm 5\%$). Also, ensure the amperage rating of the circuit is correct and the circuit is properly grounded.
- The cabinet should always be plugged into its own individual dedicated electrical circuit. The use of adapter plugs and extension cords is prohibited.

When installing two or more True units side-by-side, be sure to leave at least a $5/8"$ (1.58 cm) gap between the cabinets, or install foam pads between the cabinets and on any side with 0" clearance, to prevent moisture from developing on applications. To order foam pads, contact our parts department at **844-849-6226** or **TrueResidentialParts@TrueMfg.com**.

Please see the recommended dimensions for rough openings (right).

ROUGH OPENING

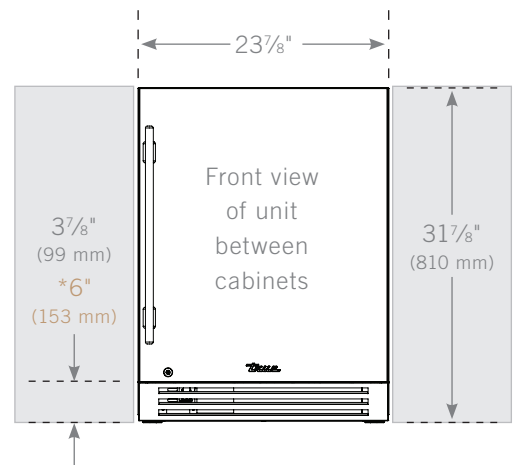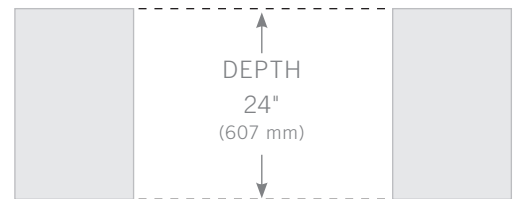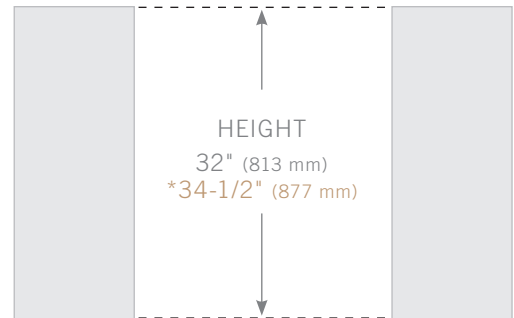

*When application is installed with tall leveling legs.

INSTALLATION

STAINLESS SOLID & GLASS DOORS

True's stainless solid door and glass door units are designed to either be inserted into a cabinet opening.

REFRIGERATORS



TURADA-24-R/L-RS-A




TURADA-24-R/L-RG-A

WINE CABINET



TUVADA-24-R/L-RG-A

PLAN VIEW DIMENSIONS

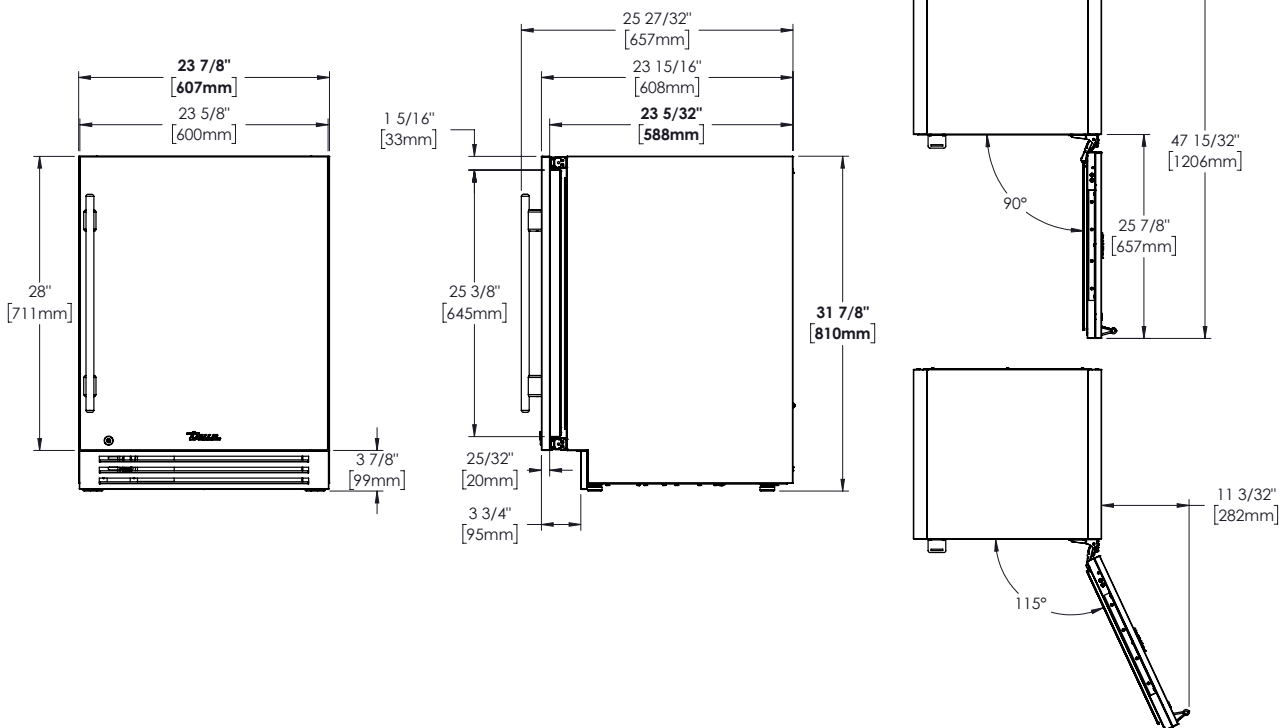

*Measures include 3/4" (19 mm) thick panel (provided by others)
Dimensions may vary by ± 1/8" (3.2 mm)

SOLID DRAWERS


True's stainless solid drawer units are designed to be inserted into a cabinet opening.

REFRIGERATOR



TURADA-24D-SS-A

PLAN VIEW DIMENSIONS

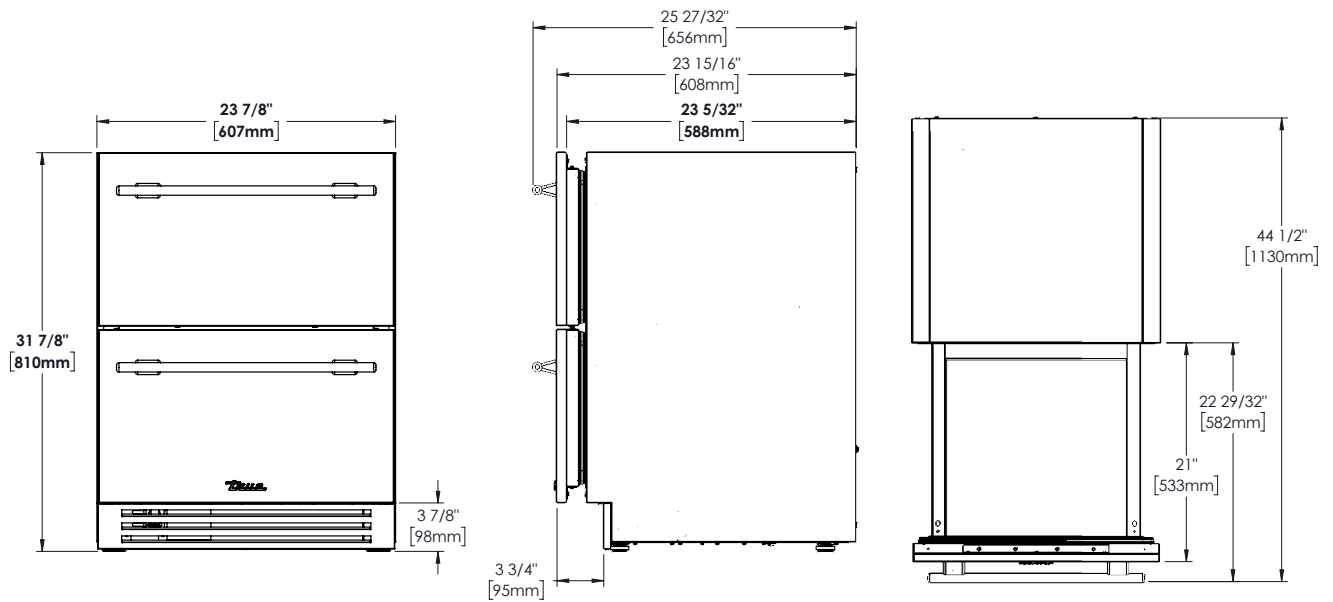

ELECTRICAL INSTALLATION & SAFETY



NEVER USE AN ADAPTER PLUG! An adapter plug alters the original OEM plug configuration when connecting it to a power source.

TRUE will not warranty any refrigerator/freezer that has been connected to an adapter plug.

USE OF EXTENSION CORDS

NEVER USE AN EXTENSION CORD!


An extension cord is determined to be any component that adds length to the original OEM power cord when connecting it to a power source.

TRUE will not warranty any refrigerator/freezer that has been connected to an extension cord.



CUTOUT OPENINGS

To minimize the depth of the cutout opening, the electrical outlet must be positioned as shown below. Outlet must be flush with wall.

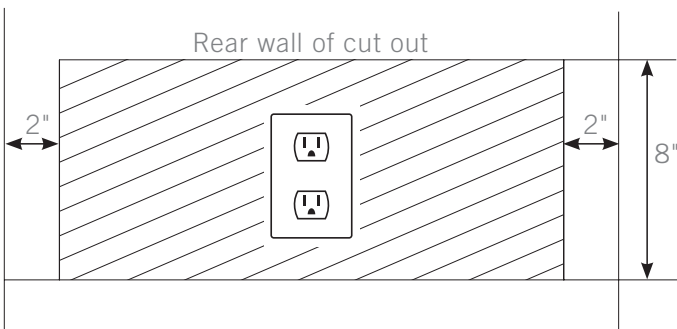

NEMA PLUG CONFIGURATIONS

60 HZ USE ONLY!

TRUE uses these types of NEMA plugs shown. If you DO NOT have the proper outlet, have a licensed electrician verify and install the correct power source.



115/60/1
NEMA-5-15R



115/208-230/1
NEMA-14-20R



115/60/1
NEMA-5-20R



208-230/60/1
NEMA-6-15R

INTERNATIONAL (IEC) PLUGS ONLY

International cabinets may be supplied with a power cord that will require installation. Install this cord before connecting the unit to a power source.

NOTE: INTERNATIONAL PLUG CONFIGURATIONS WILL VARY BY COUNTRY AND VOLTAGE

INSTALLATION

Fully seat the power cord into the cabinet receptacle until it locks in position. See fig. 1.

REMOVAL

Depress the red button. See fig. 2.



FIG. 1. Fully insert the power cord into the receptacle.



FIG. 2. Push the red button to remove the plug.

ELECTRICAL INSTALLATION & SAFETY – (CONTINUED)

HOW TO CONNECT ELECTRICITY

- The power cord from this appliance is equipped with a grounding plug which minimizes the possibility of electric shock hazard.
- The wall outlet and circuit should be checked by a licensed electrician to make sure the outlet is properly grounded.
- If the outlet is a standard 2-prong outlet, it is your personal responsibility and obligation to have it replaced with the properly grounded wall outlet.
- **DO NOT**, under any circumstances, cut or remove the ground prong from the power cord. For personal safety, this appliance must be properly grounded.
- Before your new unit is connected to a power supply, check the incoming voltage with a voltmeter. If the recorded voltage is less than the rated voltage for operation (+/-5%) and amp rating, correct immediately. Refer to cabinet data plate for this voltage requirement.
- The refrigerator/freezer should always be plugged into a dedicated electrical circuit. This provides the best performance and prevents building wiring circuits from being overloaded, which could cause a fire hazard from overheated wires.
- **NEVER** unplug your refrigerator/freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
- When moving the refrigerator/freezer, for any reason, be careful not to roll over or damage the power cord.
- Repair or replace immediately all power cords that have become frayed or otherwise damaged. **DO NOT** use a power cord that shows cracks or abrasion damage along its length or at either end.
- If the supply power cord is damaged, it should be replaced with original equipment manufacturer (OEM) components. To avoid hazard this should be done by a licensed service provider.

CABINET WIRING DIAGRAM

The cabinet's wiring diagram is in the exterior servicing compartment space of the cabinet. A copy of the wiring diagram may also be obtained at

www.TrueMfg.com/support/serial-number-lookup

UNCRATING

REQUIRED TOOLS

- Cutting Tool
- Hammer
- Crowbar
- Phillips Screwdriver
- Floor Protector

PROCEDURE

The following procedure is recommended for uncrating the unit:

1. Remove the outer packaging (cardboard and clear plastic). See fig. 1. Inspect for concealed damage. **Again, immediately file a claim with the freight carrier if there is damage.**

2. Cut the plastic band and remove the Styrofoam block. See fig. 2.

NOTE: MOVE THE UNIT AS CLOSE AS POSSIBLE TO ITS FINAL LOCATION BEFORE REMOVING THE SKID.

3. Position the floor protector next to the skid.
4. Carefully lift the unit off the skid and place the unit on the floor protector.

NOTE: DO NOT LIFT THE CABINET BY THE COUNTERTOPS, DOORS, DRAWERS, OR GRILLS.

5. Remove the interior packaging.

NOTE: KEYS FOR THE UNIT ARE INSIDE THIS PACKET.

6. If applicable, remove the wire shelving, shelf clips, and/or floor wine cradle packed on top of the unit. For shelving installation instructions, see page 24.



FIG. 1. Pull the cardboard from the pallet.

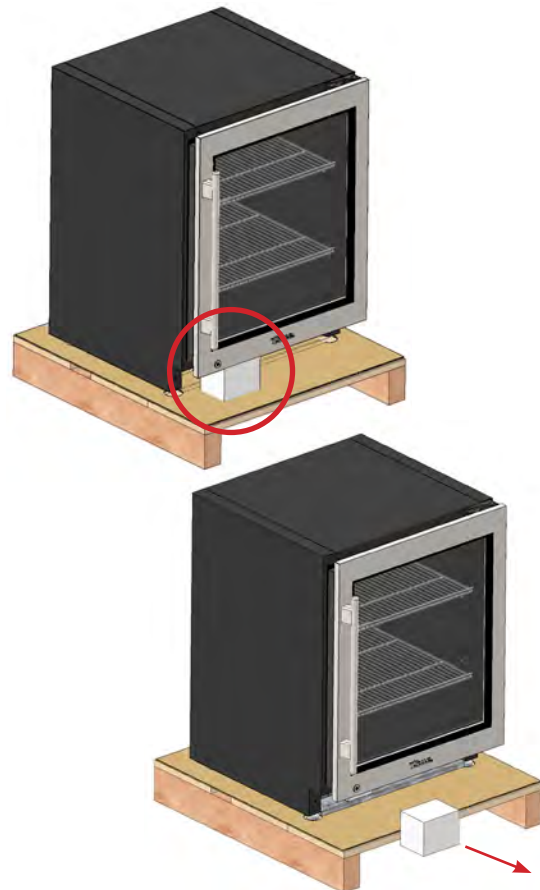


FIG. 2. Remove the foam block after moving the unit as close as possible to the final installation location.

IMPORTANT!

ALL FREE STANDING DRAWER OR STACKED
UNITS MUST HAVE ANTI-TIP BRACKETS INSTALLED.

IMPORTANTE!

TOUS LES TIROIRS AUTOPORTANTS OU LES UNITÉS
EMPLÉES DOIVENT AVOIR DES SUPPORTS ANTI-
BASCULEMENT INSTALLÉS.

ANTI-TIP BRACKET INSTALLATION

KIT CONTENTS

- 2 – Anti-Tip Brackets
- 4 – 3/16" x 2-1/4" Concrete Screws
- 4 – 12 x 2" Phillips Wood Screws

REQUIRED TOOLS

- Floor Protector
- Tape Measure
- Marking Utensil
- 1/8" Drill Bit*
- Phillips Bit Driver or 1/4" Hex-Head Driver
- Drill

*Drill bit type will vary by flooring material.

CAUTION – ALL FREESTANDING DRAWER OR STACKED UNITS MUST HAVE ANTI-TIP BRACKETS INSTALLED.

Install the anti-tip brackets before moving the unit into its final operating position. Contact a qualified flooring installer for the best procedure of drilling mounting holes through your flooring material.

1. Place the unit on the floor protector.
2. Determine the final installation location of the unit. Measure 27/32" (22 mm) inset from the sides and either 27/32" from the back or 18-1/2" (470 mm) from the front (measure does not include the kickplate). See fig. 1.
3. Position the anti-tip brackets and mark the mounting hole locations.

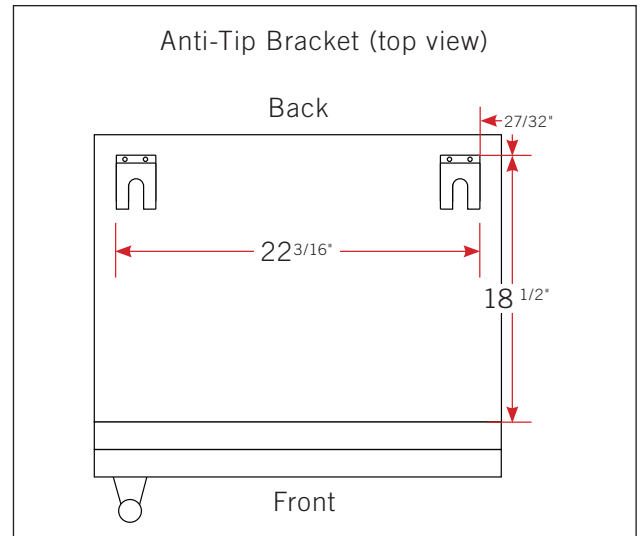


FIG. 1. Top plan view of anti-tip bracket positioning.



FIG. 2. Securely fasten the anti-tip brackets to the floor.

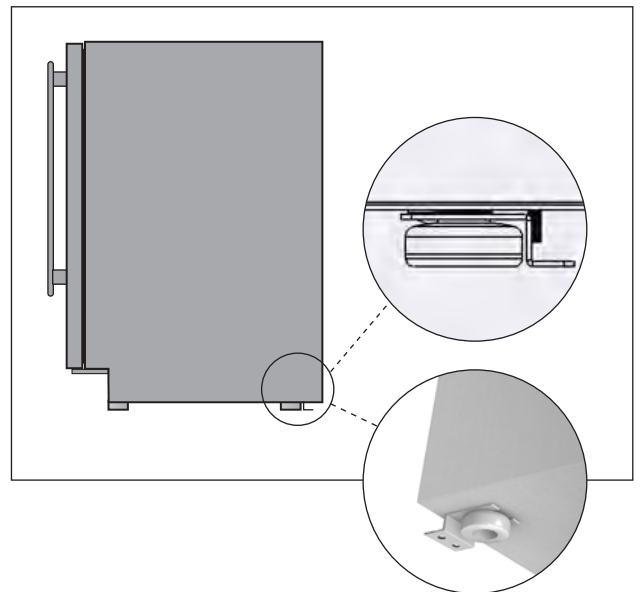


FIG. 3. Be sure the rear leveling legs slide into the brackets.

- With a 1/8" drill bit, drill pilot holes at the marked locations.

NOTE: BE SURE TO USE A DRILL BIT APPROPRIATE FOR YOUR FLOORING MATERIAL.

- With the appropriate provided hardware, install the anti-tip brackets. See fig. 2.

NOTE: THE CONCRETE SCREWS ARE BLUE.

- Carefully position the unit in its final installation location. Be sure the rear leveling legs slide into the anti-tip brackets. See fig. 3.

NOTE: DO NOT LIFT THE CABINET BY THE COUNTERTOPS, DOORS, DRAWERS, OR GRILLS.

LEVELING LEGS

Standard leveling legs are provided to assist with leveling the cabinet.

With access to the bottom of the cabinet, turn the leveling legs to adjust the level as needed. See figs. 1 and 2.

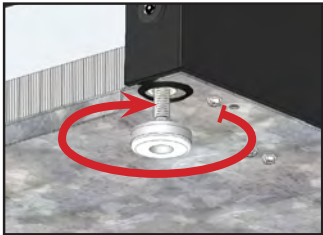


FIG. 1. Turn the leveling legs clockwise to lower the unit.



FIG. 2. Turn the leveling legs counterclockwise to raise the unit.



3" LEVELING LEGS (OPTIONAL ACCESSORY)

Adjustable legs will provide 2-1/2" (64 mm) of clearance under the cabinet, raising the total height of the unit to 34-1/2" (877 mm). If so desired, you can order a taller grill that will hide the gap caused by the taller leveling legs. Please contact our parts department at **844-849-6226** or **TrueResidentialParts@TrueMfg.com**.

- Access the bottom of the cabinet.
- Remove the existing standard leveling legs. See fig. 3.
- Thread the new leveling legs into the bottom of the cabinet. See fig. 4.
- Verify the level of the cabinet. If the cabinet is not level, gently lift and support the low end of the cabinet. Then, adjust the bottom stem of the leveling leg to level and support the cabinet. See fig. 5.

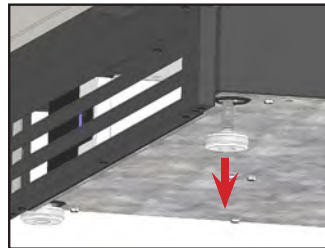


FIG. 3. Remove the existing leveling legs.

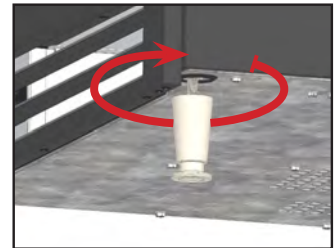


FIG. 4. Screw in the leveling legs.




FIG. 5. Turn the bottom stem to level the cabinet.

LEVELING

Proper leveling of your TRUE unit is critical to operating success. Leveling impacts effective condensate removal and door operation.

With the cabinet in the final installation location, level the unit front-to-back and side-to-side.

1. Position the level on the inside floor of the unit near the doors (the level should be parallel to cabinet front). Level the cabinet.
2. Position the level at the inside rear of the cabinet (again, the level should be placed parallel to cabinet back). Level the cabinet.
3. Perform procedures similar to steps 1 and 2 by placing the level on the inside floor (left and right side, parallel to the depth of the cooler). Level the cabinet.

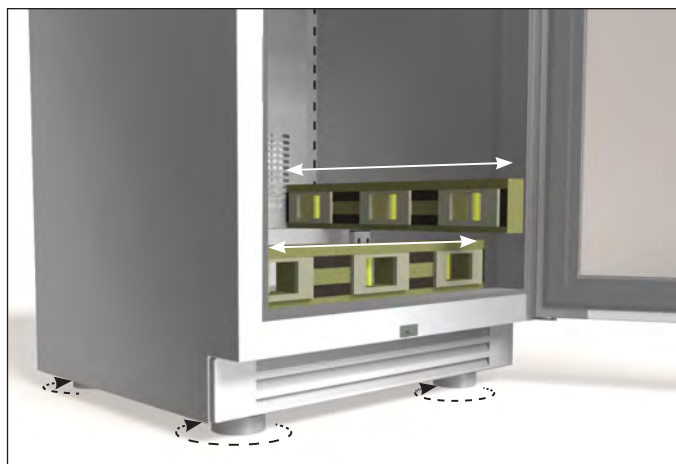

KICKPLATE INSTALLATION

1. Locate the kickplate secured to the back of the unit.
2. Position the kick plate below the door. See fig. 1.
3. Verify the kickplate correctly aligned. Adjust as needed.



FIG. 1. Attach the kickplate to the magnets below the door.

SHELF INSTALLATION

90° DOORSTOP INSTALLATION



PRESERVE THE MOMENT®

SHELF INSTALLATION

1. Hook the shelf clips into the shelf standards.
See fig. 1.

2. Push up on the bottom of the clip. See fig. 2.

NOTE: YOU MAY NEED TO SQUEEZE OR TWIST THE BOTTOM OF THE SHELF CLIP FOR PROPER INSTALLATION. POSITION ALL FOUR SHELF CLIPS EQUAL IN DISTANCE FROM THE FLOOR FOR FLAT SHELVES.

3. Ensure the shelf clip is not loose or able to wiggle out of the shelf standard. See figs. 3 and 4.

4. Place the shelves on the shelf clips with the cross support bars facing down.

NOTE: BE SURE ALL SHELF CORNERS ARE PROPERLY SEATED.

INSTALLATION TIPS

- Install all the shelf clips before installing any shelves.
- Start at the bottom shelf and work your way up.
- Always lay the back of each shelf down on the rear clips before the front.

WARNING – DO NOT USE PLIERS OR ANY CRIMPING TOOLS WHEN INSTALLING SHELF CLIPS. ALTERING SHELF CLIPS IN ANY WAY CAN LEAD TO SHELVING INSTABILITY.



FIG. 1. Installing top tab of shelf clip.




FIG. 2. The bottom tab of the shelf clip will fit tightly



FIG. 3. You may need to squeeze or twist the bottom of the shelf clip to install.





FIG. 4. Installed shelf clip.

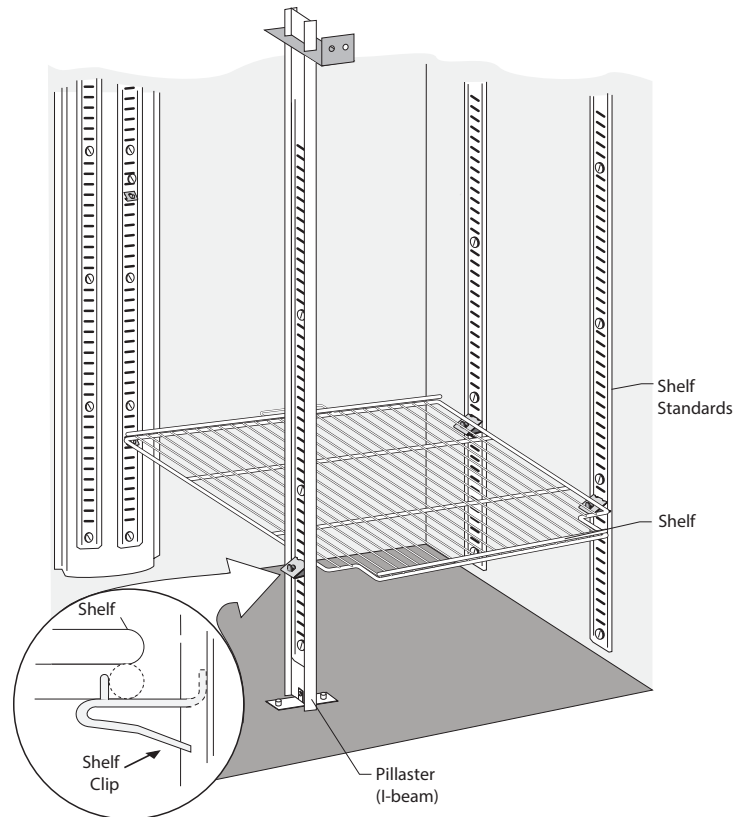

90° DOORSTOP INSTALLATION (OPTIONAL ACCESSORY)

The doorstop will restrict the door from opening past approximately 90° to prevent damage to surrounding cabinets.

NOTE: BE SURE TO PUT A DOORSTOP PIN IN EACH HINGE.

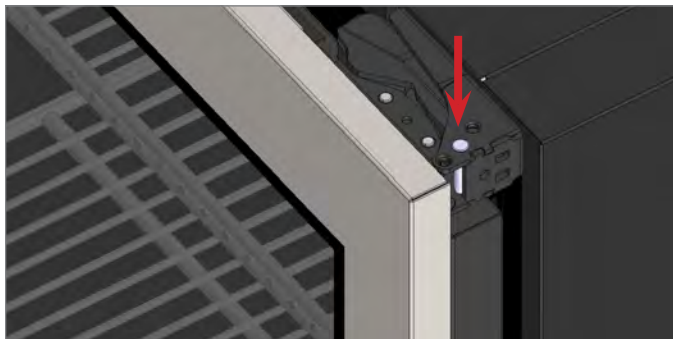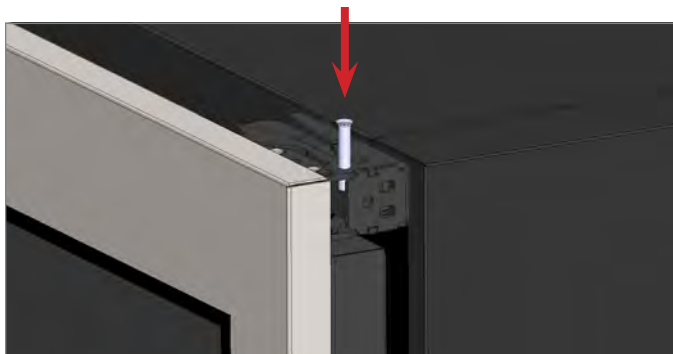

CABINET COMPONENTS / ELECTRONIC CONTROL
AND LIGHT SWITCH LOCATION

ELECTRONIC CONTROL DISPLAY CODES

UNLOCK THE CONTROL

TURN OFF / ON CONTROL

CHANGE THE SET POINT

INITIATE MANUAL DEFROST

CHANGE DISPLAY READOUT



PRESERVE THE MOMENT®


REFRIGERATOR / FREEZER COMPONENTS



WINE CABINET COMPONENTS



REFRIGERATED DRAWERS

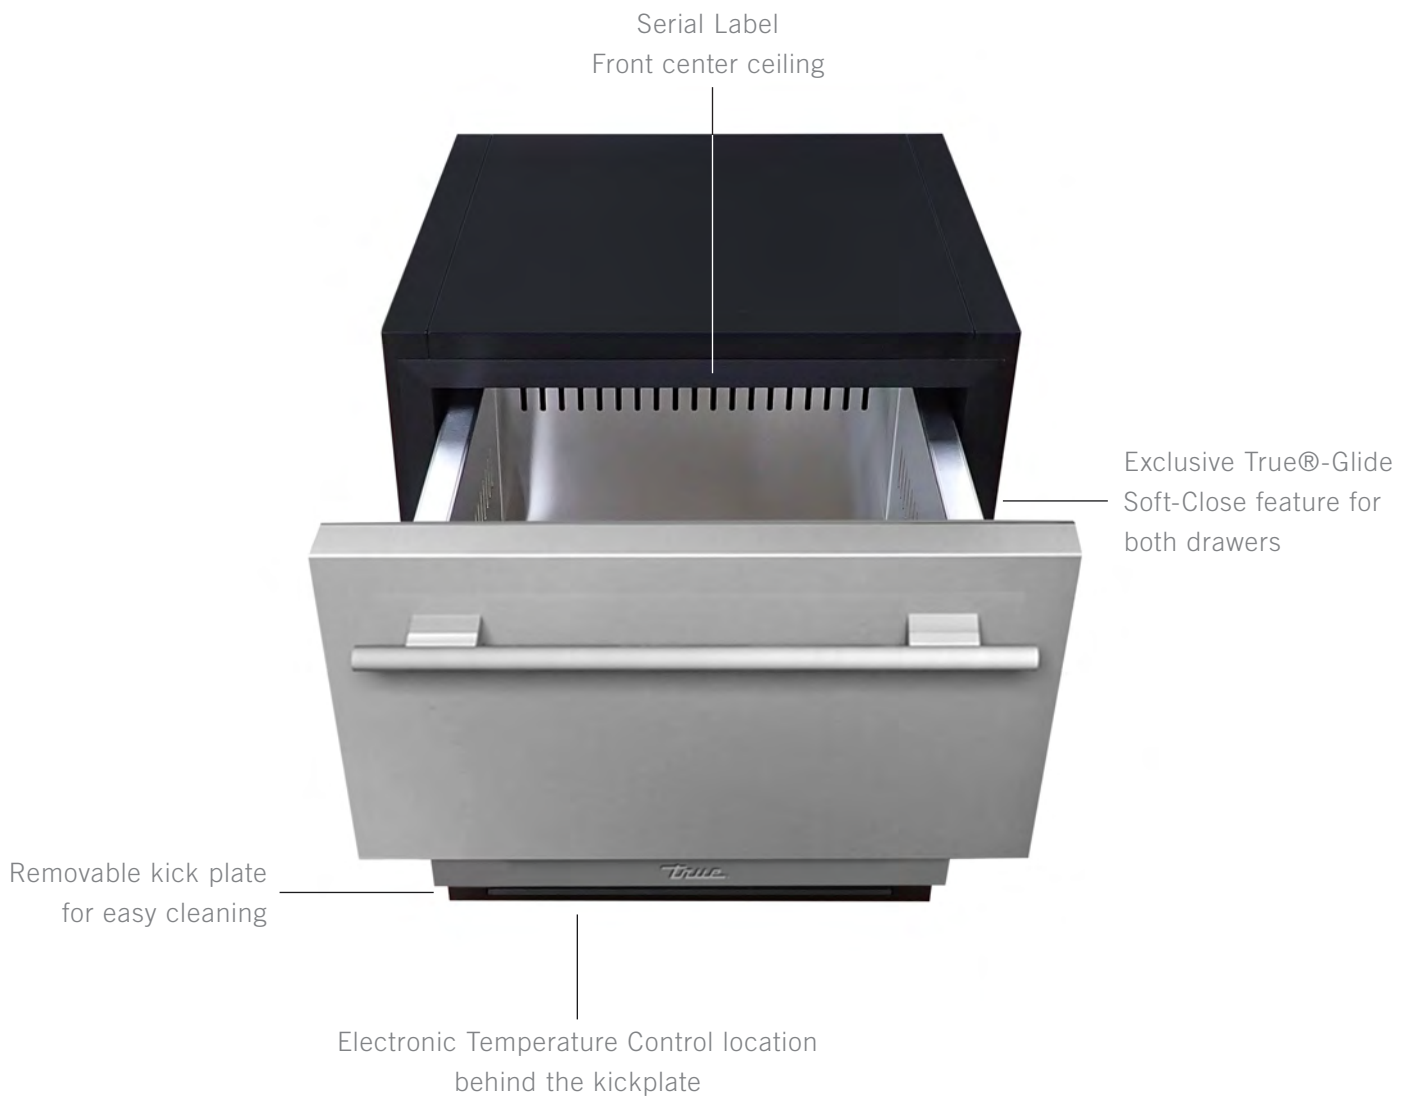

CABINET OPERATION

ELECTRONIC CONTROL OPERATION

ELECTRONIC CONTROL LEGEND


Defrost / Back /
Show °F or °C


Power /
Okay




Set Point /
Up Arrow


Set Point /
Down Arrow

 Compressor Running

 Evaporator Fan Running

 Cabinet in Defrost

 Alarm

ELECTRONIC DISPLAY CODES

Display	Definition	Display	Definition
E1	Sensor 1 Defect	ULo	Low Supply Voltage
E2	Sensor 2 Defect	UH _i	High Supply Voltage
E4	Compressor Fault	H _i	High Temperature Alarm
E5	Heater Fault	Lo	Low Temperature Alarm
E6	Pot Fault	E13	Communication Error

ELECTRONIC CONTROL OPERATION

ELECTRONIC CONTROL LEGEND

 Defrost / Back / Show °F or °C

 Power / Okay



 Set Point / Up Arrow

 Set Point / Down Arrow

 Compressor Running

 Evaporator Fan Running

 Cabinet in Defrost

 Alarm

UNLOCK THE CONTROL

The display will not lock unless it was originally locked.

1. Press any button to display the current lock status.



2. If the display shows **unL**, the control is unlocked. If the display shows **Loc**, press and hold the back button  and the up arrow  until the display shows **unL**.



NOTE: THE CONTROL WILL LOCK AFTER 60 SECONDS OF INACTIVITY.

TURN OFF / ON THE CONTROL

Turning off the control will deactivate all electrical components.



CAUTION – Turning off the control will not shut off power to the cabinet. Be sure to remove power to the cabinet prior to servicing.

ATTENTION – La désactivation de la commande ne coupe pas l'alimentation de l'armoire. Assurez-vous de couper l'alimentation de l'armoire avant toute intervention.

TURN OFF

Press and hold the power  button until the display shows **off**. The display will then turn blank with a decimal point.




ELECTRONIC CONTROL OPERATION

ELECTRONIC CONTROL LEGEND

**TURN ON**

Press and hold the power button until the display shows **on**. The display will then show the current cabinet temperature.

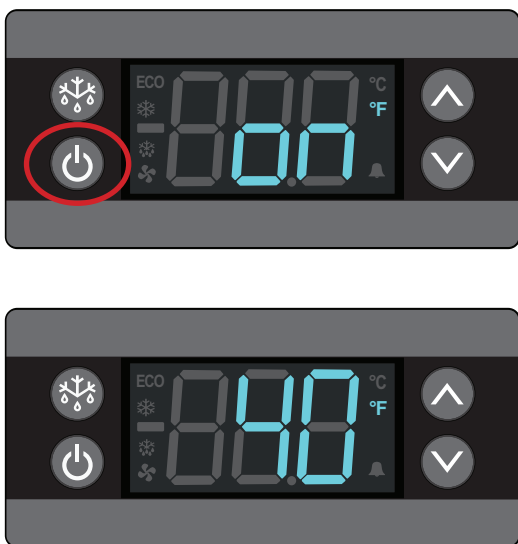**CHANGE THE SET POINT**

Changing the set point adjusts the cabinet temperature to keep optimal product temperature.

1. Press the up  or down  arrow to show the current setting.



2. Press the arrow buttons to change the set point to the desired temperature.



3. Leave the display inactive until it shows the current cabinet temperature.



ELECTRONIC CONTROL OPERATION

ELECTRONIC CONTROL LEGEND

 Defrost / Back / Show °F or °C	 Power / Okay		 Set Point / Up Arrow	 Set Point / Down Arrow	 Compressor Running  Evaporator Fan Running  Cabinet in Defrost  Alarm
--	--	---	--	--	---

INITIATE MANUAL DEFROST

A manual defrost clears accumulated frost and ice from the evaporator coil. The defrost will only terminate when a specific preset temperature or duration has been met.

Press and hold the defrost button  until the display shows **DEF**.



CHANGE DISPLAY READOUT

The display can show the temperature in either Fahrenheit or Celsius.

Press the back button  to change the system of measure.



CONDENSER COIL CLEANING

CONDENSATION

STAINLESS STEEL EQUIPMENT CARE & CLEANING



PRESERVE THE MOMENT®

MAINTENANCE, CARE & CLEANING

CAUTION – TAKE CARE DURING OPERATION, MAINTENANCE, OR REPAIRS TO AVOID CUTS OR PINCHING FROM ANY CABINET PART/ COMPONENT.

ATTENTION – LORS DE L'UTILISATION, DE L'ENTRETIEN OU DES RÉPARATIONS, IL FAUT PRENDRE SOIN D'ÉVITER LES COUPURES ET LES PINCEMENTS POUVANT SURVENIR AU CONTACT DES PIÈCES OU DES COMPOSANTES DE L'ARMOIRE.

CONDENSER COIL CLEANING

Keeping the condenser coil clean minimizes required servicing and lowers electrical cost. Warranty does not cover cleaning the condenser coil.



WARNING – Electrical shock or burn hazard. Unplug the unit or turn off the power supply before proceeding. **DO NOT**

clean appliance with a pressure washer or hose.

ATTENTION – Risque d'électrocution ou de brûlure. Débranchez l'appareil ou coupez l'alimentation électrique avant de continuer. Ne nettoyez pas l'appareil avec un nettoyeur haute pression ou un tuyau.



CAUTION – Risk of eye injury from debris. Eye protection is recommended.

ATTENTION – Les ailettes sont coupantes. Soyez prudent pour éviter les lésions oculaires. Une protection des yeux est recommandée.



CAUTION – Coil fins are sharp. Gloves are recommended.

ATTENTION – Les ailettes de la bobine sont tranchantes. Les gants sont recommandés.

REQUIRED TOOLS

- Gloves
- Eye Protection
- Stiff Bristle Brush
- Vacuum Cleaner
- Flashlight
- Tank of Compressed Air

CLEANING STEPS

1. Remove the kickplate. See fig. 1.
2. With a stiff bristle brush, carefully clean accumulated dirt from the front coil fins.
3. With the dirt removed from the surface of the coil, use a flashlight to verify you can see through the coil and observe the condenser fan blade spinning. See fig. 3.
4. If the view is clear, reinstall the kickplate, restore power, and verify correct operation.
5. If the view is not clear, gently blow compressed air or CO₂ through the coil until it is clean.
6. Carefully vacuum any dirt around the condensing unit area.
7. Reinstall the kickplate, restore power, and verify correct operation.



FIG. 1. Pull the kickplate off the magnets.



FIG. 2. Never brush across the coil fins.



FIG. 3. Verify all blockages have been removed.

IMPORTANT WARRANTY INFORMATION

THE CLEANING OF THE CONDENSER IS NOT COVERED BY WARRANTY!

If you have any questions, please contact your local TRUE Manufacturing Service Department. See contact information on page 48.

- Condenser coils accumulate dirt and require cleaning every 30 days or as needed.
- A dirty condenser coil can result in non-warranted repairs and/or cabinet failure.
- Proper cleaning involves removing dust from the condenser by using a soft brush, vacuuming the condenser with a shop vac, or using CO₂, nitrogen or pressurized air.
- Do not place any filter material in front of the condensing coil.
- On most units, the condenser is accessible by removing the cabinet's outer grill cover.
- If you cannot remove the dirt adequately, please contact your licensed refrigeration service provider.

CONDENSATION

Excessive condensation can be caused by leaving the door/drawer open for long periods of time or running the cabinet with little to no product inside.

STAINLESS STEEL EQUIPMENT CARE AND CLEANING

CAUTION: DO NOT USE ANY STEEL WOOL, ABRASIVE OR CHLORINE BASED PRODUCTS TO CLEAN STAINLESS STEEL SURFACES.

STAINLESS STEEL OPPONENTS

There are three basic things which can break down your stainless steel's passivity layer and allow corrosion to rear its ugly head.

1. Scratches from wire brushes, scrapers, and steel pads are just a few examples of items that can be abrasive to stainless steel's surface.
2. Deposits left on your stainless steel can leave spots. You may have hard or soft water depending on what part of the country you live in. Hard water can leave spots. Hard water that is heated can leave deposits if left to sit too long. These deposits can cause the passive layer to break down and rust your stainless steel. All deposits left from food prep or service should be removed as soon as possible.
3. Chlorides are present in table salt, food, and water. Household and industrial cleaners are the worst type of chlorides to use.

STAINLESS STEEL CLEANING AND RESTORATION

Do not use stainless steel cleaners or similar solvents to clean plastic or powder-coated parts. Instead, use warm soapy water.

- For routine cleaning and removal of grease and oil, apply white vinegar, ammonia, or any good commercial detergent* with a soft cloth or sponge.
- Stainless steel polish (i.e., Zep® Stainless Steel Polish, Weiman® Stainless Steel Cleaner & Polish, Nyco® Stainless Steel Cleaner & Polish, or Ecolab® Ecoshine®) and olive oil can act as a barrier against fingerprints and smears.
- Degreasers* (i.e., Easy-Off® Specialty Kitchen Degreaser or Simple Green® Industrial Cleaner & Degreaser) are excellent for removal of grease, fatty acids, blood and burnt-on foods on all surfaces.
- For restoration/passivation or removing stubborn stains and discoloration, Brillo® Cameo®, Zud® Cleanser, Ecolab® Specifax™ First Impression® Metal Polish, Sheila Shine, or talc can be applied by rubbing in the direction of the polish lines.

*Do not use detergents or degreasers with chlorides or phosphates.

NOTE: THE USE OF PROPRIETARY NAMES IS INTENDED FOR EXAMPLE ONLY AND DOES NOT CONSTITUTE OR IMPLY AN ENDORSEMENT. OMISSION OF PROPRIETARY CLEANSERS FROM THIS LIST DOES NOT IMPLY INADEQUACY.

STAINLESS STEEL EQUIPMENT CARE AND CLEANING

8 TIPS TO HELP PREVENT RUST ON STAINLESS STEEL

1. **Maintain the Cleanliness of Your Equipment** – Avoid build-up of hard stains by cleaning frequently. Use cleaners at the recommended strength (alkaline chlorinated or non-chloride).
2. **Use the Correct Cleaning Tools** – Use non-abrasive tools when cleaning your stainless steel products. The stainless steel's passive layer will not be harmed by soft cloths and plastic scouring pads.
3. **Clean Along Polishing Lines** – Polishing lines ("grain") are visible on some stainless steels. Always scrub parallel to polishing lines when visible. Use a plastic scouring pad or soft cloth when you cannot see the grain.
4. **Use Alkaline, Alkaline-Chlorinated or Non-Chloride Cleaners** – While many traditional cleaners are loaded with chlorides, the industry is providing an ever increasing choice of non-chloride cleaners. If you are not sure of your cleaner's chloride content, contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask if they have an alternative. Avoid cleaners containing quaternary salts, as they can attack stainless steel, causing pitting and rusting.
5. **Rinse** – When using chlorinated cleaners, you must rinse and wipe dry immediately. It is better to wipe standing cleaning agents and water as soon as possible. Allow the stainless steel equipment to air dry. Oxygen helps maintain the passivity film on stainless steel.
6. **Never Use Hydrochloric Acid (Muriatic Acid) on Stainless Steel** – Even diluted, hydrochloric acid can cause corrosion, pitting and stress corrosion cracking of stainless steel.
7. **Water Treatment** – To reduce deposits, soften hard water when possible. Installation of certain filters can remove corrosive and distasteful elements. Salts in a properly maintained water softener can also be to your advantage. Contact a treatment specialist if you are not sure of the proper water treatment.
8. **Regularly Restore & Passivate Stainless Steel** – Stainless steel gets its stainless properties from the protective chromium oxides on its surface. If these oxides are removed by scouring, or by reaction with harmful chemicals, then the iron in the steel is exposed and can begin to oxidize, or rust. Passivation is a chemical process that removes free iron and other contaminants from the surface of stainless steel, allowing the protective chromium oxides to re-form.

SERVICING & REPLACING COMPONENTS

REVERSING DOOR

FREQUENTLY ASKED QUESTIONS

CONTACT US

WARRANTY



PRESERVE THE MOMENT®

SERVICING & REPLACING COMPONENTS

NOTE: ANY CABINET ADJUSTMENTS ARE TO BE MADE AFTER THE CABINET HAS BEEN VERIFIED LEVEL AND PROPERLY SUPPORTED.

- Replace component parts with OEM (original equipment manufacturer) components.
- Contact the dealer or our parts department at **844-849-6179** or **TrueResidentialParts@truemfg.com** for replacement parts.
- Have a licensed service provider service your unit to minimize the risk of possible ignition due to incorrect parts or improper service and to ensure the operator's health and safety.
- Unplug the refrigerator/freezer before cleaning or making any repairs. Setting temperature controls to the 0 position or powering off an electronic control may not remove power from all components (e.g., light circuits, perimeter heaters, and evaporator fans).

REVERSING DOOR

REQUIRED TOOLS

- 1/8" Hex Head Allen Wrench
- Drill (Optional)

1. Loosen the hinge bolts and remove the door
See fig. 1.

NOTE: DO NOT REMOVE THE HINGES FROM THE DOOR.

2. Move the remaining hardware to the opposite corners. See fig. 2.

**NOTE: THE DOOR LOCK POSITION IS DIFFERENT FOR EACH SIDE.
LEFT-HINGED: BOTTOM RIGHT CORNER;
RIGHT-HINGED: UPPER LEFT CORNER.**

3. Rotate the door 180° and secure it to the cabinet.
See figs. 3 and 4.
4. Verify the door closes correctly and the gasket seals without gaps.

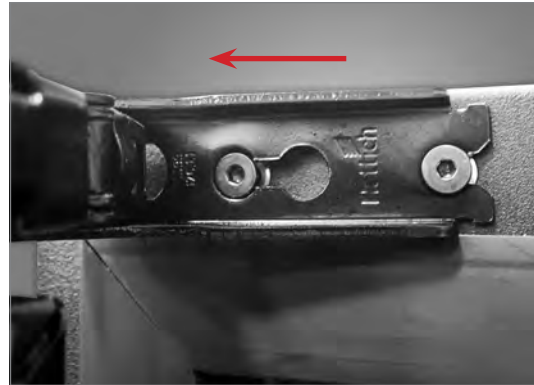


FIG. 1. Do not remove the hinge bolts.



FIG. 2. Be sure to move the hardware to the opposite corners.



FIG. 3. Rotate the door 180° and install.



FIG. 4. Completed installation.

FREQUENTLY ASKED QUESTIONS

UNDERCOUNTER

How do I adjust the temperature?

Please see "Change the Set Point" (page 33).

Why does the evaporator fan motor constantly run?

This is normal. The evaporator fan motor runs continuously to ensure even temperature throughout your cabinet. The fan only stops when the door is opened to prevent warm air from being circulated throughout the cabinet.

Why isn't my unit cooling correctly?

Check for any obstructions to the condenser coil (located behind the kickplate). Confirm the area around the condenser coil is clean.

How do I adjust or remove shelving?


Please see "Shelf Installation" (page 24).

Why is there warm air coming from the bottom/front of the unit at the kickplate?

This is normal. The heat from the compressor is blown out through the kickplate.

Why is there condensation forming on the inside/outside of the unit?

Condensation can form when the door is left open for a long period of time or the unit runs with little to no product inside. Moisture can also form on applications installed side-by-side or on sides with 0" clearance; to prevent this, leave at least a 5/8" (1.58 cm) gap between the cabinets, or install foam pads between the cabinets and on any side with 0" clearance. To order foam pads, contact our parts department at **844-849-6226** or **TrueResidentialParts@TrueMfg.com**.

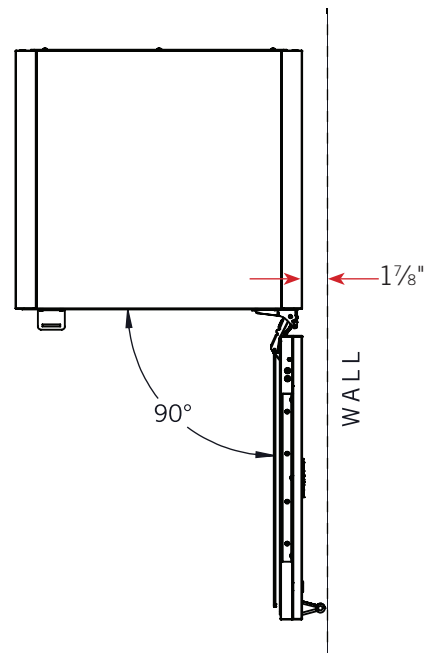How much clearance is needed to have the hinges next to the wall and still allow the door to open 90°?

FREQUENTLY ASKED QUESTIONS

Can I put units flush against each other without spacing?

In areas with typical climate-controlled temperature/humidity, yes, True cabinets can be installed side-by-side without spacing. However, in humid, non-climate controlled areas, be sure to leave at least a 5/8" (1.58 cm) gap between the cabinets, or install foam pads between the cabinets and on any side with 0" clearance, to prevent moisture from developing. To order foam pads, contact our parts department at **844-849-6226** or **TrueResidentialParts@TrueMfg.com**.

Does True sell wooden overlay doors?

No, True does not. For wooden overlay doors, reach out to a cabinetmaker and provide the overlay template available in our document library: <http://www.true-residential.com/support/document-library>.

Do True units have zero clearance hinges?

Yes, the unit can be installed flush with adjoining cabinetry and still open fully.

What is the decibel rating of the units?

42-47 dB.

I don't see a service company in my area.**Who can I call?**

Please contact True Residential Service at **888-616-8783** or **info@true-residential.com** for assistance finding an appropriate service provided.

Does my unit have to be covered outdoors?

It is recommended that units are installed in a covered application. All True undercounter units are UL rated for outdoor use. If left exposed to the elements throughout the winter, a cover will help preserve the life and beauty of your True unit. Please see "Outdoor Use" (page 12) for more detail.

What should I do in the winter? Do I have to bring the unit inside? How cold can the weather get before it's a problem?

When the temperature consistently reaches 32°F (0°C), remove all product from the unit and unplug or turn the unit off. If the unit is exposed to the elements, covering the unit extends its life and beauty.

WINE CABINET**Can I store magnum bottles?**


Yes, up to five magnums can fit on the floor rack.

Can I store Pinot/Bordeaux/Riesling bottles?

Yes, nearly all bottle varieties fit in your True Wine Cabinet.

CONTACT US

Please have your **model number** and **seven-digit serial number** ready so we can better assist you with your service- or parts-related inquiries. **This information is located on the serial label.**

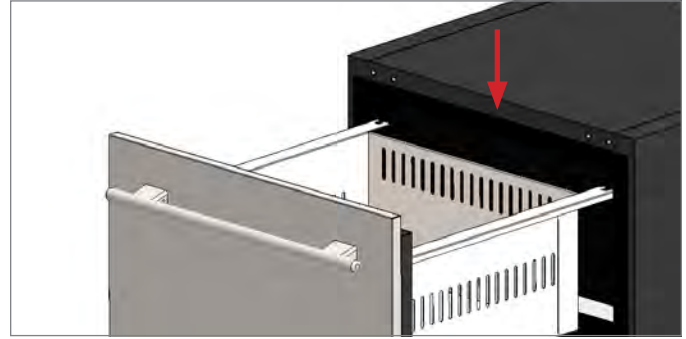

Customer Service

Phone: 888-616-8783

True-Residential.com

Warranty Department

Phone: 844-849-6179

TrueResidentialWarranty@truemfg.com

Service Department

Phone: 844-746-9423

TrueResidentialService@truemfg.com

TRUE RESIDENTIAL® SERIES LIMITED WARRANTY STATEMENT

LIMITED 30 DAY COSMETIC WARRANTY

Stainless steel doors, handles, and shelves are warranted to be free from defective materials or workmanship for a period of thirty (30) days from the date of original retail purchase. Any defects must be reported to the selling dealer within thirty (30) days from the date of original retail purchase. This limited warranty excludes any type of freight / concealed damage.

TWO-YEAR PARTS & LABOR WARRANTY (*For units purchased after Feb. 1, 2013)

TRUE warrants to the original purchaser of every new TRUE refrigerated unit, the cabinet and all parts thereof, to be free from defects in material or workmanship under normal and proper use and maintenance as specified by TRUE and upon proper installation and start-up in accordance with the instruction packet supplied with each TRUE unit. TRUE's obligation under this warranty is limited to a period of three (3) years from the date of original installation or thirty nine (39) months after shipment date from TRUE, whichever occurs first. Contact the factory regarding warranty for installations in a commercial/light commercial application.

FIVE-YEAR SEALED SYSTEM WARRANTY – PARTS & LABOR (*For units purchased after Feb. 1, 2013)

TRUE warrants its hermetically sealed system: compressor, evaporator coil, condenser coil, drier, metering device and connecting tubing to be free from defects in both material and workmanship under normal and proper use and maintenance service for a period of six (6) years from the date of original installation but not to exceed six (6) years and three (3) months after shipment from the manufacturer, whichever occurs first.

TERMS APPLICABLE TO EACH WARRANTY

Any part covered under the above warranties that is determined by TRUE to have been defective within the time frame is limited to the repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include standard straight time labor charges only and reasonable travel time, as determined by TRUE.

WARRANTY CLAIMS

All claims for labor or parts must be made directly through TRUE. All claims should include: model number and serial number of cabinet, proof of purchase, and date of installation. In case of warranted compressor, the compressor model tag must be returned to TRUE along with the above listed information.

WHAT IS NOT COVERED BY THIS WARRANTY

TRUE's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES

TRUE is not responsible for economic loss, profit loss; or special, indirect or consequential damages, including without limitation, losses or damages arising from food or product spoilage claims whether or not on account of refrigeration failure.

WARRANTY IS NOT TRANSFERABLE

This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, express or implied, including any warranty or merchantability or fitness for a particular purpose.

IMPROPER USAGE

TRUE assumes no liability for parts or labor coverage for component failure or other damages resulting from improper usage or installation or failure to clean and/or maintain product as set forth in the warranty packet provided with the unit.

ALTERATION OR NEGLECT

TRUE is not responsible for the repair or replacement of any parts that TRUE determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or act of God.

IMPROPER ELECTRICAL CONNECTIONS

TRUE is not responsible for the repair or replacement of failed or damaged components resulting from electrical power failure, high or low voltage, use of extension cords, or improper grounding of the unit.

YOUR RIGHTS UNDER STATE LAW

This warranty gives you specific legal rights and you may have other rights that vary from state to state. Some states do not allow the exclusion or limitation of consequential damages or a limitation on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you.

ENVIRONMENTAL ATTRIBUTES

Any and all environmental attributes, including environmental offset credit rights, with respect to TRUE® refrigeration units manufactured after September 1, 2015, shall remain the property of True Manufacturing Co., Inc. and are not transferred.

OUTSIDE U.S./CANADA

This warranty does not apply to, and TRUE is not responsible for, any warranty claims made on products sold or used outside the United States or Canada.

SUBMIT WARRANTY CLAIMS TO: True Residential
2001 East Terra Lane
O'Fallon MO 63366
TrueResidentialWarranty@truemfg.com

BP_12.2020_161112

GARANTIE LIMITÉE DE 30 JOURS POUR PROBLÈMES COSMÉTIQUES

Les portes et poignées en acier inoxydable sont garanties être exemptes de défaut de matériau et de main-d'œuvre pour une durée de trente (30) jours à compter de la date d'achat au détail d'origine. Tout défaut doit être signalé au revendeur dans les trente (30) jours suivant la date d'achat au détail d'origine. Cette garantie limitée exclut tout type de dommage caché ou de transport.

GARANTIE DE DEUX ANS PIÈCES ET MAIN-D'ŒUVRE (* Pour les unités achetées après le 1er février 2013)

TRUE garantit à l'acheteur original de chaque nouvelle unité de réfrigération TRUE, l'armoire et toutes les parties de celle-ci, contre toute défectuosité de matériel ou de fabrication, selon des conditions d'utilisation normale et correcte et un service d'entretien, comme spécifié par TRUE, ainsi qu'une installation correcte et un démarrage en conformité avec le paquet d'instructions fourni avec chaque appareil TRUE. L'obligation de TRUE dans le cadre de cette garantie est limitée à une période de trois (3) ans à compter de la date d'installation d'origine ou trente-neuf (39) mois à compter de la date d'expédition du fabricant TRUE, la première des dates à survenir prévalant. Contactez l'usine pour les garanties d'installations de type commercial ou légèrement commercial.

GARANTIE DE CINQ ANS POUR L'ÉTANCHÉITÉ DU SYSTÈME - PIÈCES ET MAIN-D'ŒUVRE (* Pour les unités achetées après le 1er février 2013)

TRUE garantit que son système est hermétique (compresseur, serpentin d'évaporateur, serpentin de condenseur, déshydrateur, dispositif de comptage et tuyauterie de raccordement) et exempt de défaut de matériau et de main-d'œuvre dans des conditions d'utilisation normale et correcte et avec un service d'entretien approprié, et ce pour une période de six (6) ans à compter de la date d'installation d'origine, mais ne dépassant pas six (6) ans et (3) mois après l'expédition du fabricant, la première des dates à survenir prévalant.

CONDITIONS APPLICABLES À CHAQUE GARANTIE

Toute pièce couverte par les garanties ci-dessus et qui est considérée par TRUE comme défectueuse dans les délais prescrit peut être réparée ou remplacée, y compris les frais de main-d'œuvre, des pièces ou sous-ensembles défectueux. La garantie de la main d'œuvre inclut le travail à taux normal seulement et le temps de déplacement raisonnable, déterminé selon le fabricant TRUE.

RÉCLAMATION(S) SUR LA GARANTIE

Toute réclamation de la main-d'œuvre ou des pièces doivent se faire directement par le fabricant TRUE. Toutes les demandes doivent inclure : le numéro de modèle et le numéro de série de la machine à glaçons, la preuve d'achat et la date d'installation. Dans le cas d'une réclamation sur la garantie du compresseur, l'étiquette de modèle du compresseur doit être retournée chez TRUE avec les informations ci-dessus énumérées.

CE QUI N'EST PAS COUVERT SOUS LA GARANTIE

La seule obligation de TRUE en vertu de cette garantie se limite à la réparation ou au remplacement des pièces, sous réserve des limitations supplémentaires ci-dessous. Cette garantie n'assume ni n'autorise aucune personne à assumer des obligations autres que celles qui sont expressément couvertes sous cette garantie.

AUCUN DOMMAGES CONSÉCUTIFS

TRUE n'est pas responsable des pertes économiques, des pertes de bénéfices ou des dommages spéciaux, indirects ou consécutifs, y compris, mais sans s'y limiter, les pertes ou dommages résultant de réclamations pour détérioration de denrées alimentaires ou de produits, qu'elles soient dues ou non à un défaut de réfrigération.

LA GARANTIE N'EST PAS TRANSFÉRABLE

Cette garantie n'est pas transférable et s'applique uniquement en faveur de l'acheteur/utilisateur initial auquel l'unité est livrée. Toute cession ou tout transfert annule les garanties des présentes ainsi que toutes les garanties explicites ou implicites, y compris toute garantie de valeur marchande ou d'adéquation à un usage particulier.

L'USAGE ABUSIF

TRUE n'assume aucune responsabilité pour la couverture de pièces ou de main-d'œuvre en cas de panne de composant ou autres dommages résultant d'un usage abusif, d'une installation incorrecte ou d'un défaut de nettoyage ou d'entretien du produit selon les conditions du manuel d'utilisation fourni avec l'appareil.

MODIFICATION OU NÉGLIGENCE

TRUE n'est pas responsable pour la réparation ou le remplacement des pièces qui sont déterminées par TRUE, d'avoir été soumis, après la date de fabrication, à une altération, négligence, abus, usure impropre, accident, dommages lors du transport ou de l'installation, incendie, inondation ou un acte de Dieu.

MAUVAIS RACCORDEMENT ÉLECTRIQUE

TRUE n'est pas responsable de la réparation ni du remplacement des composants en panne ou endommagés à la suite d'une panne d'alimentation électrique, de tension trop haute ou trop basse, d'utilisation de rallonges ou de mise à la terre incorrecte de l'appareil.

VOS DROITS SELON LA LÉGISLATION APPLICABLE

Cette garantie vous accorde des droits juridiques particuliers et vous pouvez disposer d'autres droits selon l'état où vous vous trouvez. Certains états ou pays n'autorisent pas l'exclusion ou la limitation des dommages indirects ou une limitation de durée sur une garantie implicite ; il est donc possible que les présentes exclusions ou limitations ne s'appliquent pas à vous.

CARACTÉRISTIQUES ENVIRONNEMENTALES

Toutes les caractéristiques environnementales, y compris les droits aux crédits de compensation environnementale, concernant les appareils de réfrigération TRUE® fabriqués après le 1er septembre 2015 restent la propriété de True Manufacturing Co., Inc. et ne sont pas transférés.

EN DEHORS EN DEHORS DES ÉTATS-UNIS/CANADA

Cette garantie ne s'applique à aucune autre garantie portant sur les produits vendus ou utilisés en dehors des États-Unis ou du Canada, et TRUE n'assume aucune responsabilité.

ENVOYEZ LES RECOURS EN GARANTIE À : True Residential

2001 East Terra Lane
O'Fallon MO 63366
TrueResidentialWarranty@truemfg.com

BP_12.2020_161112

CONTACT US

true-residential.com

636.240.2400 | toll free 888.616.8783



825304