


BALLAD SCONCE

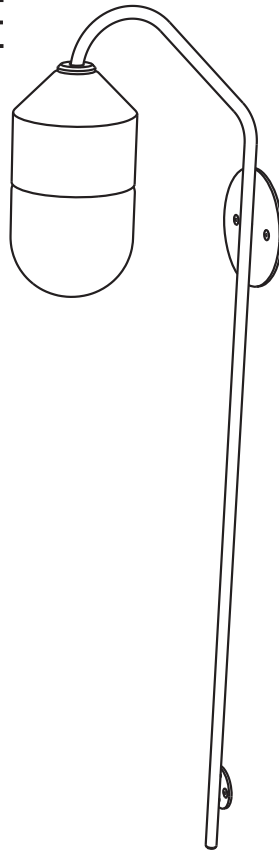

CAUTION

- It is strongly recommended that the hardwire installation of this product is done by a professional.
- Read these safety instructions entirely prior to installation.
- DO NOT BEGIN INSTALLATION UNTIL ALL ELECTRICAL POWER TO THE INSTALLATION SITE HAS BEEN TURNED OFF AT THE CIRCUIT BREAKER!

Recommended Tools

- Flat Head Scredriver
- Wire Strippers

This Product Includes

- A. Ballad Wall Sconce
- B. Drywall Anchors (x2)
- C. Mounting Screws (x4)
- D. Wire Nuts (x2)
- E.. Allen Wrench


B.



C.




A.

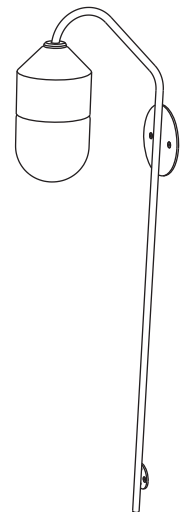

D.



E.



(hardware not to scale)

Installation Instructions

Cut power to circuit

- 1** Line up holes in backplate with junction box mounting holes, and mark the holes for the dry wall anchors through the mounting bracket.
- 2** Thread drywall anchors into wall.
- 3** Using the included wire nuts, twist together the wires from the sconce with their corresponding wires from the junction box. Tuck the excess wire up into the junction box.
- 4** Screw #8-32 mounting screws into j-box and drywall anchors.
- 5** Screw in LED lamp and attach glass shade with shade holder set screws.
- 6** Slide metal stamping down onto glass shade and thread bushing until the assembly is tight.
- 7** Return power to circuit and turn on light.

