


-Parts List-

Qty. 1 - #8 x 5/8" Pan Head Phil, screw, zinc

Qty. 1 - #8 x 2" Pan Head Phil, screw, zinc

Qty. 1 - Stainless Steel Braided Cable Tie

Qty. 2 - Steel Tip Bracket, zinc

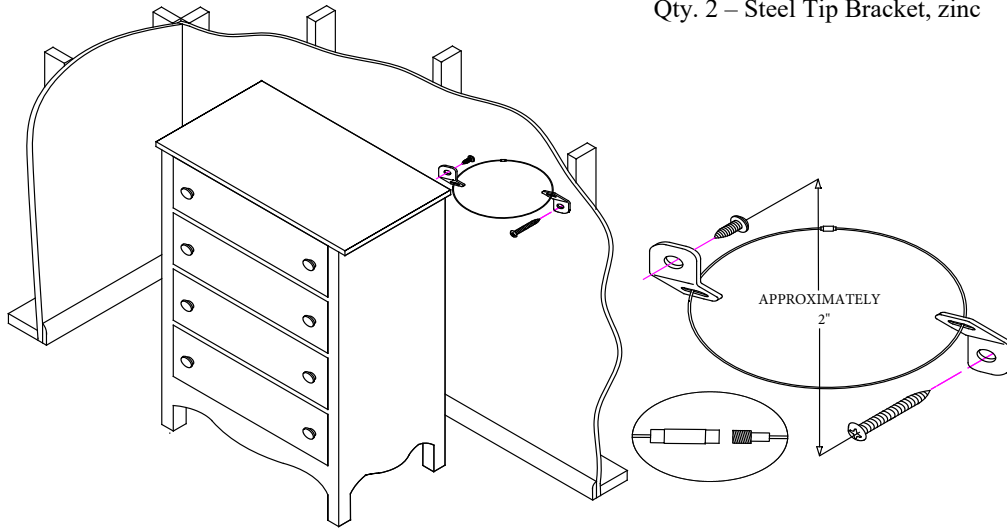

Installation Instructions:

This anti-tip device must be attached to a wall stud using the 2" screw enclosed.

1. Attach a bracket securely to the back top rail or back top edge of the furniture using the 5/8" screw provided, through the smaller hole in the bracket.
2. Locate the other bracket on the wall over a stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole in the bracket.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the threaded end of the restraint cable through the larger hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Confirm that
5. the cable is securely laced and locked.

Instrucciones de instalación:

Este dispositivo antivuelco contra volcado debe fijarse a un taco de pared con el tornillo de 2" que se incluye.

1. Coloque un soporte firmemente en la parte superior trasero o en el borde superior trasero del mueble, usando el tornillo de 5/8" que se proporciona y el agujero más pequeño del soporte.
2. Ubique el otro soporte en la pared, sobre un taco y 5 cm (2 pulg.) por debajo del soporte de montaje asegurado en la parte trasera de la unidad. Fije al taco de pared usando el tornillo de 2" que se incluye y el agujero más pequeño del soporte.
3. Coloque el mueble en su sitio, de modo que los dos soportes estén en una línea vertical. Encaje el
4. extremo roscado del cable de restricción a través del agujero mas grande en cada soporte de montaje. Una ambos extremos y gire la tuerca en el extremo roscado hasta que queda apretada.

5. Confirme que el cable este seguramente atado y asegurado.

Instructions d'installation:

Ce dispositif antibascullement doit être fixé au montant d'un mur à l'aide de la vis de 5 cm (2 po) fournie.

1. Fixer solidement un support à la traverse ou au rebord supérieure à l'arrière du meuble, en passant la vis de 1,6 cm (5/8 po) dans le plus petit trou du support.
2. Placer l'autre support sur un montant du mur, à environ 5 cm (2 po) plus bas, par rapport au premier support de fixation. Fixer ce support en passant la vis de 5 cm (2 po) fournie dans le plus petit trou du support.
3. Positionner le meuble afin d'aligner verticalement les deux supports de fixation.
4. Passer l'extrémité filetée du câble de retenue dans le grand trou de chaque support de montage. Rapprocher les deux extrémités et faites tourner l'écrou à oreilles sur l'extrémité filetée jusqu'à ce qu' il soit bien serré.
5. Vérifier que câble est solidement fixée et bloquée.

Anti-Tip Safety Hardware Installation Instructions

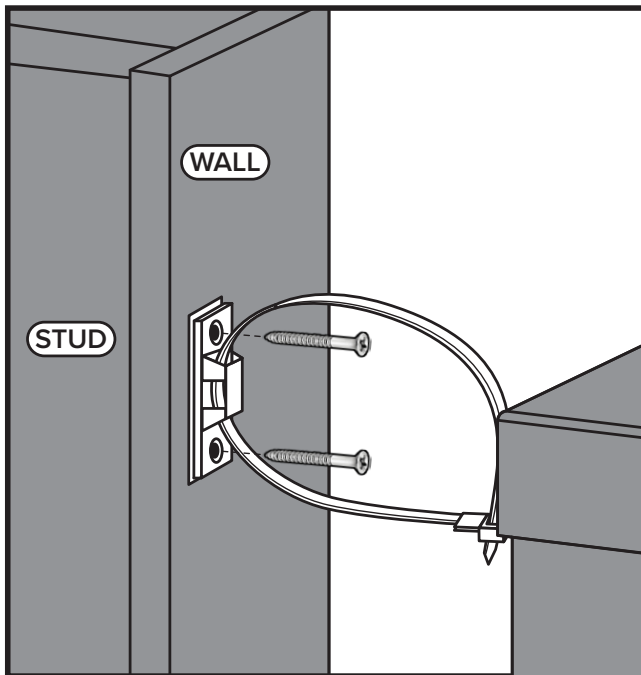


Figure 1

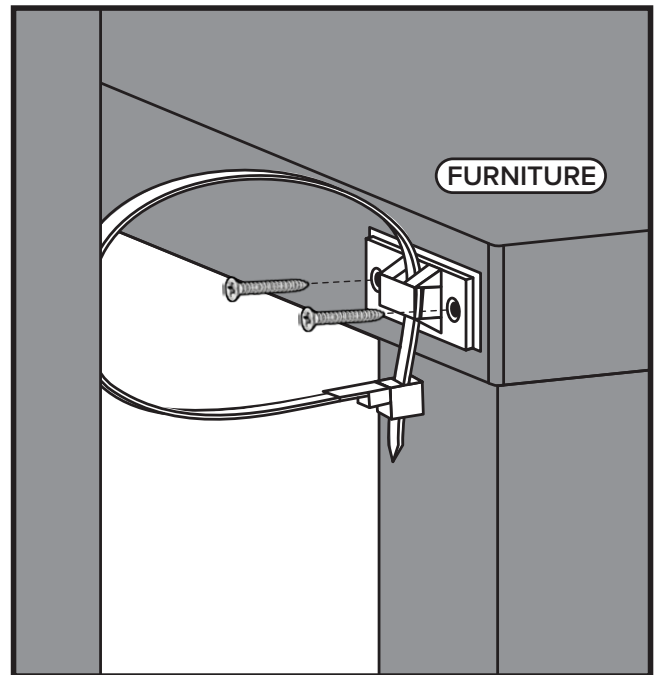


Figure 2

List of parts:

- 2 brackets
- 2 1 1/4" screws
- 2 3/4" screws
- bracket strap

Tools needed:

- power drill
- 3/32" drill bit

Note: This hardware is designed to help prevent furniture from tipping over.

Directions

1. Determine desired location of furniture piece. Find wall stud behind furniture piece and position one bracket vertically on the stud approximately 1" below the top of furniture piece. Mark and drill pilot hole in the center of the stud with a 3/32" drill bit. Attach bracket to stud with the two 1 1/4" screws. (Figure 1)
2. The second bracket will need to be attached horizontally to the top of furniture frame. Temporarily move furniture away from wall and place a bracket near top of frame. Mark and drill holes for screws with a 3/32" drill bit. Attach bracket to furniture piece with the two 3/4" screws. (Figure 2)
3. Move furniture piece into its final position, taking care to line up the wall bracket with furniture bracket. Thread the strap through the brackets as shown in the illustrations. Tighten strap until snug. **Note: Do not overtighten.**