

Loft Mirror Hanging Instructions

1. Attach mounting bracket to back of mirror; making sure bracket is screwed to wood frame. For best results drill pilot holes and use screws.
2. Attach wall bracket using wall anchors, or screw into studs.
Do not use nails.
 - (A) Attach one end first then pivot until bubble is level.
 - (B) Mark holes and install remaining wall anchors.
 - (C) Install remaining screws in wall.
3. Remove level and hang mirror on wall bracket. Objects can be moved side-to-side for precise positioning.

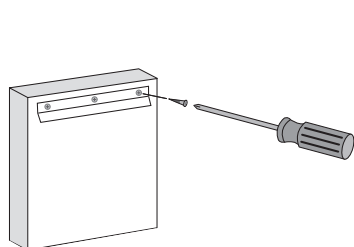


diagram 1

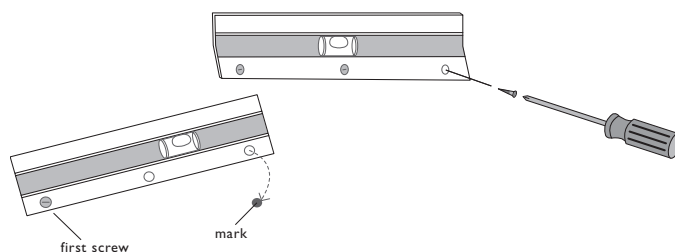


diagram 2

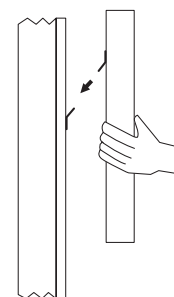


diagram 3