

Copenhagen Bed Assembly Instructions

List of parts:

- 1 - headboard
- 2 - leg assembly
- 2 - side rails
- 10 - slats (full bed), 12 - slats (queen/king bed)

Hardware:

- 8 - 9/16" bolts
- 2 - brackets

Tool provided:

- 1/4" Allan wrench

Tool needed:


- wrench



Directions:

1. Insert leg assembly into side rail and push until side rail is flush. Repeat on other leg assembly.
2. Using the Allan wrench provided, tighten the four set screws.

3. Place brackets onto headboard. Insert bolts from the back of the headboard: Place the third bolt from the top in each bracket to stabilize the brackets. Install the top two bolts to headboard and tighten.
4. Center headboard onto frame. Insert final two bolts and tighten.
5. Place slats evenly across bed frame.

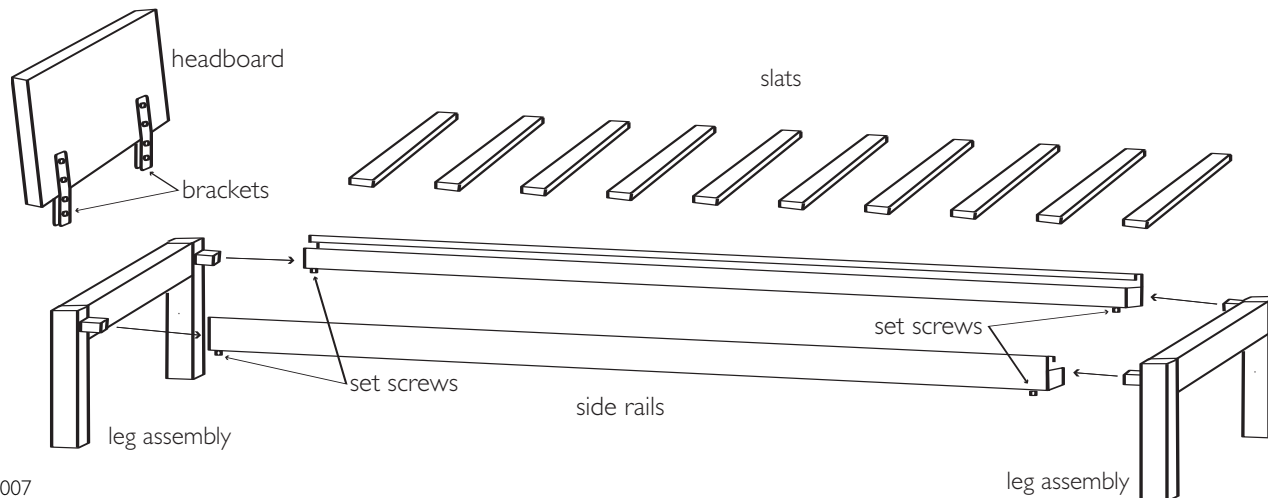

5/3/2007

Room&Board®