


assembly instructions: montego double sunbed

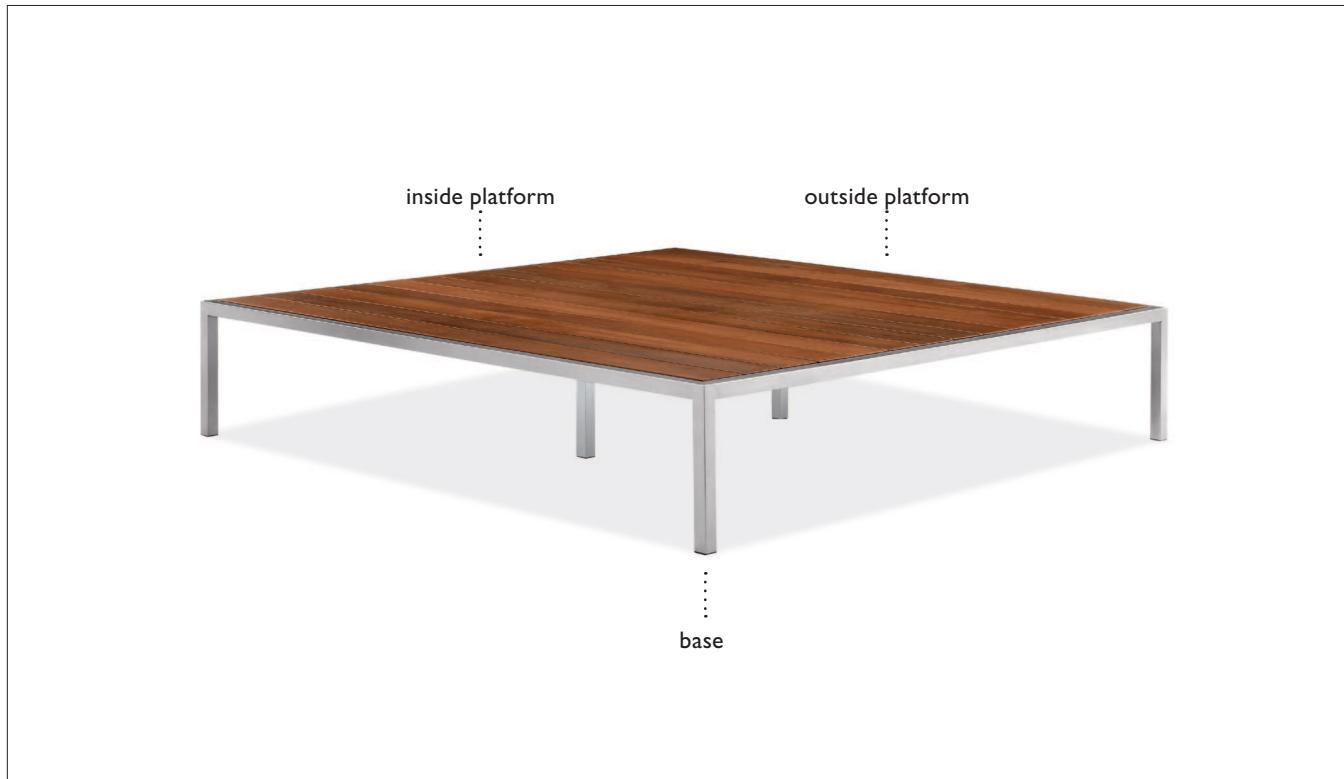

List of parts

- 2 – outside wood platforms
- 1 – inside wood platform
- 1 – stainless steel base

Hardware for full bed

- 4 – holding brackets
- 4 – thumb screws
- 4 – $1\frac{1}{4}$ " flat washers

Tools needed

- Phillips screwdriver



Directions

1. Set stainless steel base upright. Insert one outside wood platform (square cut end facing out) into the base. Repeat step with second outside platform.
2. Lower inside wood platform into center section of the base.
3. Insert the four holding brackets into the support tubes under the wood platforms. Using the thumb screws attach the brackets to the frame.

NOTE: Brackets will keep wood platforms from raising off of frame.

