

Rayne Floor Lamp Assembly Instructions

List of parts:

Rayne lamp stem assembly
Rayne lamp shade
base plate
2 base hex screws
3 shade assembly screws

Tools needed:

3/16" Allen wrench
#2 Phillips screwdriver

Directions:

1. Set the lamp stem assembly on its side on a carpeted or protected floor to avoid scratches or other damage. Use the 3/16" Allen wrench to fasten the base plate to the stem assembly with the base hex screws. (Figure 1)
2. Stand the lamp upright before sliding the inner ring of the lamp shade up over the lamp socket. Then use the shade assembly screws to fasten the lamp shade in place. (Figure 2) Position the shade seam in your desired location before fully tightening the screws.
Note: Shade assembly screws may come pre-attached to metal ring around the bulb socket. Remove prior to positioning shade.
3. Adjust the height of the lamp stem to your desired height by spinning and loosening the collar between the upper and lower portions of the stem assembly. (Figure 3) An adjustable leveling foot is located under the base plate to accommodate for uneven floors. (Figure 4)



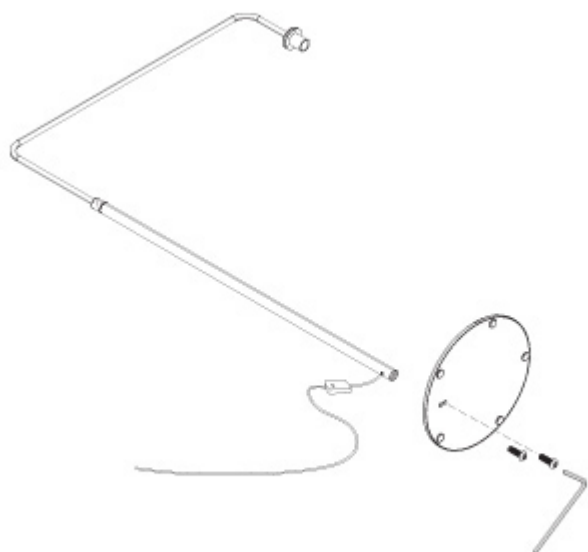


Figure 1

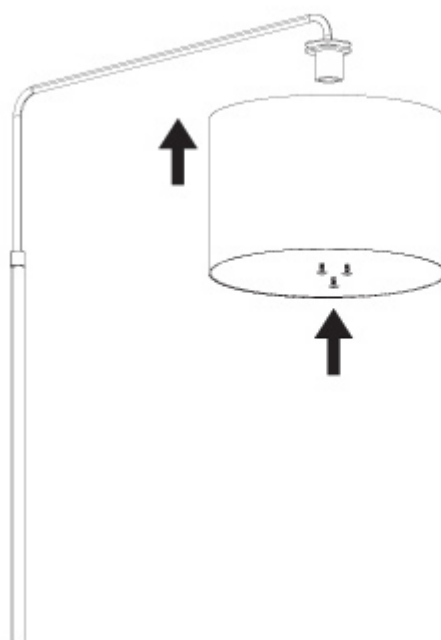


Figure 2

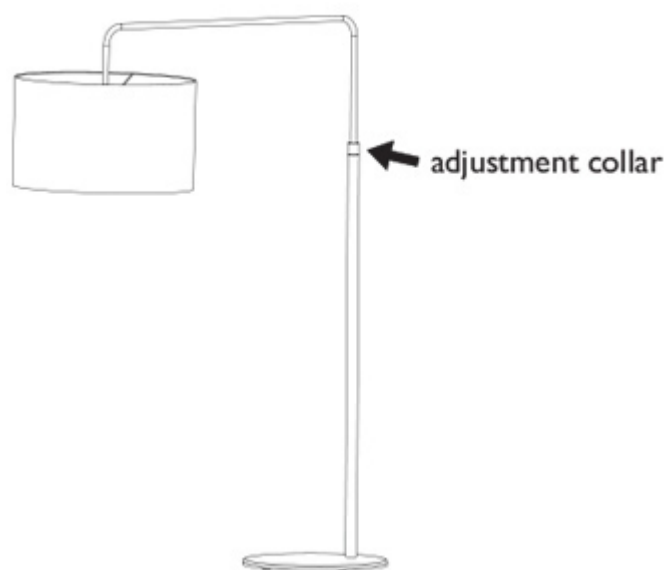


Figure 3



Figure 4