

## LIFT-UP STORAGE BED



### Recommended Tools and Materials


- 1/2" nut driver
- 7/16" nut driver

### This Product Includes

- Allen wrench (1)
- Headboard (1)
- Side rails (2)
- Support rail (1)
- 1/2" bolts (6 for queen/8 for split king)
- 7/16" bolts (28)
- L-brackets (2)
- Mounting brackets (4)
- Piston mechanisms (2)
- Wood slat frame(s)


1

Using the included 1/2" bolts, install three bolts (six total) on each side of the footboard at the pre-made holes.

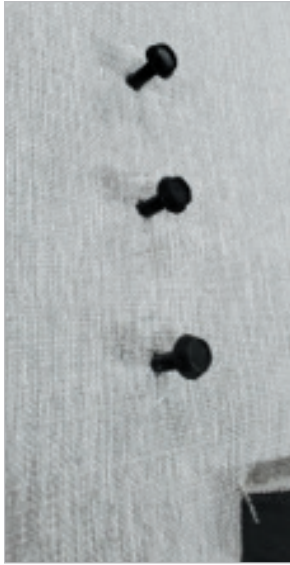

2

Mount piston mechanisms (two total) to side rails (two total). The long arm extending from the piston mechanism should point towards the footboard, where you installed the six bolts in step 1. Each piston mechanism requires four bolts to properly install.

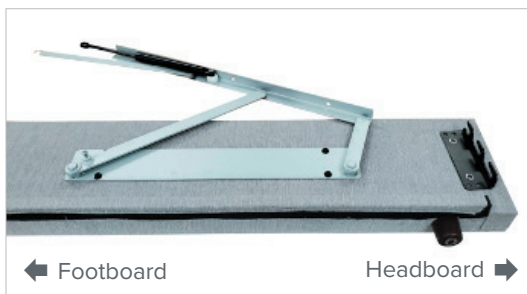

3

Install the mounting brackets to the side rails using the included 1/2" bolts. Each bracket requires two bolts, and each side rail requires two brackets. The open slots should face up.



4

Connect both side rails to the footboard. The open slots will fit into the bolts that you partially tightened to the footboard in step 1. Fully tighten these bolts to secure the footboard to the two side rails.




5

Using the included 1/2" bolts, partially install three bolts on each side of the headboard (six total) at the pre-made holes. Take the footboard and side rail assembly you completed in step 4 and connect it to the headboard, fully tightening the headboard bolts once the mounting brackets are in place.



6

Add support rail using pre-located cutouts.

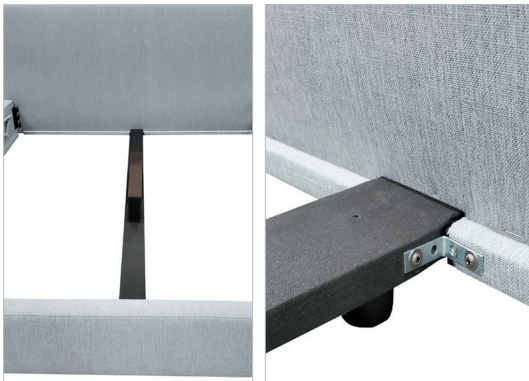

Secure support rail with included L-brackets and included 7/16" screws. Two L-brackets are needed for each end of the support rail.

7

Install underbed platform boards. Align each board with the support rail and the support blocks that will be pre-installed on side rails.



8

For split king platform assembly, continue reading. For all other bed sizes, skip this step. Two mounting bars are included with each split king bed. Insert the bars between each platform. The weld mark indicates how far to extend the bar into the platform's tubes.



- 9 Once mounting bars have been inserted into platform tubes, and the platforms have been placed next to each other on the bed, tighten the included bolts in the platform bars using the Allen wrench.



- 10 Place the wood slat frame(s) on the bed with the holes closer to the headboard.



- 11 To secure the wooden platform to the piston, place the included 1/2" bolts in the first hole of the platform (closest to headboard), third hole, and the last hole (furthest from the headboard). This step requires three bolts for each side, six total. Hand-tighten each bolt using the 1/2" driver.

- 12 Lift the completed mattress platform so you can access the pistons. Lock into an open position using the locking leg (gray arm). Connect the loose gas piston. Tighten any loose bolts where the piston attaches to the side rails. Push the platform back down and use plugs to fill empty screw holes on the mattress platform. You may now place your mattress on the platform.

