



SLIM CONSOLE INSERTS

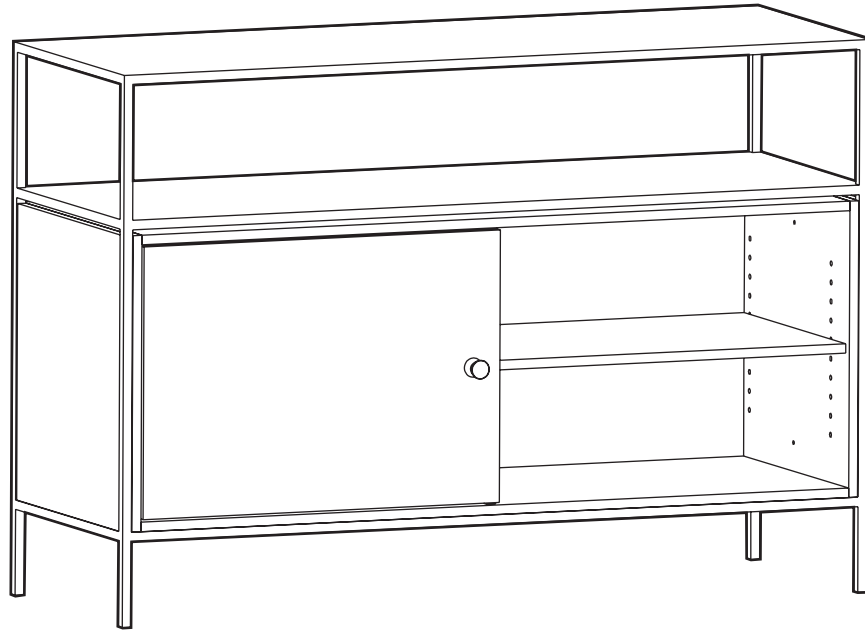


Installation Instructions

- 1 Using the included allen wrench, remove the side panels of the insert by unscrewing two screws on each side and pulling the side panels off.

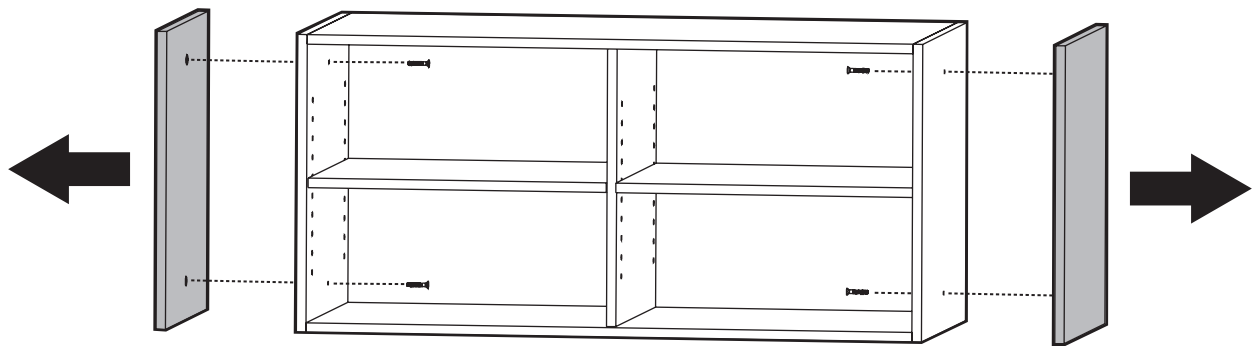

2

With the felt pads facing down, carefully slide the insert into the console.

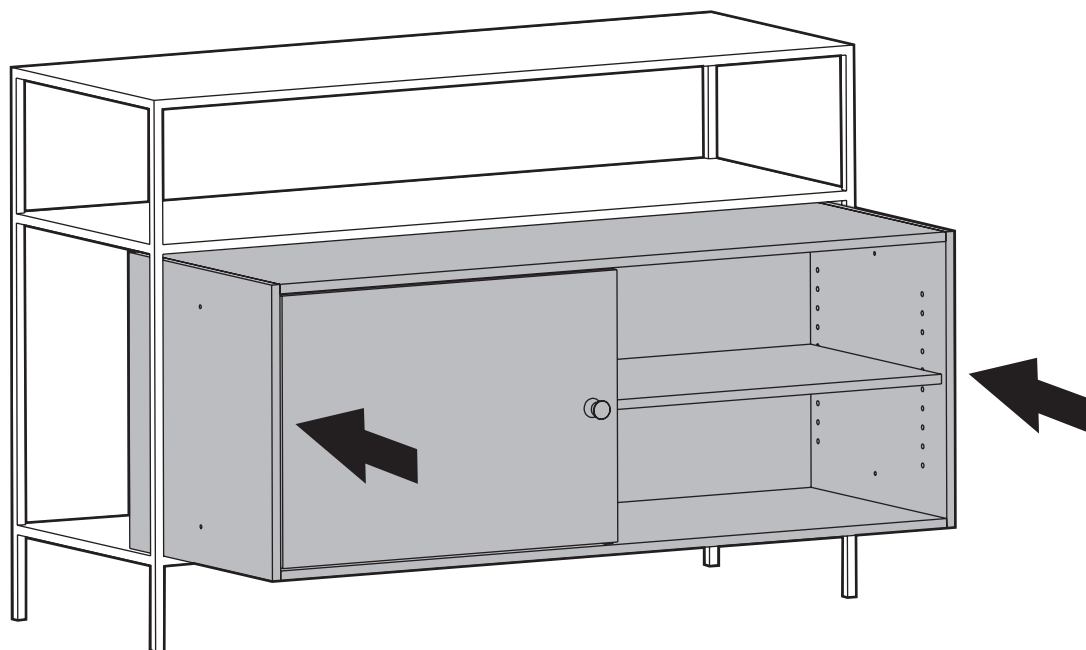**3**

Once the insert is fully inserted into its space, attach the side panels using the included screws and allen wrench. The side panels keep the insert in place.

