

# UPHOLSTERED STORAGE BEDS

## Recommended Tools/Materials

- Hex screwdriver
- Socket set (½" socket or Ratcheting Wrench ½")

## This Product Includes

- Headboard with 6 1-inch hex head bolts (3 on each side)
- Footboard with 5 1.75-inch hex head bolts (3 on each side) with washers
- 2 side rails with 4 1-inch hex head bolts (2 on each rail)
- Black spacer bar (fits at foot of bed)
- Steel support slats
- Storage drawer with packet of 8 machine screws
- 2 black screws attached to support bar
- 2 L-brackets (1 attached to each side rail)


## Installation Instructions (continued on next page)

**Note:** We recommend assembling this item with a friend.

- 1 Stand the headboard upright. Halfway unscrew the 6 hex head bolts on the headboard (3 on each side) to give enough room to slide the bracket on (see step 2).
- 2 Slide one side rail up onto the headboard so the L-bracket connects to all 3 bolts. Tighten the 3 hex head bolts onto the L-bracket.
- 3 Repeat step 2 on the other side of the bed.


- 4 Remove two black screws (one on each end) of the support bars inside each upholstered side rail, and place the black spacer bar between the side rails. Then re-insert the screws in the holes on each end of the spacer bar and secure it to the bed.
- 5 Attach the footboard to the storage drawer. Remove the five bolts and washers from the footboard and align the holes in the footboard with the holes in the drawer box. Re-insert the bolts through the washers and the holes in drawer box, and tighten to secure.

Top View

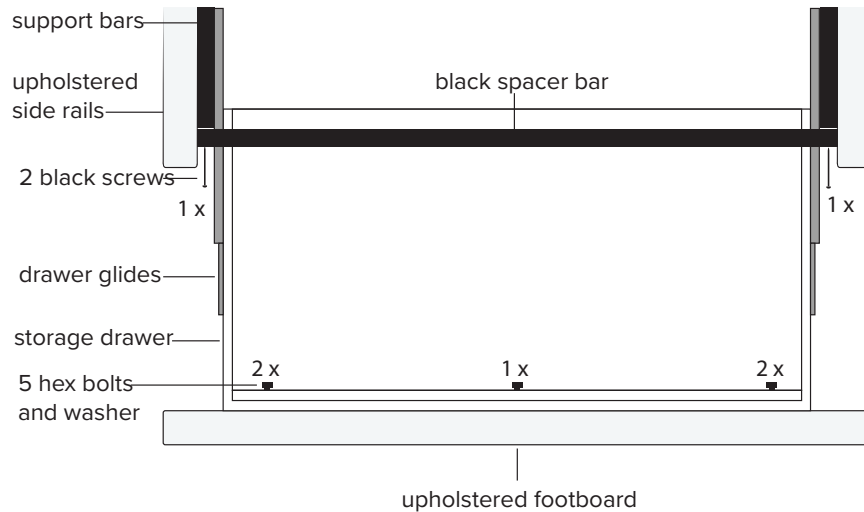

- 6 Fully extend the metal drawer glides and place the storage drawer between the glides.
- 7 Align the holes in the glides with the holes in the drawer so that the glides are flush with the footboard. Insert the 8 screws from the included packet into the holes (4 per side) and tighten to secure. Close the drawer.

Side View

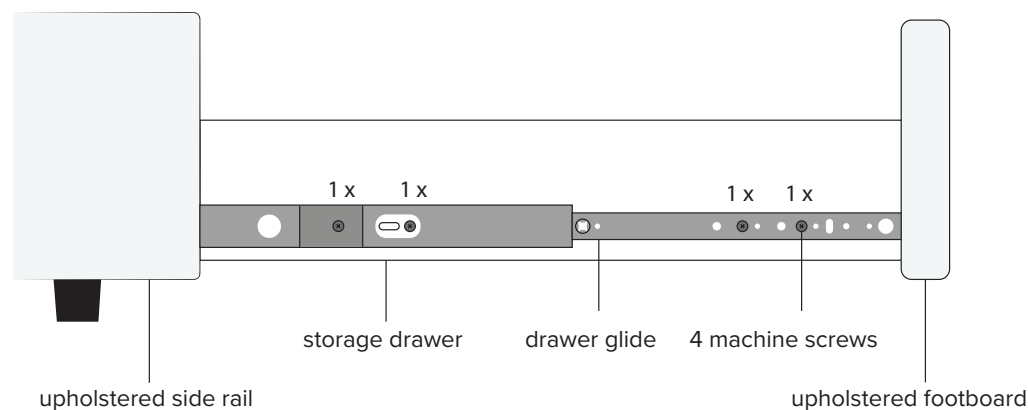

- 8 Add the metal slats across the bed with their flat side facing up. Place your mattress on the slats.