

BRIDGER MEDICINE CABINET



CAUTION

PROFESSIONAL INSTALLATION RECOMMENDED

We highly recommend two people install this item. Professional installation is recommended. It is important to use a level throughout the installation process so that the wall cleats rest evenly and perfectly horizontal to one another. If the cleat attached to the wall is not level, Bridger will not hang securely. If hanging a set of Bridger cabinets, hang the middle cabinet first.

INSTALLING ON WOOD STUDS IS REQUIRED. IMPROPER INSTALLATION CAN RESULT IN SERIOUS INJURY.

Recommended Tools/Materials

- Tape measure or ruler (at least 3 feet)
- Level
- Power drill
- Phillips drive bit
- 3/16" drill bit
- Pencil
- Stud finder

This Product Includes

- Bridger cabinets
- Attached wall cleat
- Detached wall cleat
- Mounting screws (5)
- Shelf pins (16)
- 4 Glass shelves (door units)
- 3 wood shelves (non-door units)

BEFORE YOU BEGIN: Due to the handcrafted nature of Bridger, there may be slight variances between each piece and its bracket placement, which is why it is very important to take precise measurements for each piece you install.


Installation Instructions: Hanging Medicine Cabinets

1 PREPARE FOR HANGING: Keeping stud locations in mind, hold the detached wall cleat against the wall and draw a vertical line in the center of the two outermost large holes in the detached wall cleat. This is the **center case line**.

Mark a level horizontal line on the center case line where the top of the case will be. This is the **top case line**.
Make sure to leave your desired amount of space under the case.


2 Measure 2.125" down from the top case line and draw a horizontal line, ensuring it is level. This is the **wall mounted cleat line** that will indicate where the bottom of the wall mounting cleat will be installed. For the 13.25" cabinet or open case, draw a level line 6" on each side of the center case line. For the 20" and 22" cabinets, mark 9" on either side of the center case line.

- If installing multiple cabinets, extend the wall mounted cleat line to span the total width of all intended cabinets, making sure to still mark the center cleat distance noted above.
- Below the wall mounted cleat line, use a stud finder to locate and mark the positions of studs using an "X" along the length of the bracket.

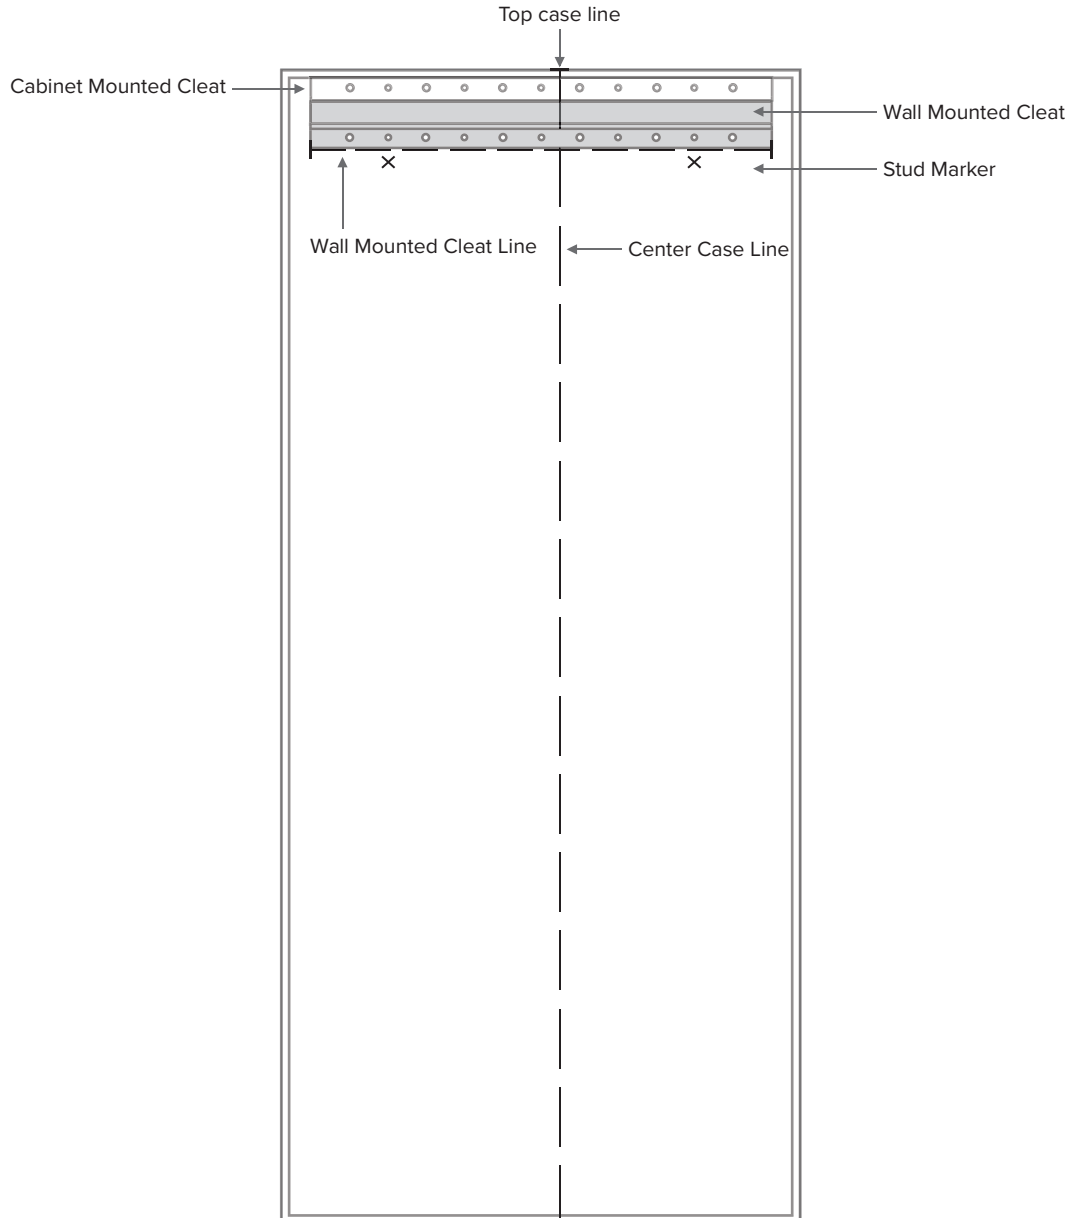

Installation Instructions: Mounting the Wall Cleat


- 1 Align the cleat on the wall mounted cleat line, with the bottom of the cleat on the line. The cleat should be in the middle of the center case line. Ensure it is level.
- 2 Mark the center of the holes of the cleat onto the wall, ensuring they align with 1 or 2 studs. Utilize the X marks to select appropriate hole placements to hit studs with screws.

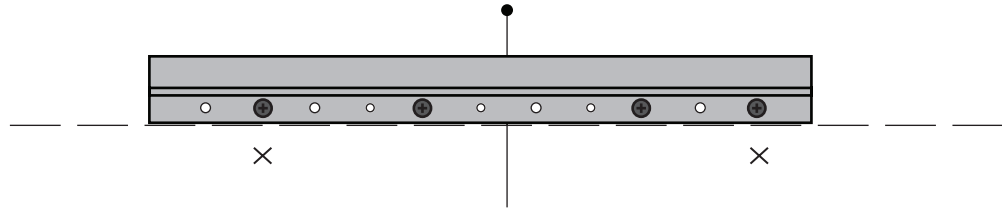

- 3 Drill pilot holes using a 3/16" drill bit on the marked dots, ensuring at least one hits a stud. It's best if your stud attachments are on either side of the center case line. Screw the wall-mounted cleat to the wall using the provided screws. Check for levelness throughout this process.

Installation Instructions: Hanging a Single Cabinet

- 1 Hang the cabinet on the cleat, ensuring it's fully seated.
- 2 Check for levelness using a level on the top of the case.
- 3 **Cabinets WITH doors require two more attachment points:** In the cabinet's back panel, drill two pilot holes using a 3/16" drill bit in the center of the interior holes. Then anchor the case with the provided screws.

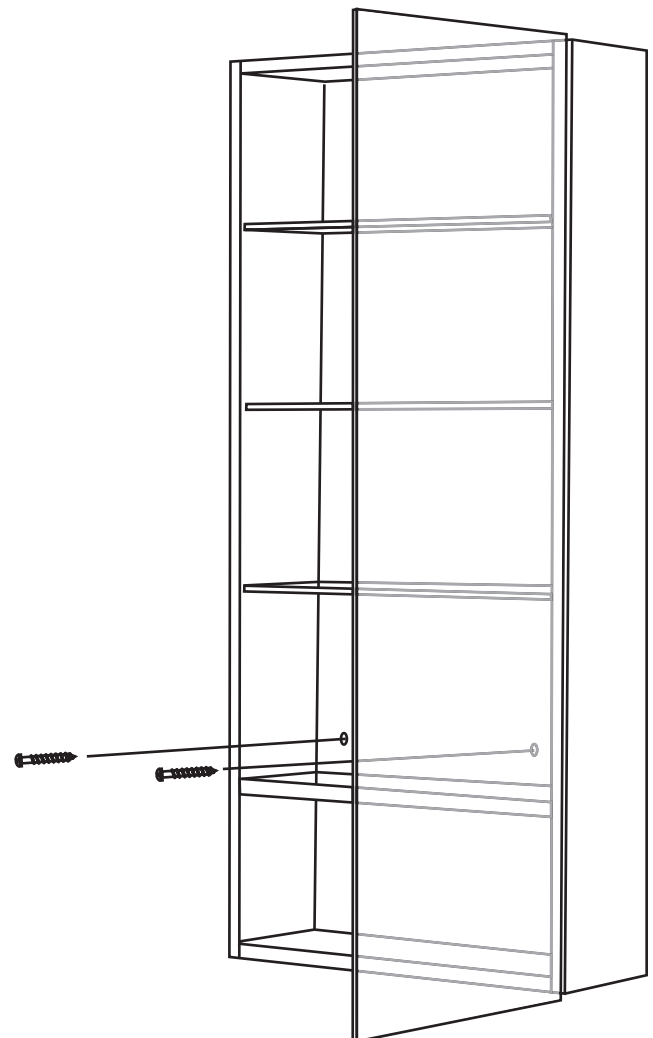

Installation Instructions: Hanging Multiple Cabinets (Set)

- 1** With the middle cleat attached, use the same horizontal line to mount the other hanging cleats.
- 2** Hang the cabinet on the mounted cleat and mark its edges which will help you mark the center case lines for the following cabinets. Here are the distances to measure over, from either side of the first cabinet, to locate the center case lines of following cabinets:

13.25" cabinet or open shelf: $6\frac{3}{4}$ "

20" cabinet: $10\frac{1}{8}$ "

22" cabinet: $11\frac{1}{8}$ "
- 3** Refer to earlier steps for hanging additional cabinets, as the instructions will be the same as the first