

BERT

ASSEMBLY & INSTALLATION INSTRUCTIONS

INFO@PABLODESIGNS.COM
888 MARIN STREET
SAN FRANCISCO, CA
94124

PABLODESIGNS.COM



APPROVED COMPONENTS

Pablo®

BERT


1. LOOSEN STRAIN RELIEF CAP AND FEED CORD THROUGH
2. TIGHTEN STRAIN RELIEF AT DESIRED HEIGHT AND ATTACH MOUNTING PLATE TO JUNCTION BOX
3. CUT CORD AND CONNECT LAMP WIRING TO BUILDING WIRING
4. SLIDE COVER UP TO CEILING

BULB TYPE
1X 6.5W WARM WHITE MEDIUM BASE - LED




CARE INSTRUCTIONS
WIPE CLEAN WITH A SOFT DAMP CLOTH.
AVOID AMMONIA-BASED CLEANERS.

6" (152MM)
RECOMMENDED
FOR CONNECTION

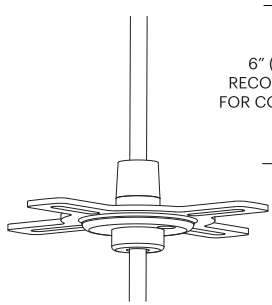


1


STRAIN RELIEF CAP

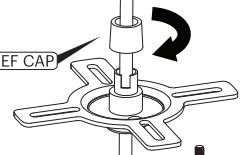

MAGNETS

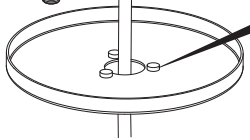

**IMPORTANT: WE RECOMMEND CEILING MOUNTING
BE INSTALLED BY AN ELECTRICIAN**

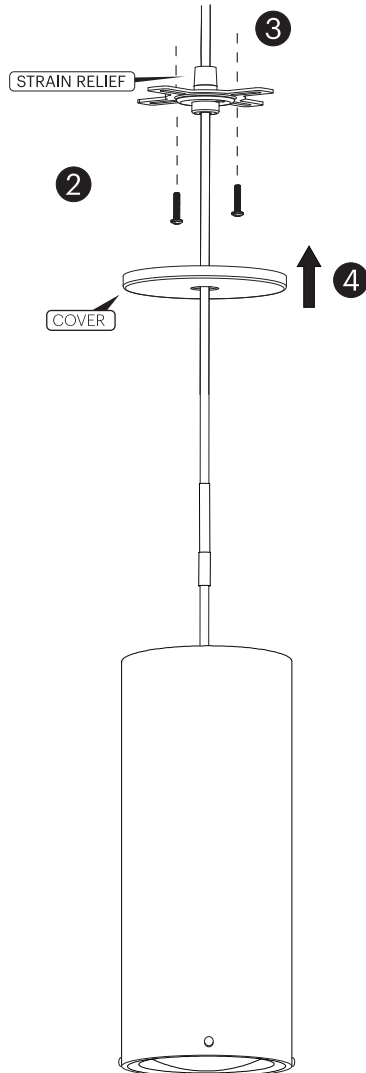

Pablo®

BERT

- 1 SEAT STEM INTO LAMP ASSEMBLY

STEM

LAMP ASSEMBLY

