


BRAY 6 ROUND PENDANT

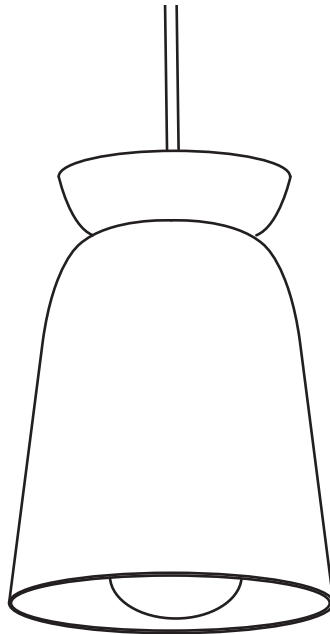

CAUTION


- It is strongly recommended that the hardwire installation of this product is done by a professional.
- Read these safety instructions entirely prior to installation.
- DO NOT BEGIN INSTALLATION UNTIL ALL ELECTRICAL POWER TO THE INSTALLATION SITE HAS BEEN TURNED OFF AT THE CIRCUIT BREAKER!

Recommended Tools


- Flat head screwdriver
- Wire strippers
- Pliers

This Product Includes


- A. Bray canopy assembly
- B. Bray Shade
- C. Bulb
- D. Wire nuts (x2)

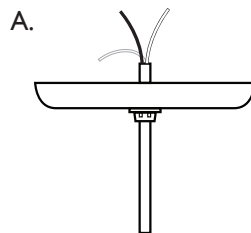

B.

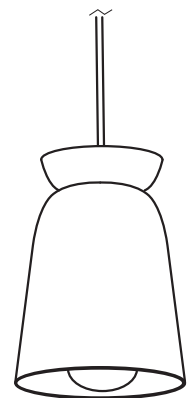

C.

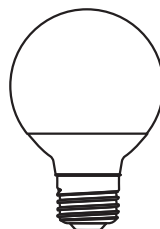

D.



Installation Instructions

Cord Mount

- 1** Prior to installation, disconnect power at circuit breaker.
- 2** Thread nipple and jam nut into strap as shown. Leave approximately 3/4" below strap. Tighten jam nut.
- 3** Pull cord through shade, bushing, canopy, nipple, jam nut and hanger bracket as shown.
- 4** Use a tape measure to determine the desired cord length for your pendant. Position cord clamp with the flange down, near threaded nipple and use pliers to tightly crimp the cord clamp.
- 5** Use wire strippers to cut back the outer protective cover from the wires, then remove approximately 3/4" of the protective cover of each of the individual wires.
- 6** Using the included wire nuts, twist together the wires from the pendant with their corresponding wires from the junction box. Attach the ground wire to the ground screw on the hanger bracket. Tuck the excess wire up into the junction box.
- 7** Slip canopy over nipple and tighten with bushing. Adjust nipple as needed to ensure canopy is flush to the ceiling.

Canopy Assembly

