


CYRIL WALL HOOK

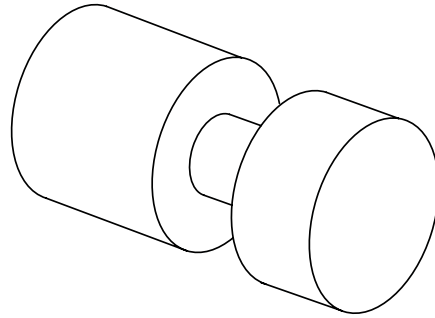

Recommended Tools/Materials

- Pencil
- 1/16" drill bit
- Power drill
- #2 Phillips screwdriver

This Product Includes

- Cyril wall hook
- Threaded insert
- Drywall anchor

Installation Instructions

1. Use a pencil to mark the placement of your hook on the wall. With a power drill and a 1/16" drill bit, drill a pilot hole at your mark. Using a #2 Phillips screwdriver, screw in the wall anchor so it is flush with the wall.

Tip: Be careful not to drive the anchor in further than the surface of the drywall.

2. Screw side A of the threaded insert into the wall anchor until only side B's threads are exposed.
3. Tighten the Cyril wall hook onto side B of the threaded insert until it is flush with your wall.

