


DANBURY BED

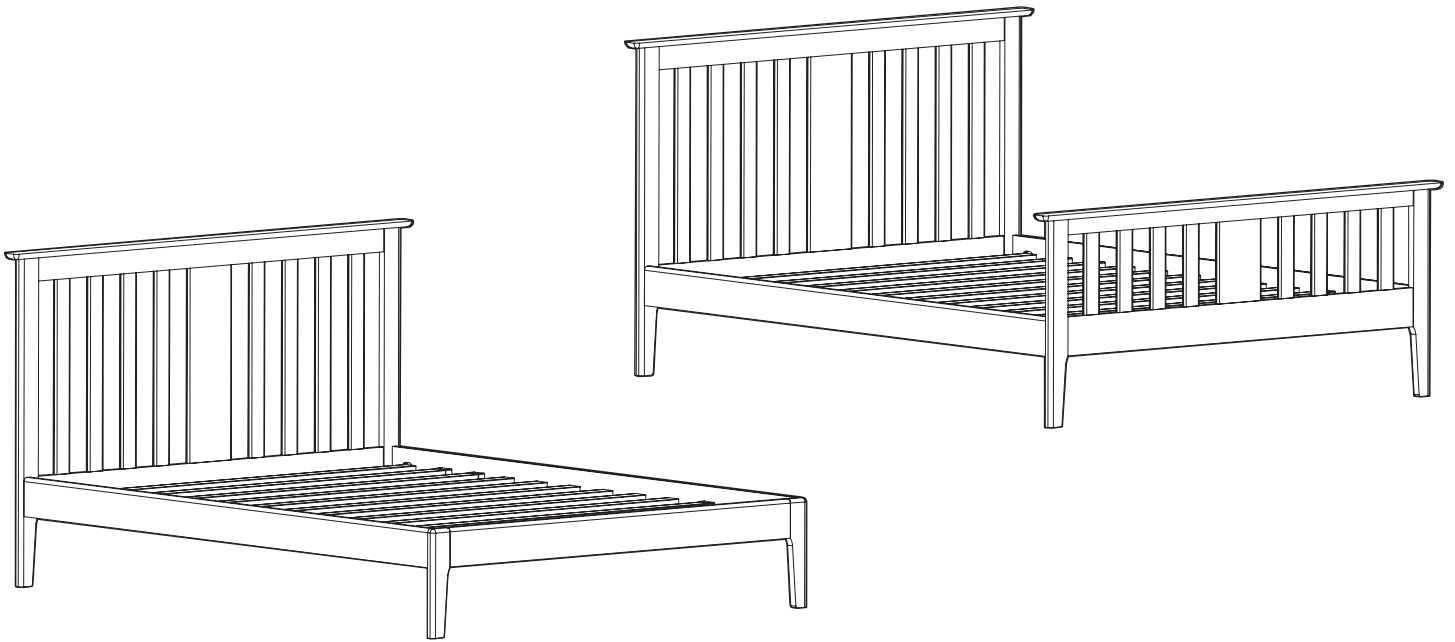

Recommended Tools/Materials


- Hex assembly wrench (included)
- Power drill with #2 Phillips bit
- 1" wood screws (x16)

This Product Includes

- Danbury headboard
- Danbury low footboard or Danbury tall footboard
- Danbury left side rail
- Danbury right side rail
- Steel bed slats (x10 for Twin/Full; x12 for Queen/King/California King)
- Bed slat mounting brackets (x8)
- Threaded rods (x4)
- Wood dowels (x8)
- Curved washer (x4)
- Hex nut (x4)
- Hex assembly wrench


Installation Instructions

- 1 Insert two of the included wooden dowels into the upper and lower holes on one side of the headboard. Screw in one of the included threaded rods into the center hole on the same side of the headboard. Align the appropriate Danbury side rail and insert all three components into their corresponding holes on the end of the side rail. Use the included washer, nut, and hex wrench to fully fasten the headboard to the side rail.

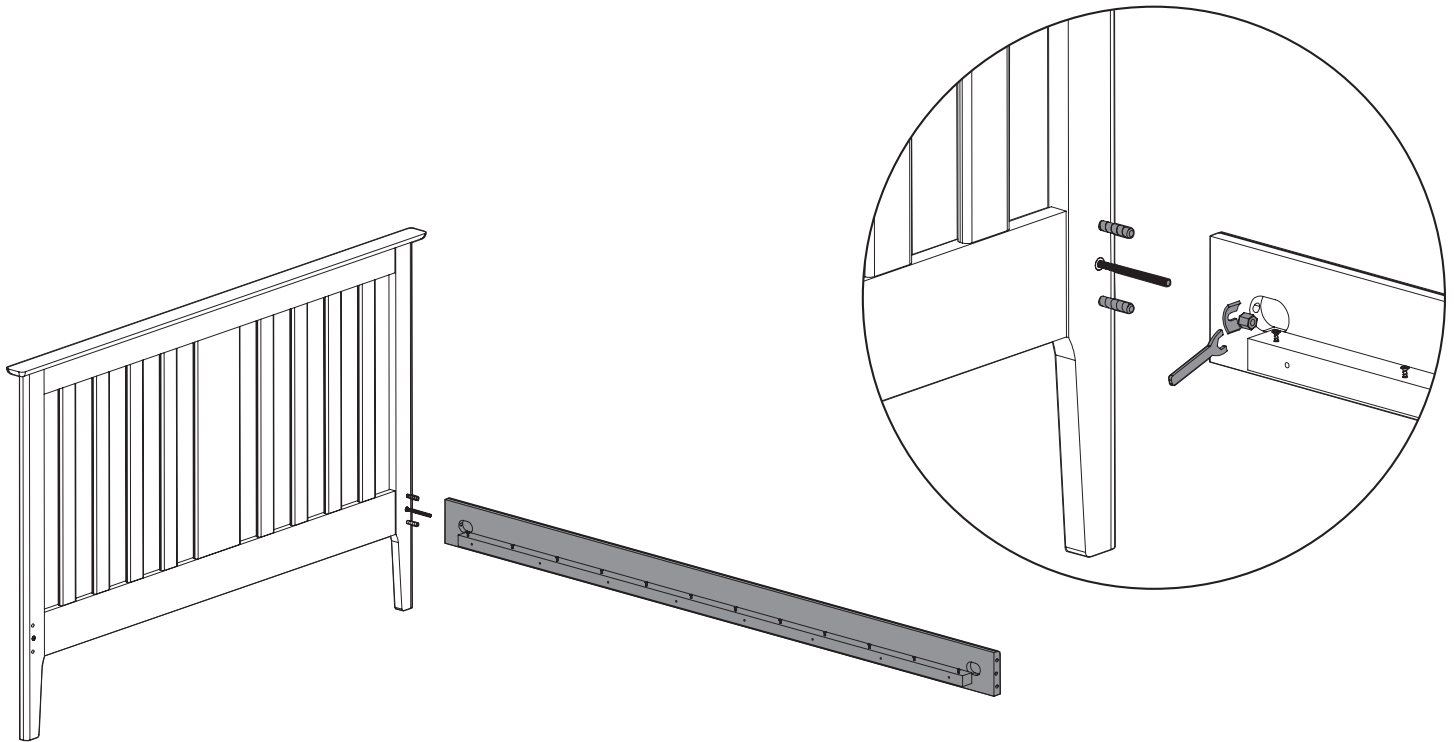


- 2 Repeat the process to connect the opposite side rail to the headboard before repeating the process again to connect the footboard to the side rails.

TIP: Move both side rails into position and loosely connect the footboard on both sides before fully tightening the hex nut.

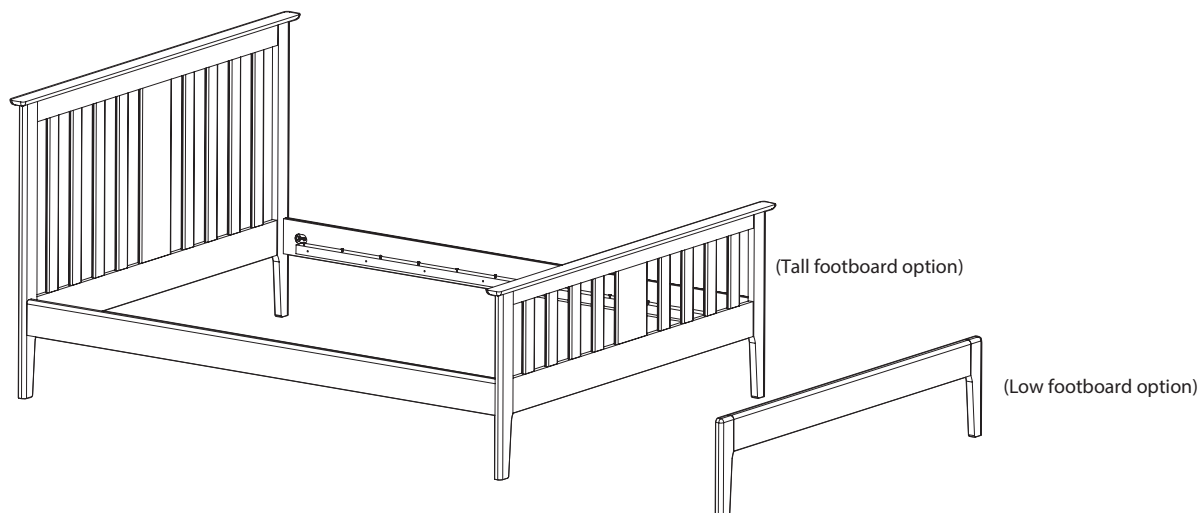

- 3** Place all of the included steel bed slats atop the support rails on the interior of the Danbury side rails. The protruding screws should be inserted into the holes on the underside of each steel bed slat.

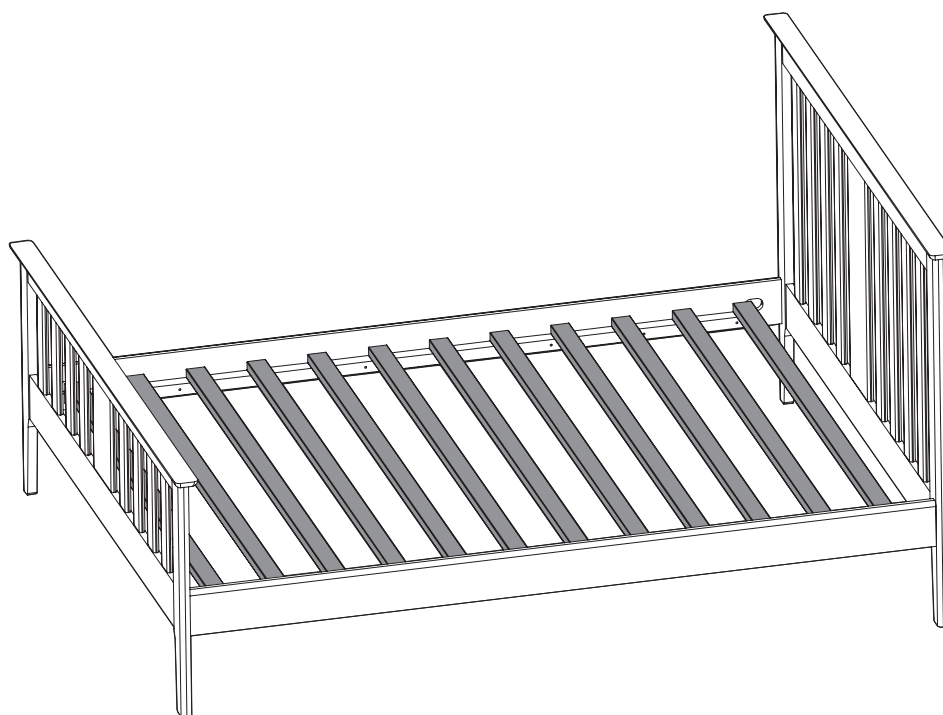

- 4** For added stability, 8 bed slat mounting brackets are provided to tightly fasten 4 of the steel bed slats in place. The second and third bed slat in from the headboard and footboard should be fastened down using these brackets. Use two 1" wood screws for each bracket and drill them directly into the wood support bar on the interior of each Danbury side rail.

