

EMERSON BED

Recommended Tools/Materials

- Power drill
- Rubber mallet


This Product Includes

	Twin/ Full	Queen/ King	California King	Twin w/Storage	Full w/Storage	Queen w/Storage	King w/Storage	California King w/Storage
Headboard	1	1	1	1	1	1	1	1
Footboard	1	1	1	1	1	1	1	1
Side rails	2	2	2	2	2	2	2	2
Steel slats	11	12	13	11	11	12	12	13
Drawer assembly	—	—	—	1	1	1	1	1
1¼" screws	—	—	—	2	4	4	4	4
2½" screws	—	—	—	2	2	2	2	2
L-bracket	—	—	—	—	—	—	1	—
¾" Truss head screws	—	—	—	—	—	—	4	—
Set screws	4	4	4	4	4	4	4	4

Installation Instructions

1

With two people, stand up the headboard in the bed's desired location in your room. Align the pegs on the side rail plate with the holes in the headboard plate. Tap the side rails down to lock them into place.

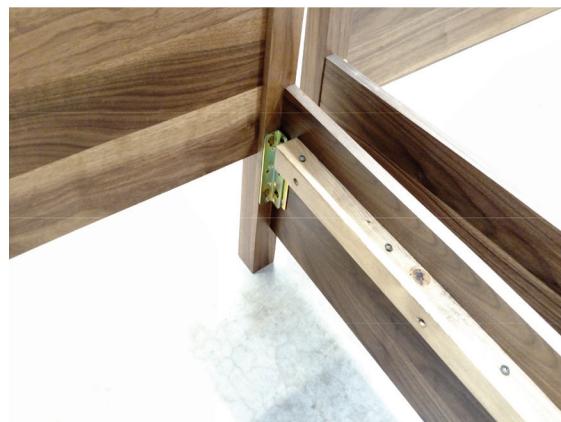


2

Repeat this process with the footboard.



3

After assembling the side rails to the headboard and footboard, use the included wood set screws to lock each of the four bracket pairs in place.

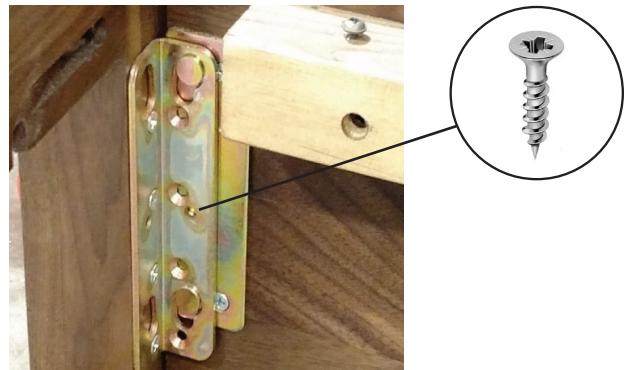

Follow steps 4-8 only if assembling a storage bed

4

Remove the drawers from the frame. Insert the frame so the back is resting on the blocking on the side rails, and the front is resting on the footboard rail.




5

Use the included $1\frac{1}{4}$ " screws to attach the rail of the drawer case to the footboard rail.




6

Use the included 2½" screws to attach the back of the drawer box case to the side rail blocking. Be sure both sides are flush with the cleat to square the bed.

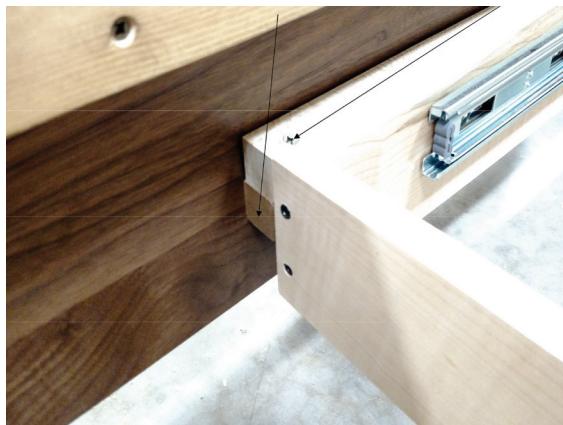

King storage beds only: Attach L-bracket with supplied screws.

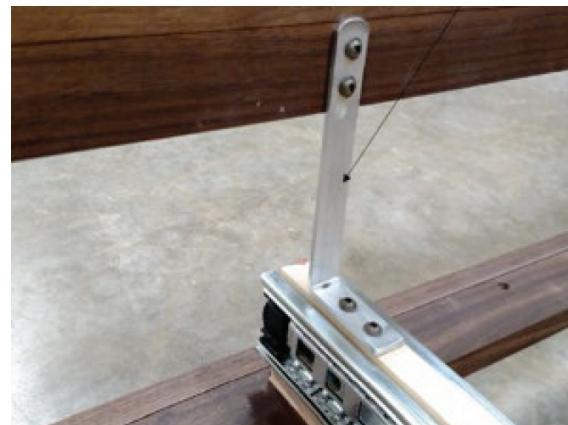**7**

Insert the drawers, making sure the ball carriage is all the way forward.

**8**

Add the mattress slat support rails. Be sure the slat drops over the screw head. Once all mattress slat support rails are in place, you may place your mattress on the bed.

