






BLOCK & BOLT INSTALLATION

Insert bolts through countersunk hole side of blocks

as shown below.



Greg Benson - Founder

"Loll Designs inspires people to appreciate the outdoors."

ASSEMBLY IN

STRUCTIONS & PRODUCT INFO:

EMMET OTTOMAN + TALL

ASSEMBLY TIPS: 5 Important Points You NEED to Read

get it taken care of straight away!

occurred, please take photos and go to lolldesigns.com/damage. Rest assured we'll Prior to beginning assembly, please inspect and inventory the parts to make sure you have everything and that nothing was damaged during shipping. If damage has

RECYCLE THE PACKAGING

We've gone through great lengths to make as much of our packaging as possible recyclable. The cardboard box, paper wrap, filler and paper bags can all go in your recycling bin. The muslin hardware bags replaced plastic bags with the intention of reducing plastic and encouraging reuse. Loll Designs and Planet Earth thank you!

Bolts should not be forced, but some components, particularly the blocks will need a bit of muscle to get them together as they are machined for a snug fit. If parts are still not going together, please send us a photo of the part you are having trouble with.

Start all bolts by hand to ensure proper alignment and to prevent cross threading. Then using the Allen Key or Loll Tool, tighten until you feel resistance.

To avoid scratching furniture, assemble on a clean soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in.

You can use a cordless screw gun if you have one and know how to use it. Set the clutch setting at low to medium torque. We do not recommend using an electric drill without a clutch to install bolts as you can easily overtighten and damage the product.

WE WANT YOU TO LOVE YOUR LOLL

For more info and visual aids, watch the assembly videos at www.lolldesigns.com/videos For product care & maintenance, visit www.lolldesigns.com/care-maintenance

For further lollygagging assistance, please reach out!

+1 877-740-3387 sales@lolldesigns.com

Duluth, Minnesota 55807 5912 Waseca Street
























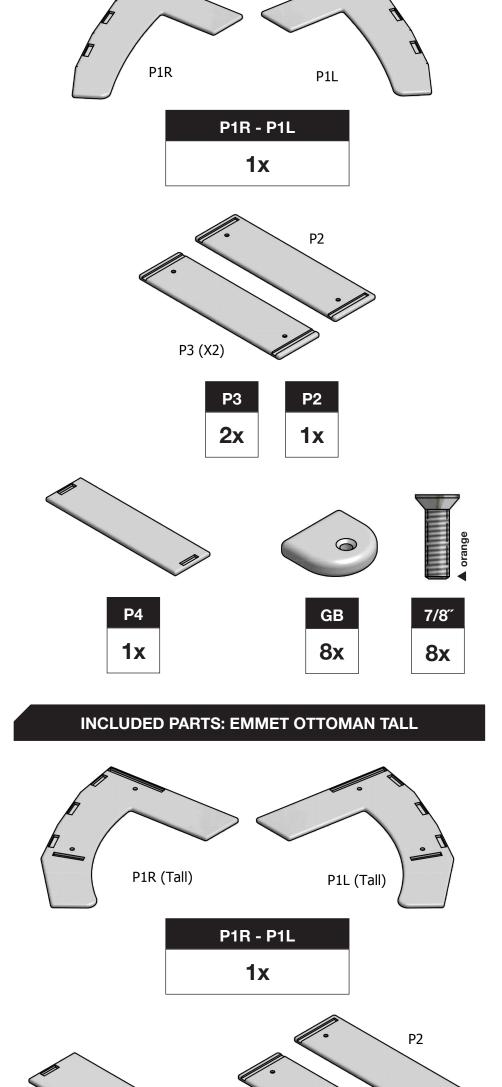



m&Board



P3 (X2) **P4 P**3 P2 **1**x **2**x **1**x \bigcirc **P5** 7/8″ GB **1**x **10**x **10**x

*Bolt shown actual size.

