

Hanson Bed Assembly Instructions

THIS PRODUCT INCLUDES:

- Side rail (x2)
- Crossbar (x4)
- Wrench (1)
- 1/4" bolts (16)
- 1 1/4" bolts (12)
- 1 1/2" bolts (16)

1 Assembling the base


Lay the side rails on the ground upside down and parallel next to each other with holes facing inward and legs up. Using the included wrench and 1/4" bolts (16), attach the four crossbars to a side rail. Attach the second side rail to all of the crossbars. The base is now ready to be attached to the upholstered platforms.

2 Attaching the platforms to the base

Lay the upholstered platforms next to each other with the black side facing up and the majority of the holes toward the center. Align the assembled base on the platforms with the legs facing up and attach the base with the 1 1/4" bolts (12).

3 Attaching the L-brackets to the platforms

Flip the bed on its side and attach the L-brackets with eight 1 1/2" bolts. (Figure 1)

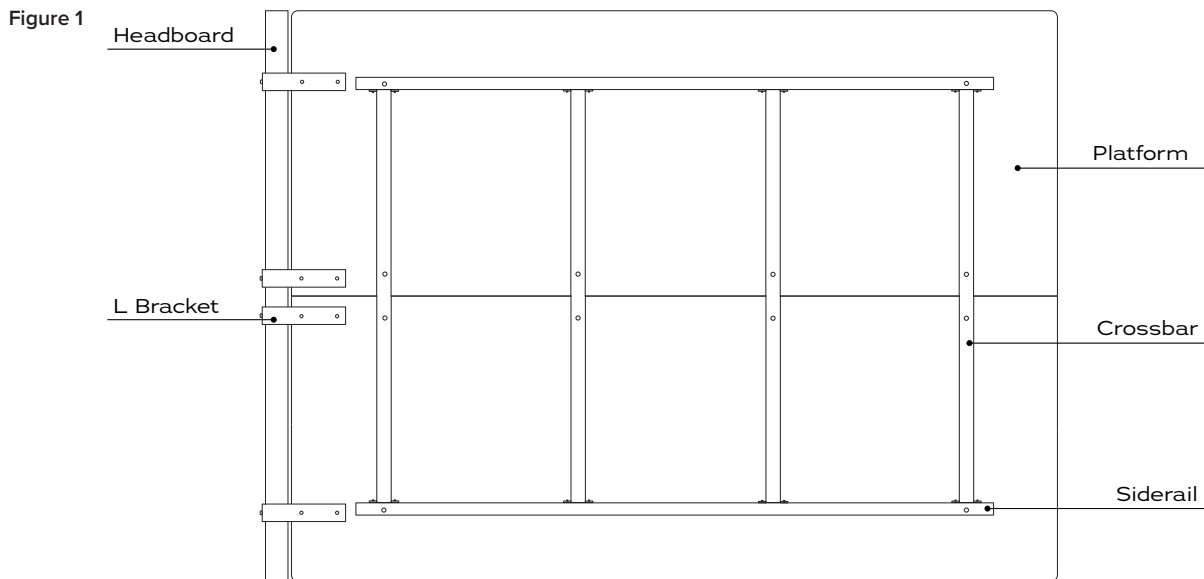

4 Attaching the headboard to the L-brackets

Flip the bed to the upright position on its legs. Align the L-bracket holes with the headboard's attachment points. Screw the headboard to the L-brackets using your wrench and eight 1 1/2" bolts. The bed is now assembled and you may place your mattress directly upon it.