


HOFF BATHROOM HARDWARE

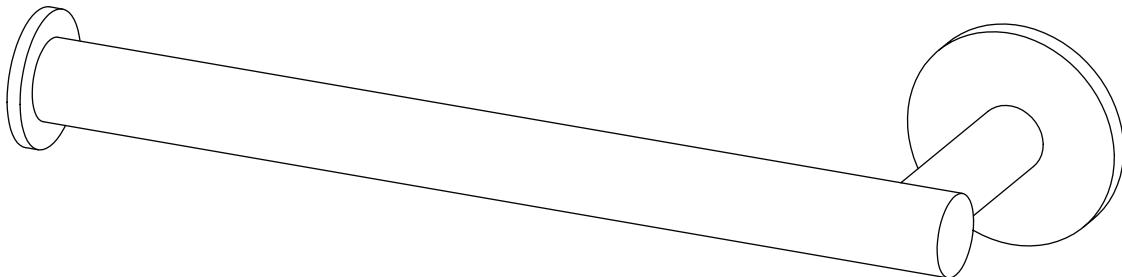

(actual size may vary)


RECOMMENDED TOOLS AND MATERIALS:

Allen wrench (included)
1/16" drill bit

#2 Phillips screwdriver
Power drill


Pencil
Level

THIS PRODUCT INCLUDES:

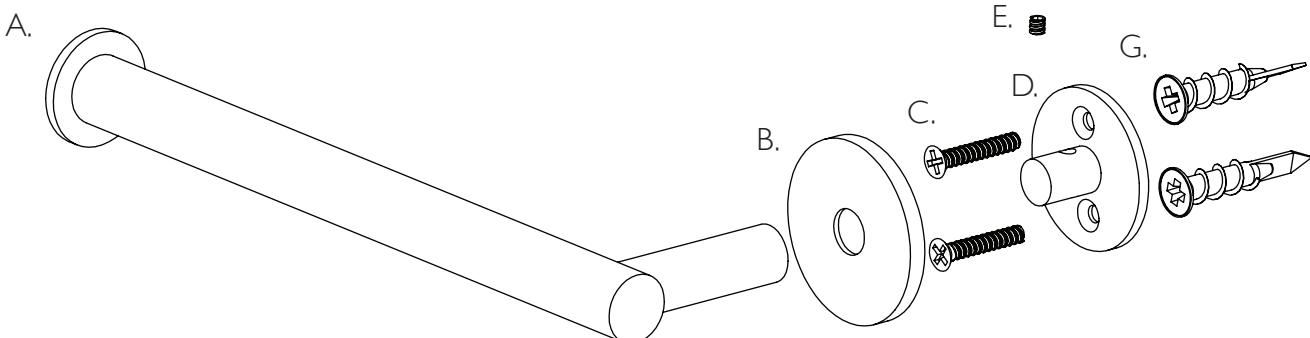

- A. Hoff hardware unit
- B. Cover plate
- C. Mounting screw X2
- D. Mounting plate

- E. Set screw (preassembled to mounting plate)
- F. Allen wrench
- G. Drywall anchor X2

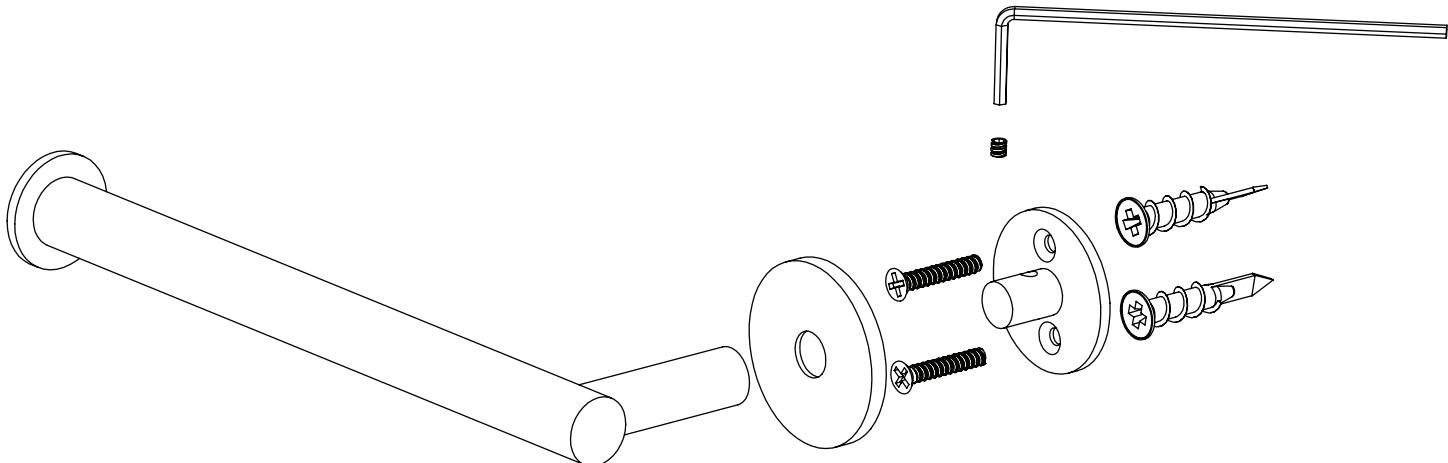

1

Use a level to draw a vertical line at least 2 inches in length at your intended installation location. Hold the mounting plate against the wall oriented so that the vertical line passes through the center of both screw holes in the mounting plate. Mark the location of each screw hole along the vertical line with your pencil. For hardware units with multiple mounting points, insert the mounting plates into the hardware unit prior to marking the hole locations to ensure proper spacing between mounting plates.

2

Remove the mounting plate from the wall and use a power drill and 1/16" drill bit to drill a pilot hole at each mark. Then use a screwdriver or drill to drill the wall anchors into the pilot holes. Be sure to drill the anchors in fully so they are flush with the wall before continuing to the next step.

3

Place and hold the mounting plate over the wall anchors so the screw holes align with the wall anchors. Be sure that the mounting plate is oriented so that the internal set screw is pointed upward with the Allen head side down. Using a #2 Phillips screwdriver, insert the mounting screws through the mounting plate and into the wall anchors. Tighten the screws fully until the mounting plate is flush and firmly mounted to the wall.

4

Place the cover plate over the mounting plate before inserting the mounting plate protrusion into the hardware unit. Be sure that the set screw access hole in the hardware unit aligns with the bottom of the mounting plate. Then use the included Allen wrench to tighten the set screw and fasten the pieces together.

SPECIAL CONSIDERATIONS:

The set screw is intentionally designed to be slightly off-center from the set screw access hole in the hardware unit. As the set screw is tightened, the pieces will draw closer together and tighten.

The Hoff hardware unit can be mounted in alternative orientations if desired.

If mounting to a surface other than drywall, alternative hardware may be required. Consult a professional for further direction.