


JUNIE WALL HOOK


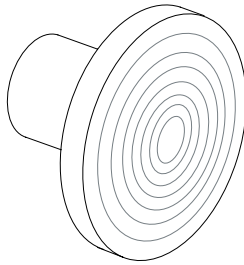


Recommended Tools/Materials

- Pencil
- 3/16" and 1/2" drill bit
- Power drill

This Product Includes

- Junie hook
- Threaded rod
- Stud rod
- Zip toggle

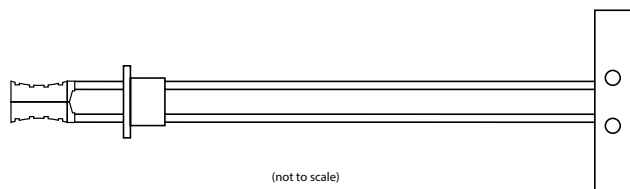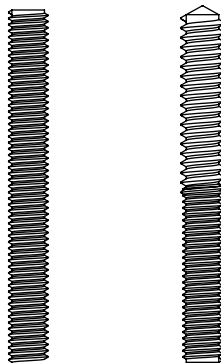

Installation Instructions

1. Determine hook location and mark with a pencil.

Choose the version of step 2 that works best for your wall type.


NOTE: Illustrations 2a-2e only apply to hollow wall installation.

2. **FOR HOLLOW WALL INSTALLATION,** Drill $\frac{1}{2}$ " hole in desired hook location. Install Zip toggles. Once secure, install the threaded rod (threads are the same entire length of the rod) by turning clockwise leaving $\frac{7}{8}$ " of the threaded rod exposed.


2a.




2b.

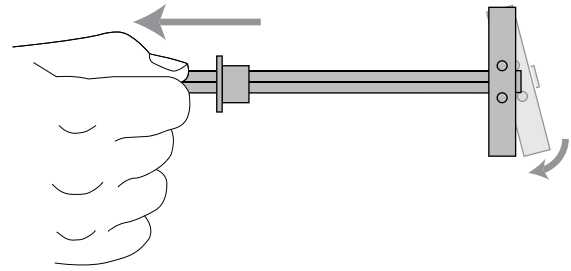


2c.

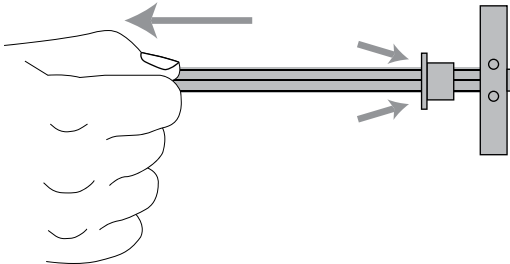

2d.

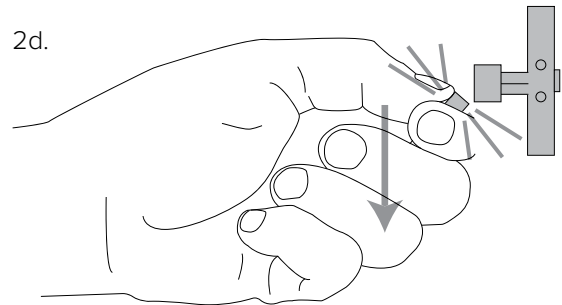

2e.

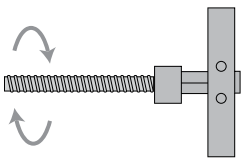

2. **FOR STUD MOUNTING LOCATIONS,** drill a $\frac{3}{16}$ " pilot hole approximately $\frac{1}{2}$ " deep into stud. Install the stud rod, pointed end first into the stud. Leave approximately $\frac{7}{8}$ " of the stud rod exposed.

3. Place the Junie wall hook onto the exposed side of the threaded rod and tighten clockwise until the hook is tight against the wall.

