

KAI BED

Recommended Tools/Materials

- Phillips screwdriver or drill
- Socket set (1/2" socket) or 1/2" ratcheting hex wrench

This Product Includes

- Headboard with two L-brackets attached
- Footboard with two L-brackets attached
- Four 2" Wood Slats
- Two upholstered plywood platform boards
- Two side rails
 - attached with six 1" hex head bolts (3 on each side)
 - attached with four evenly spaced metal slat holders

Assembly Instructions

Note: We recommend assembling this item with a friend.

1. Prepare the Headboard

Stand the headboard upright. Loosen (do not remove) the four hex bolts on the headboard—two on each side—so there's enough space to attach the side rails.


2. Attach First Side Rail

Slide one side rail down onto the headboard so its L-bracket fits under the three hex bolts. Tighten those three bolts to secure the rail.

3. Attach Second Side Rail


Repeat Step 2 for the other side rail. Now both side rails should be attached to the headboard.

Front View of Headboard

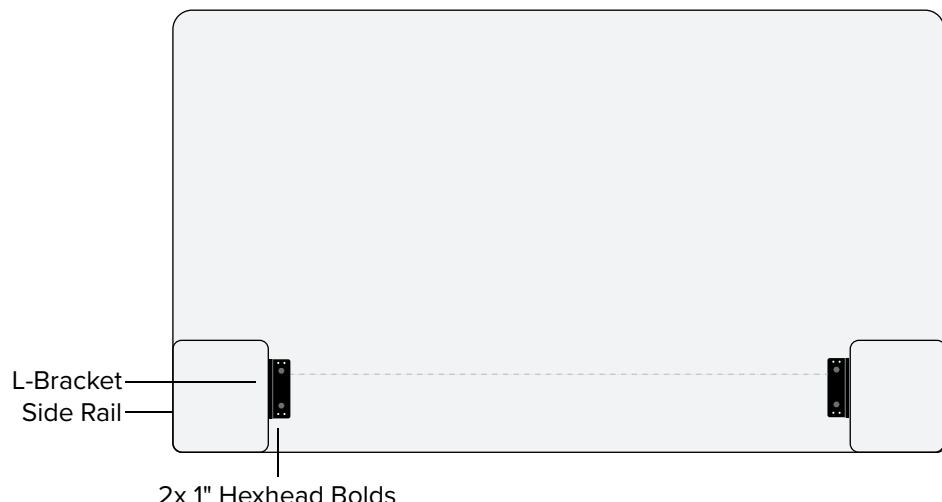

4. Attach the Footboard

Keep the headboard and side rails upright and level. Attach the footboard to the side rails by placing the footboard under then up securing the four bolts on the side rail.

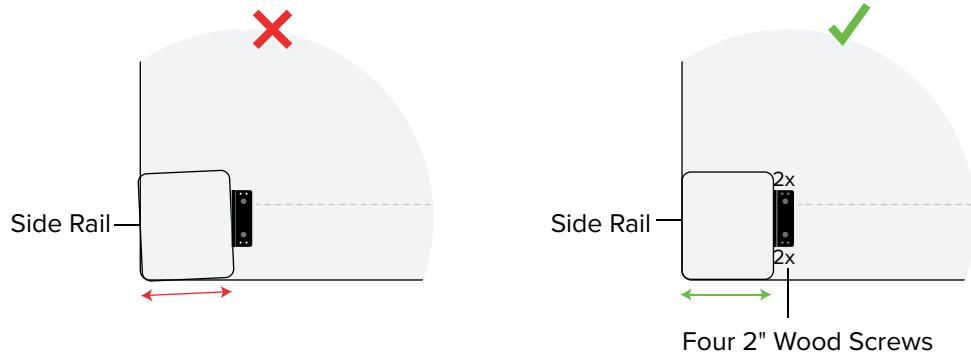

5. Secure the Frame Once the footboard is in place and level, tighten the L-brackets by driving in 2" wood screws on both the headboard and footboard. Use all 16 screws to make sure the bed is secure.

6. Install the Platform System

Place the four wooden slats into the metal holders. Then lay the upholstered plywood boards on top to complete the support system.

