


LINEAR FLOATING LINEN CABINET

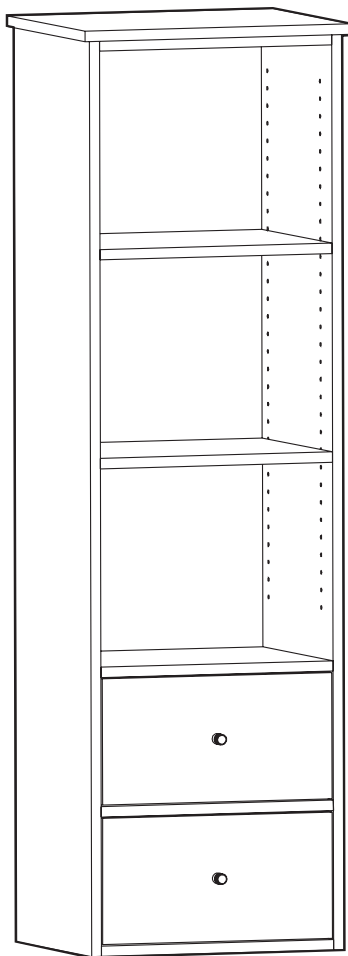

Recommended Tools/Materials


- Drill
- 1/8" drill bit
- stud finder
- level
- pencil

This Product Includes

- French cleat

Installation Instructions

- 1 Remove the two screws holding the bottom portion of the wood french cleat to the case. Screws can be discarded.

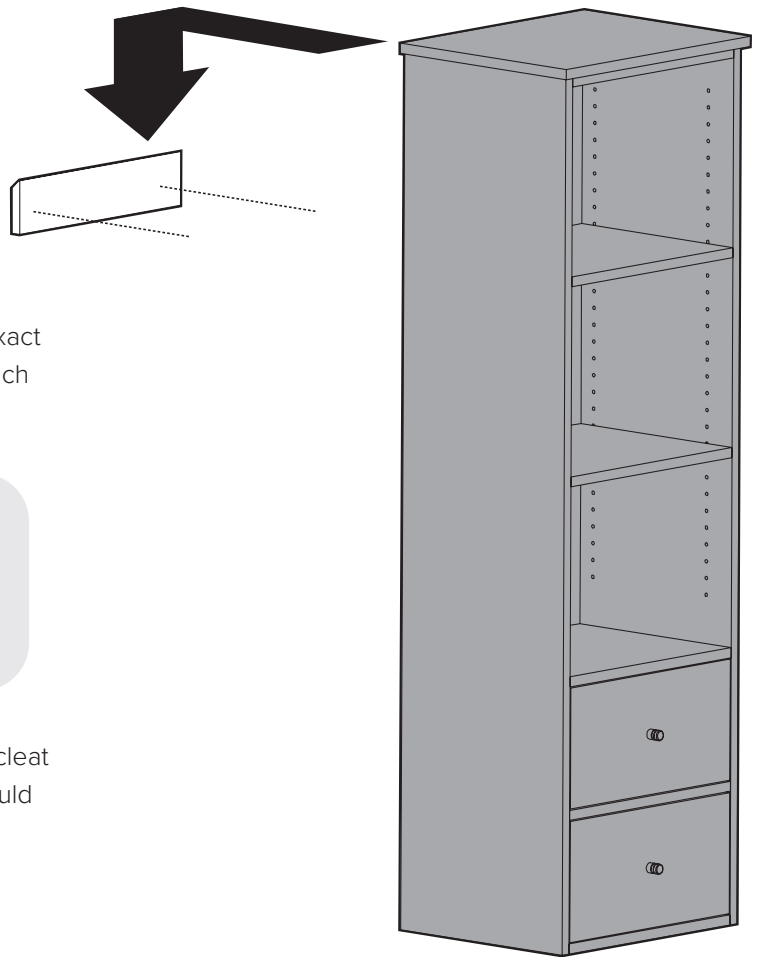

- 2 Use a level and a tape measure to determine the exact position to install the lower portion of the wood french cleat to your wall. Mark the wall accordingly.

Note: The hardware you choose to mount the French cleat will depend on the wall material you are mounting to. Room & Board does not supply wall-mounting hardware.

- 3 Pre-drill and counter-sink pilot holes in your french cleat before installation. Location of pre-drilled holes should be determined by stud location.

- 4 Lift the cabinet up onto the french cleat so that the two angled components meet.

CAUTION

If more than one wood stud cannot be used, Room & Board recommends adding appropriate blocking inside the wall.

