


### LINEAR WALL-MOUNTED SHELF


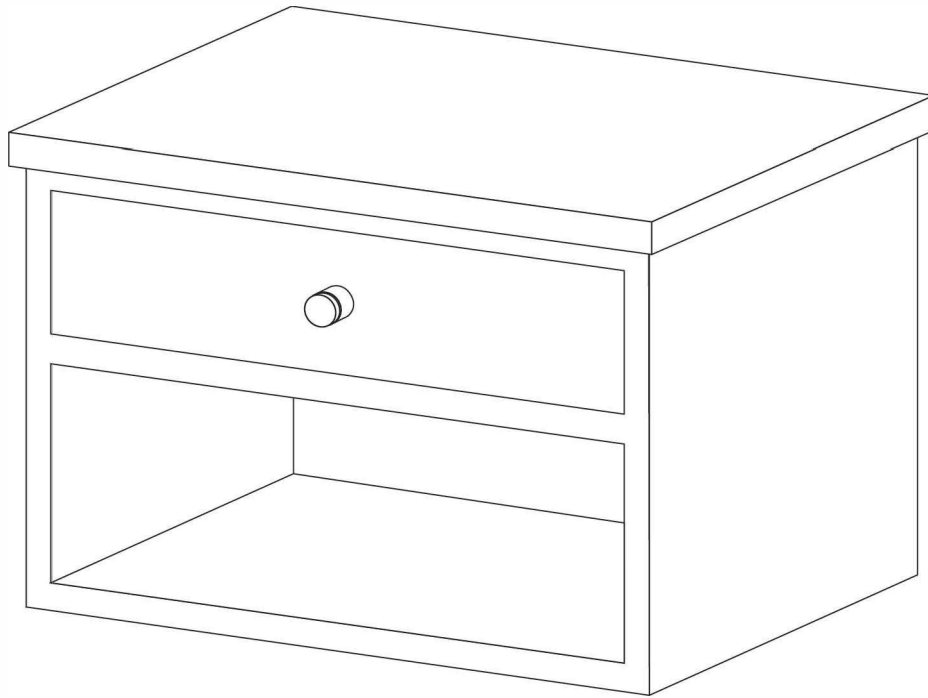


#### RECOMMENDED TOOLS AND MATERIALS:

Pencil  
Tape measure  
Level  
Phillips screwdriver (if installing through drywall)  
#2 square drive screwdriver (if installing through wood stud)

#### THIS PRODUCT INCLUDES:


- A. - Wall cleat
- B. - Drywall fasteners (x9)
- C. - Wood stud fasteners (x2)



(hardware not to scale)

- 1 Determine location of the nightstand by holding it in place against the wall. Use a level to ensure placement. Then use a pencil to mark on the wall just above the top center of the nightstand. Set the nightstand on a soft surface for the meantime.
- 2 Measure 1 ½" down from the mark on the wall and mark this spot with a pencil. (Figure 1)

Figure 1

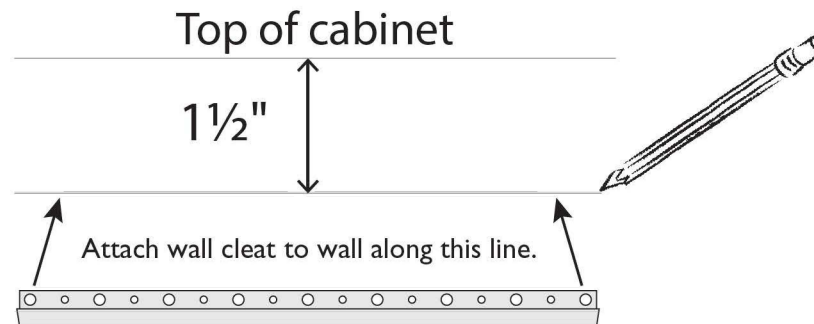

- 3 Line up the center hole of the wall cleat over the second mark on the wall. Attach wall cleat to wall with either drywall fasteners or wood stud fasteners, depending on the wall.  
*Note: For drywall, install the wall cleat with 7 drywall fasteners. For wood stud wall, install the wall cleat with 2 wood stud fasteners.*
- 4 Careful not to scratch the wall, slide the nightstand back to desired location so the cleat on the back of the nightstand hooks over the wall cleat until secure.

### SPECIAL CONSIDERATIONS:

Nightstand has 50 lb. weight capacity.