


ORIAN BED

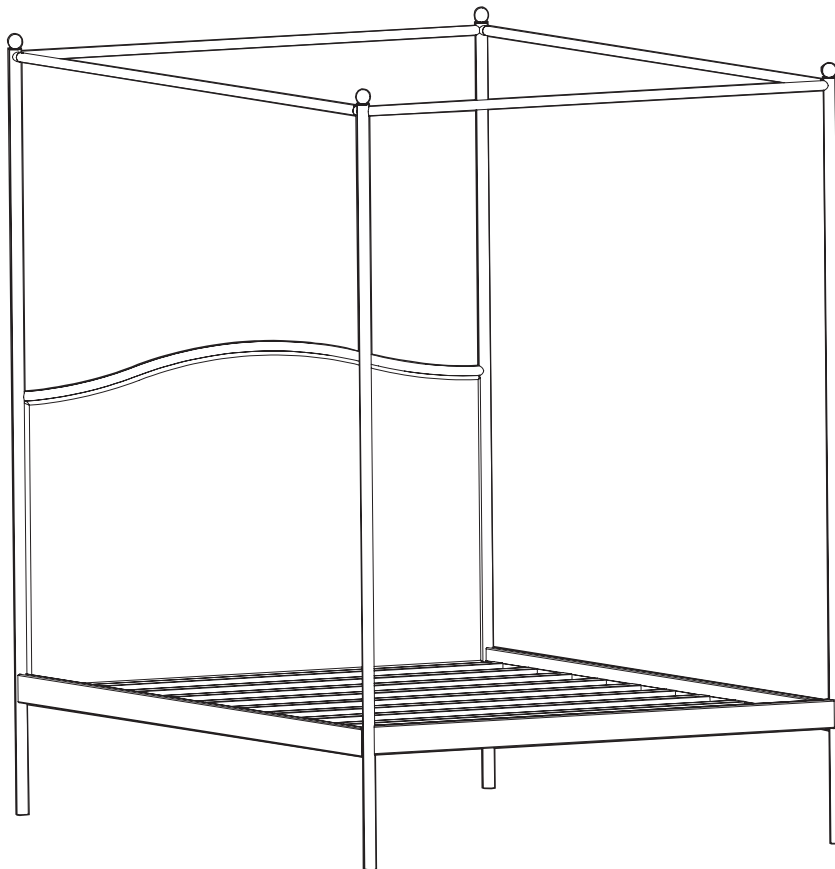

Recommended Tools/Materials


- Rubber mallet
- Power drill with #2 Phillips bit
- ½" pan head self-tapping screws

This Product Includes


- Orian headboard
- Orian footboard
- Orian headboard insert
- Orian side rails (x2)
- Orian canopy crossbars
- Allen wrench
- Steel bed slats (x10 for Twin/Full; x12 for Queen/King/California King)

Installation Instructions


- 1 Connect a side rail to the headboard by inserting the interior tab at the end of the side rail into the rail mount bracket on the headboard. Push the side rail down to lock it in place, using a rubber mallet if necessary.

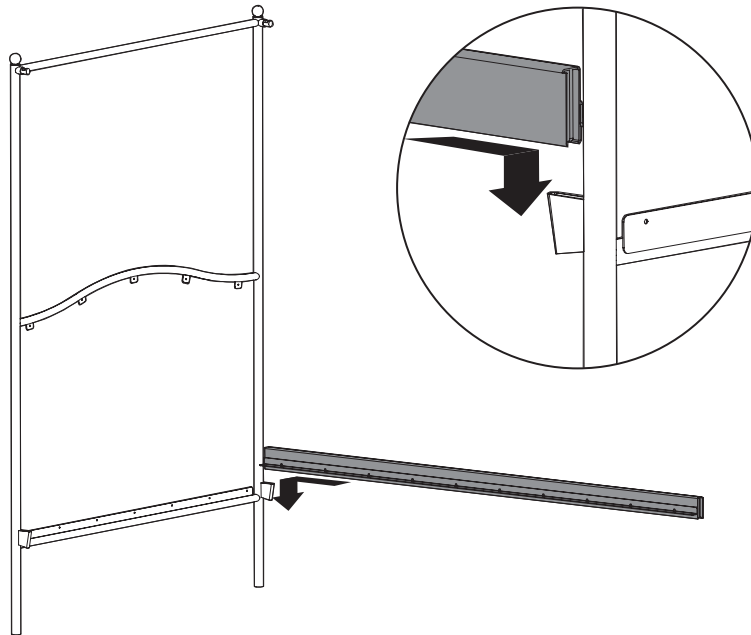


- 2 Repeat the process to connect both side rails to the headboard and footboard.

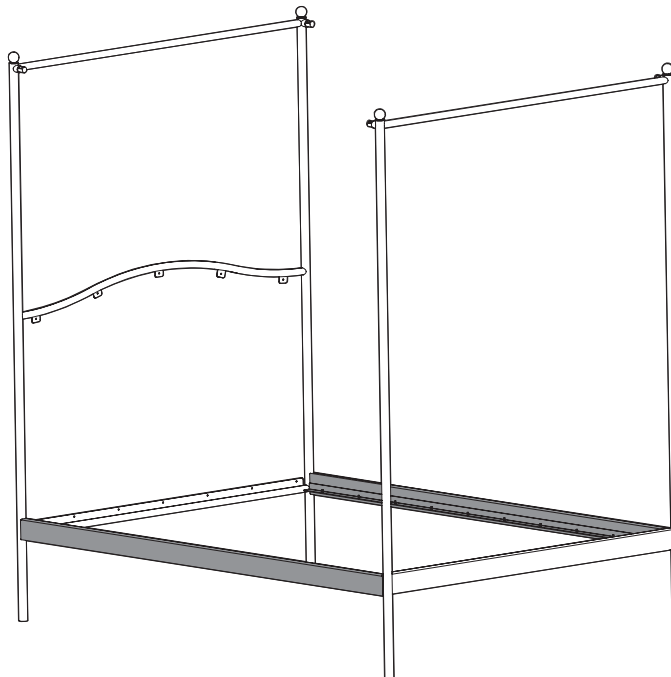

- 3** Loosen the set screws at each end of both canopy crossbars. Connect the open end of each canopy crossbar to the mounting posts at the top of both the headboard and footboard. Use a rubber mallet if necessary. Rotate the canopy crossbars so that the set screws are at the top, then use the included allen wrench to tighten all 4 set screws to lock the crossbars in place.

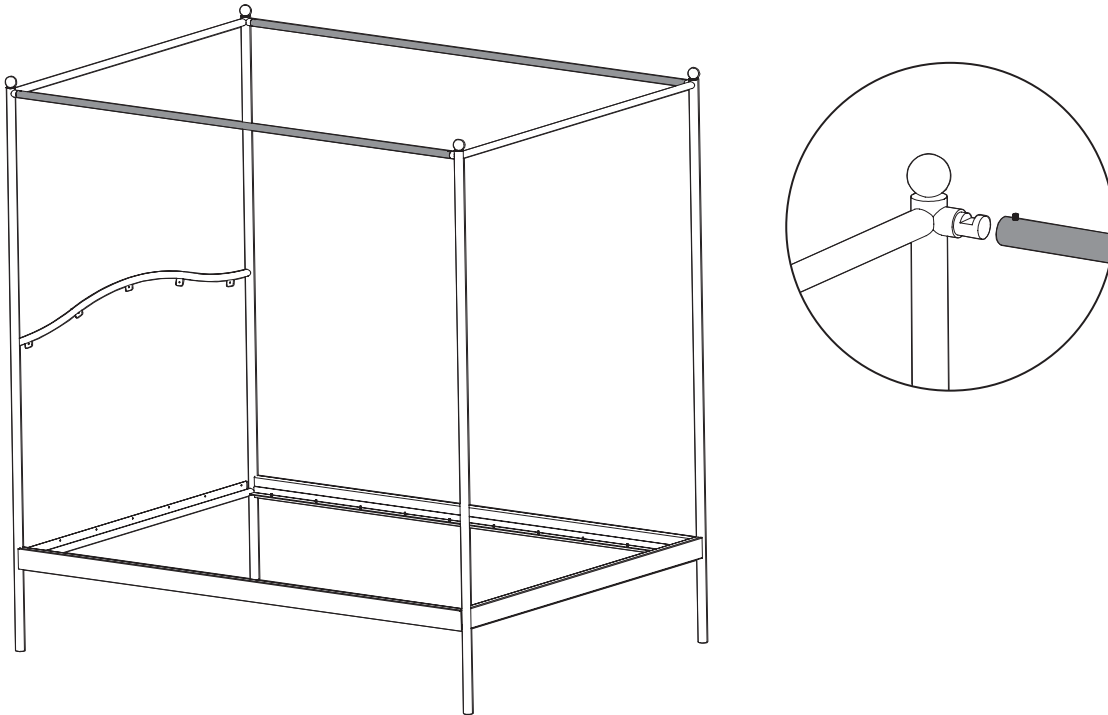

- 4** Position the headboard in place, ensuring it is visually level and in its most upward position. Use ½" pan head self-tapping screws to fasten the headboard panel to the frame through each of the tabs along the back and lower crossbar.

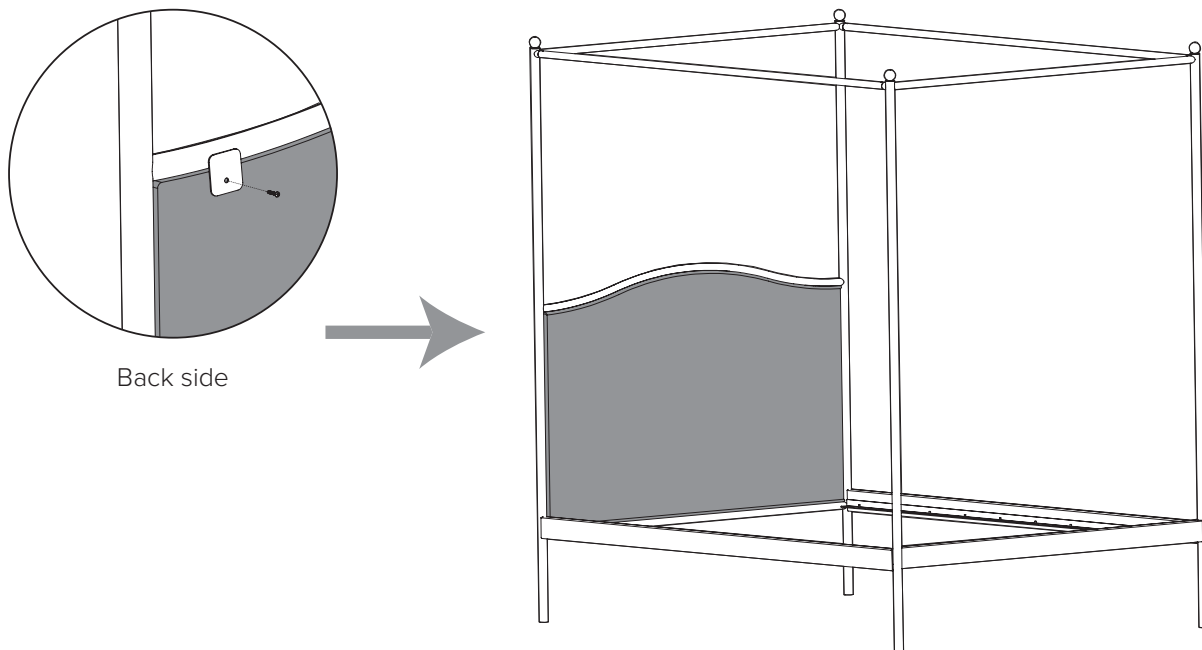

5

Add the steel bed slats. Place your mattress on top.

