

# Pike Chair/Stool with Metal Base Assembly Instructions

## List of parts:

- 1 seat frame
- 1 leg assembly
- 4 1/4" x 13mm screws

## Tools needed:

Phillips screwdriver

**Note:** Do not use power tools.

## Directions:

1. Rest seat frame upside down on a clean, soft surface so seat is level.
2. Place leg assembly upside down so holes on leg assembly match up with mounting bracket. Make sure arrow on leg assembly is pointed towards the front of the seat when attaching the leg assembly to the seat (Figure 1).
3. Attach leg assembly to mounting bracket on seat frame using the 4 screws provided.

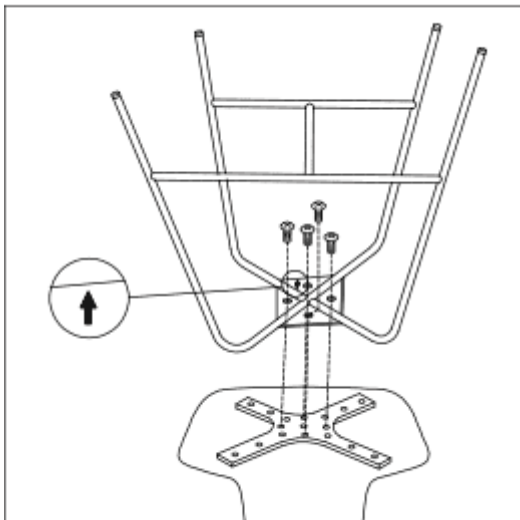


Figure 1