

assembly instructions: Cato chair and stool with metal base



List of parts:

- (1) Seat frame
- (1) Leg assembly
- (4) ¼" x 13mm hexagonal screws

Tools needed:

Allen wrench

Note:

Do not use power tools.

Directions

1. Rest the seat upside down on a clean, soft surface so the seat is level.

2. Tilt the leg assembly so the front legs are elevated away from the seat frame by about six inches (Figure 1). Apply a moderate amount of force to insert the metal pins on the back legs into the holes on the back side of the seat. Note: You may

need to gently push the legs closer together to align the pins with the holes; grip from the end that will rest closer to the floor.

3. Align the front legs with the front holes in the seat. As before, you may need to gently push the legs closer together or farther apart to align the pins with the holes. Apply the same moderate amount of pressure as you did earlier to insert the legs into the frame.

4. While pushing down on the leg assembly so it is flush with the seat, use the four provided screws to screw the leg assembly onto the seat.

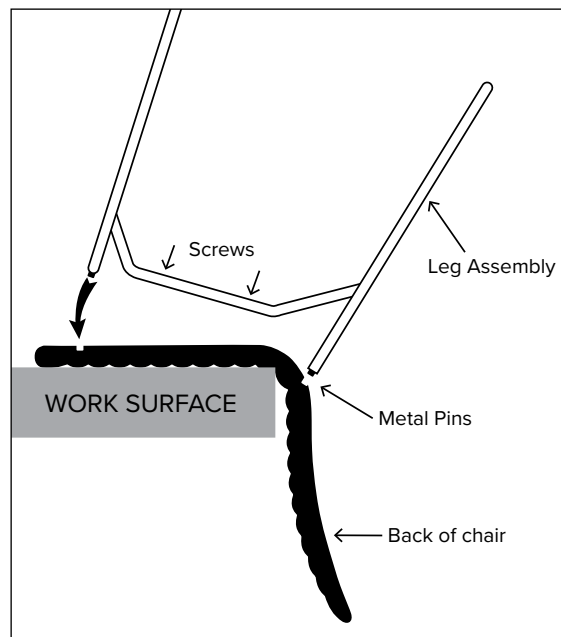


Figure 1

