

INCLUDED PARTS

P1R

P1L

P1L & P1R

1x

P2R

P2L

P2L & P2R

1x

P3

P3

P3

2x

P5

P5

P5

1x

P4R

P4L

P4R

1x

P6

P6

P6

1x

P10

P10

P10

1x

P9

P9

P9

1x

P8B

P8B

P8B

1x

P8A

P8A

P8A

1x

P7

P7

P7

3x

BB

BB

BB

2x

MB

MB

MB

15x

16x

GB

GB

GB

17x

23x

1/2" ROUND HEAD

53 / 75

92

15x

14x

7/8" FLAT HEAD

53 / 75

92

25x

31x

1" ROUND HEAD

53 / 75

92

2x

F

F

P5

P5

P4R

P4L

P11

53 / 75

92

1x

2x

P10

P10

P9

P9

P8B

P8B

P8A

P8A

P7

P7

BB

BB

MB

MB

GB

GB

1/2" ROUND HEAD

53 / 75

92

15x

14x

7/8" FLAT HEAD

53 / 75

92

25x

31x

1" ROUND HEAD

53 / 75

92


2x

ASSEMBLY TIPS: 5 Important Points You **NEED** to Read

1. Prior to beginning assembly, please inspect and inventory the parts to make sure you have everything and that nothing was damaged during shipping. If damage has occurred, please take photos and go to loll designs.com/damage. Rest assured we'll get it taken care of straight away!
2. To avoid scratching furniture, assemble on a clean soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in.
3. **Start all bolts by hand to ensure proper alignment and to prevent cross threading.** Then using the Allen Key or Loll Tool, tighten until you feel resistance.
4. Bolts should not be forced, but some components, particularly the blocks will need a bit of muscle to get them together as they are machined for a snug fit. If parts are still not going together, please send us a photo of the part you are having trouble with.
5. You can use a cordless screw gun if you have one and know how to use it. Set the clutch setting at low to medium torque. **We do not recommend using an electric drill without a clutch** to install bolts as you can easily overtighten and damage the product.

BLOCK & BOLT INSTALLATION

Insert bolts through countersunk hole side of blocks as shown below.

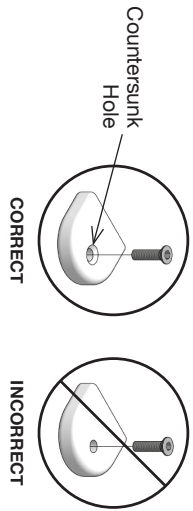

"Loll Designs inspires people to appreciate the outdoors."

Greg Benson - Founder

♻️ RECYCLE THE PACKAGING

We've gone through great lengths to make as much of our packaging as possible recyclable. The cardboard box, paper wrap, filler and paper bags can all go in your recycling bin. The muslin hardware bags replaced plastic bags with the intention of reducing plastic and encouraging reuse. Loll Designs and Planet Earth thank you!

WE WANT YOU TO LOVE YOUR LOLL

For more info and visual aids, watch the assembly videos at www.lolldesigns.com/videos
For product care & maintenance, visit www.lolldesigns.com/care-maintenance
For further lollygagging assistance, please reach out!

+1 877-740-3387
sales@lolldesigns.com

5912 Waseca Street
Duluth, Minnesota 55807

MADE IN THE USA




100% ORIGINAL Member

1% FOR THE PLANET MEMBER #610

it's good to be recycled

ASSEMBLY INSTRUCTIONS & PRODUCT INFO:

RAYO LOUNGE SOFA 53 / 75 / 92

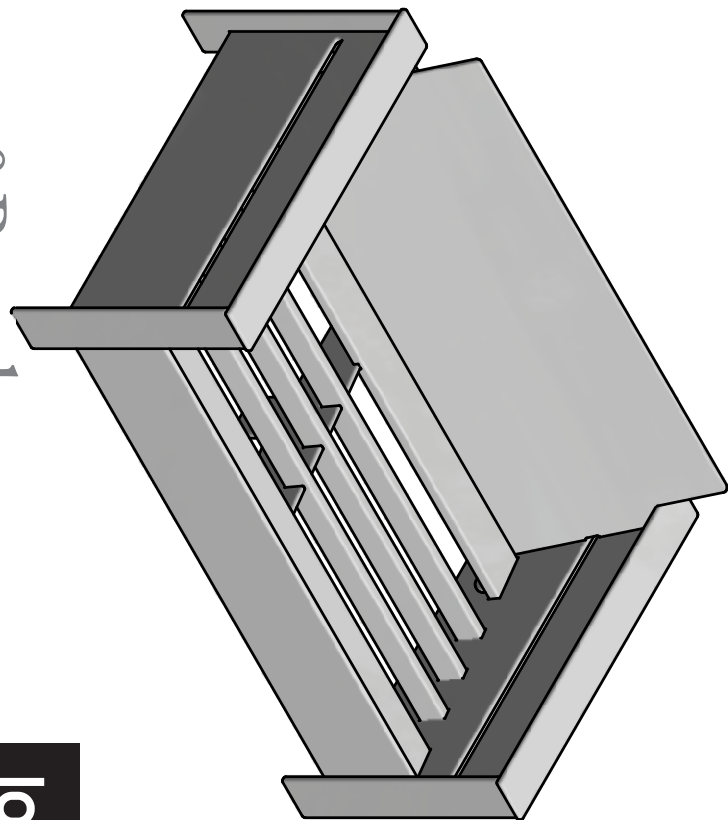



Room&Board

BY:





*Bolts shown actual size.



1

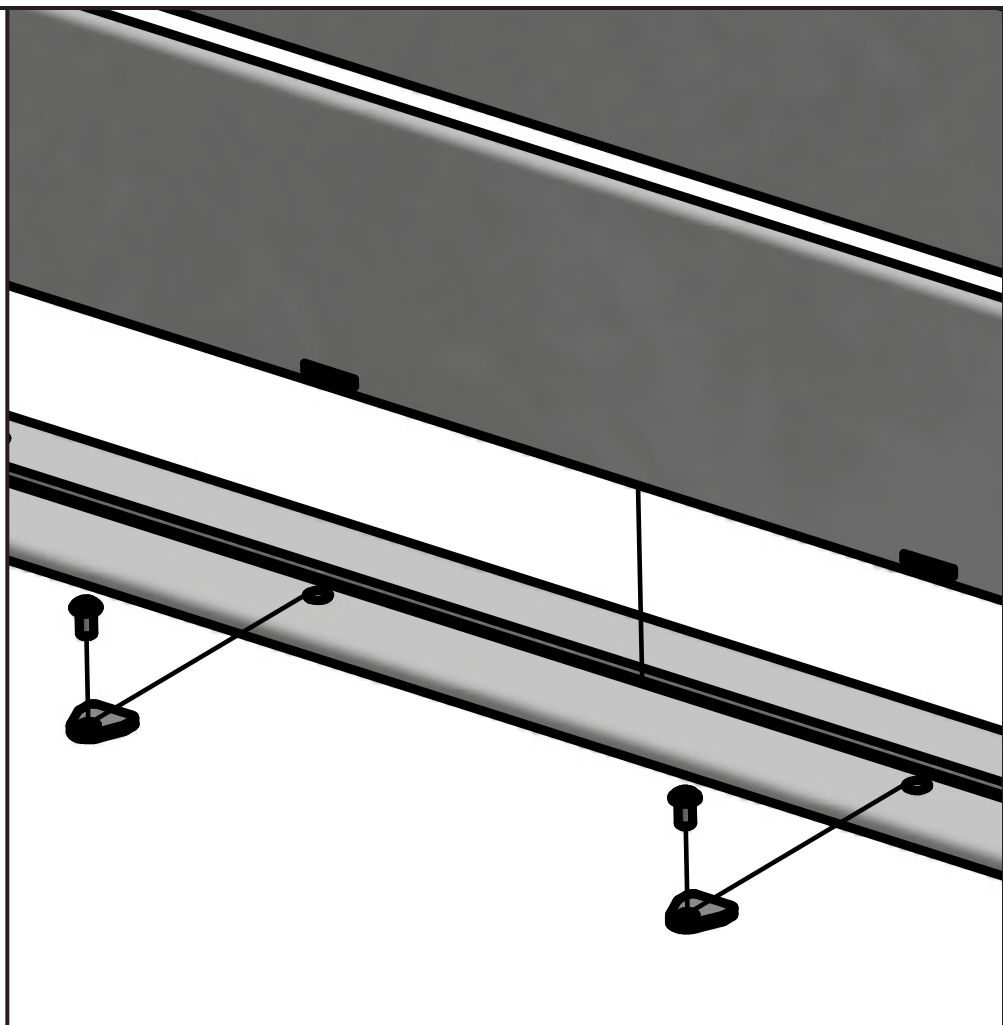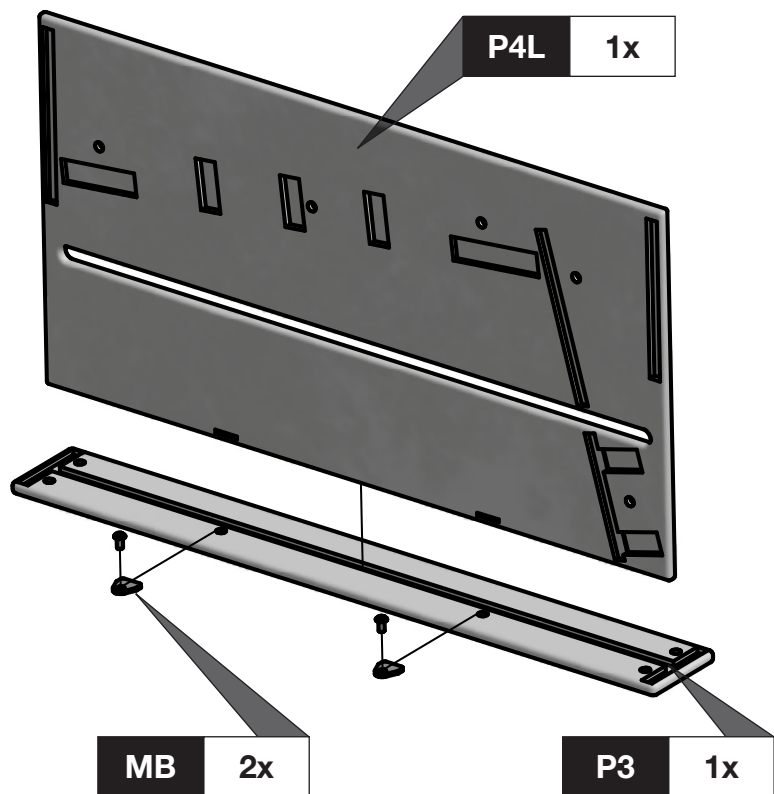

2

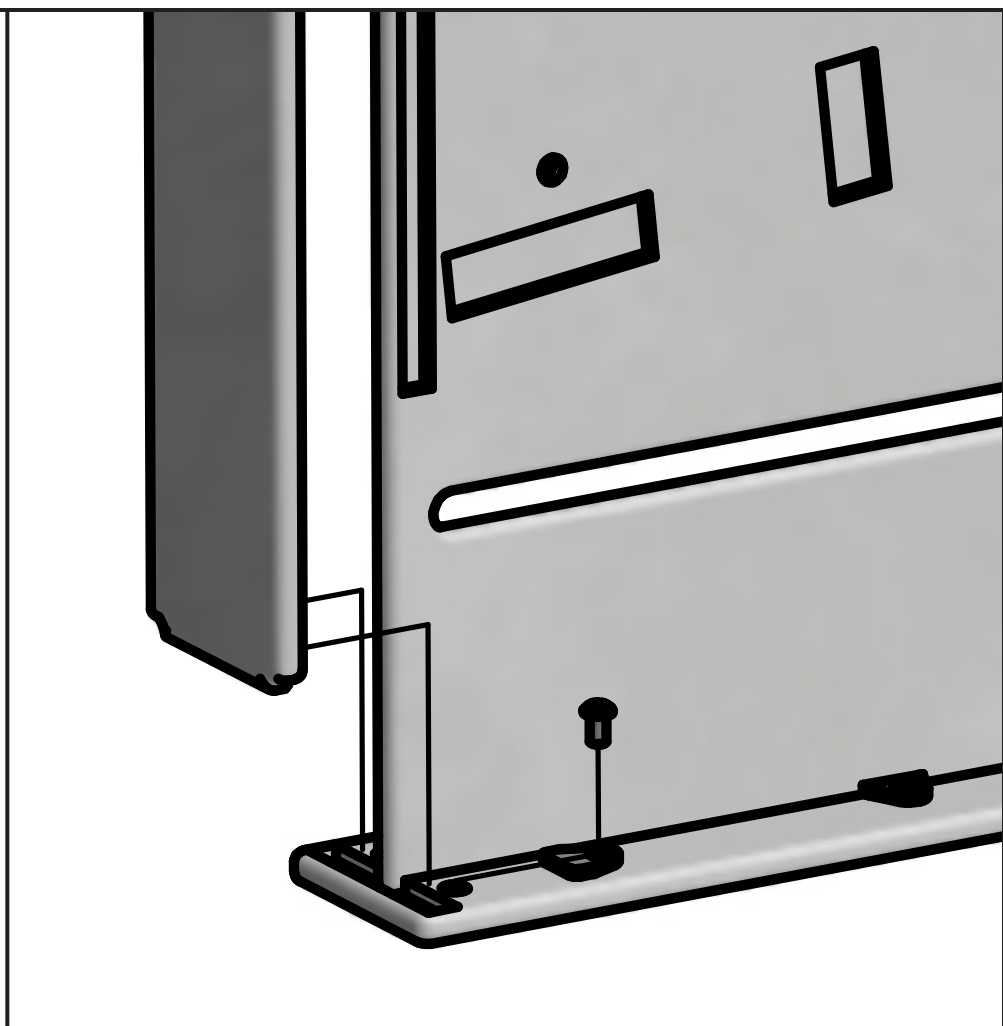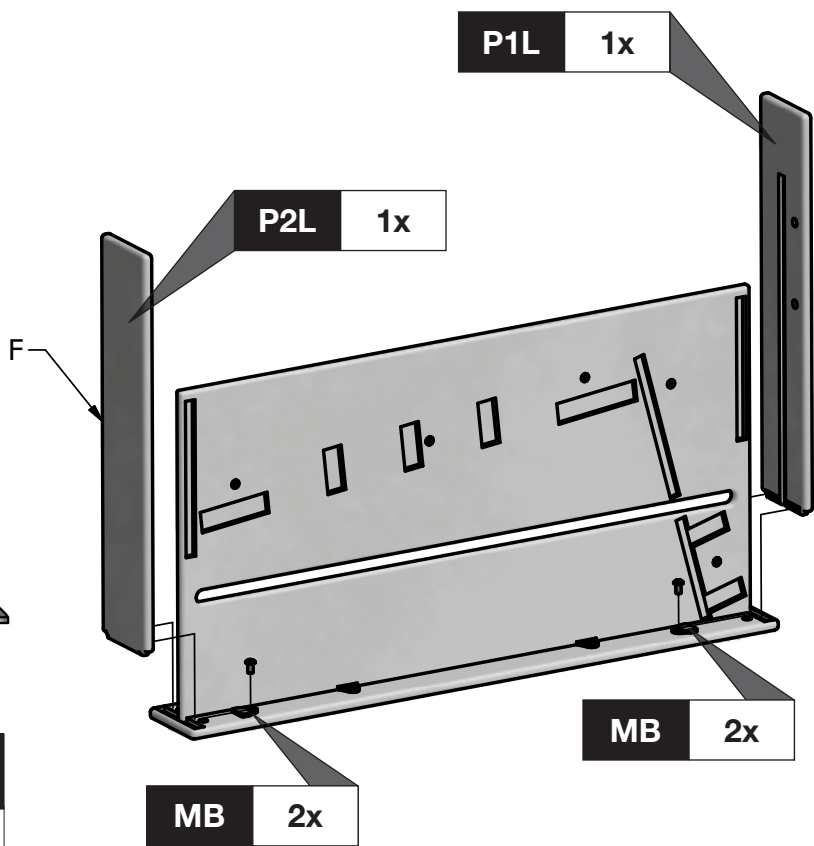

3

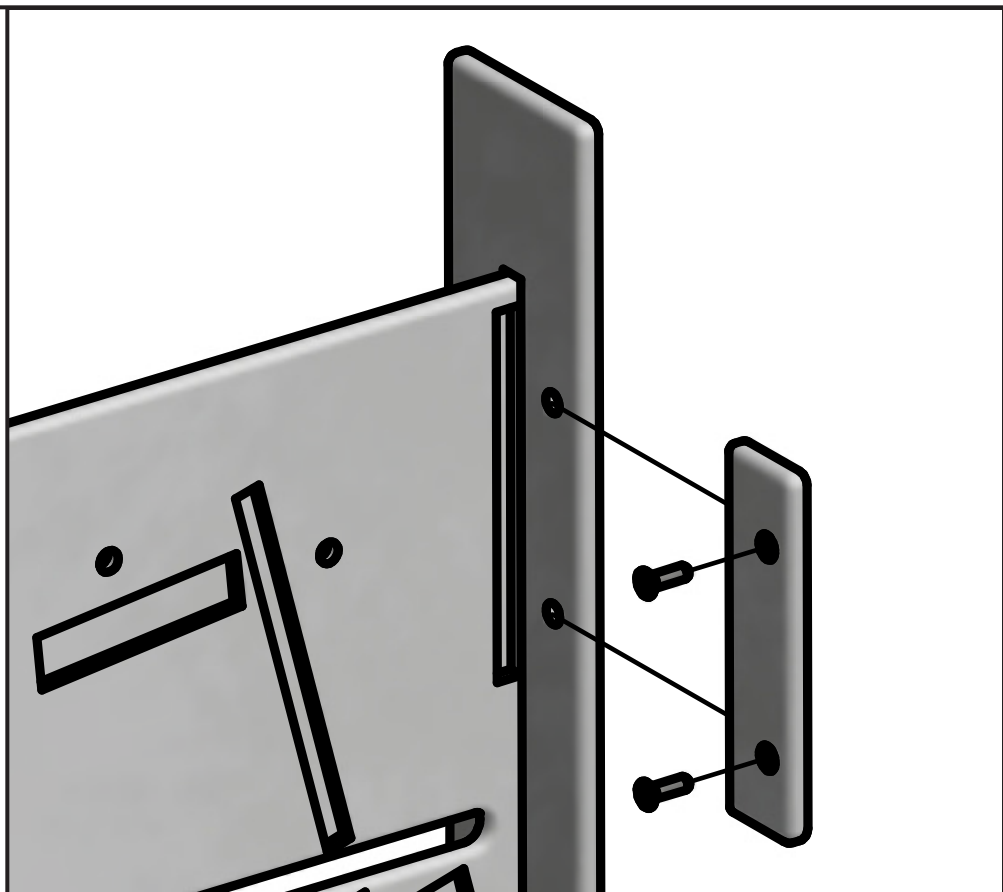
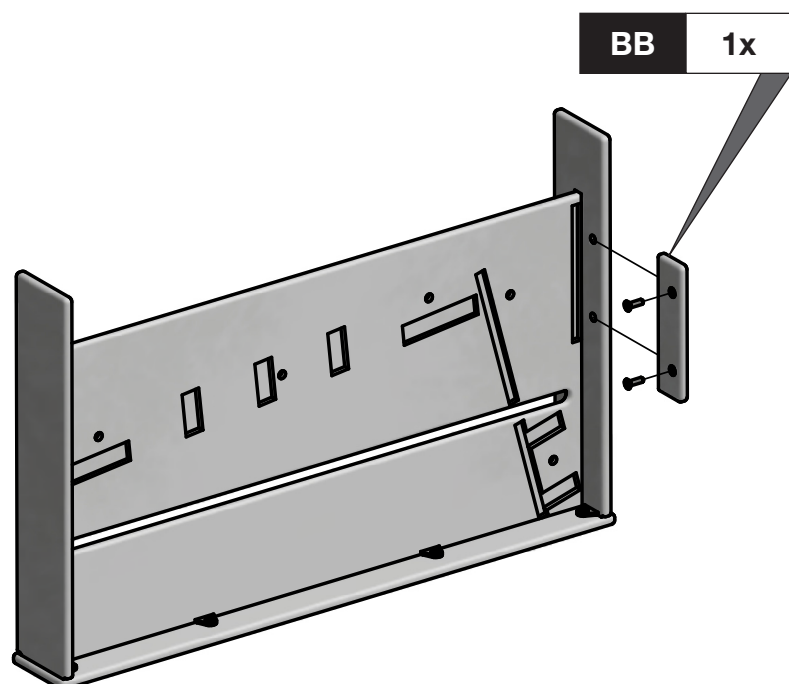


REPEAT STEPS 1-3 FOR OTHER SIDE (P1R, P2R, P4R)

4





7/8"
FLAT
HEAD
2x

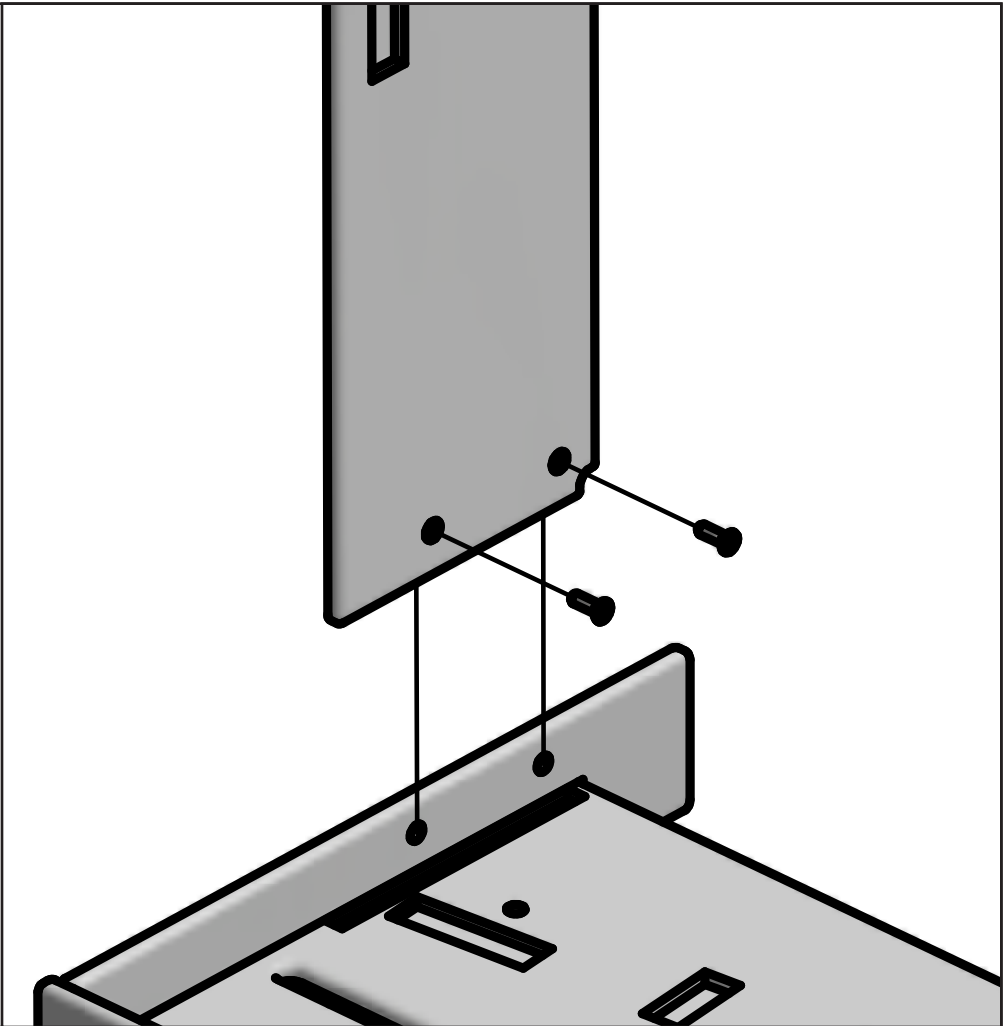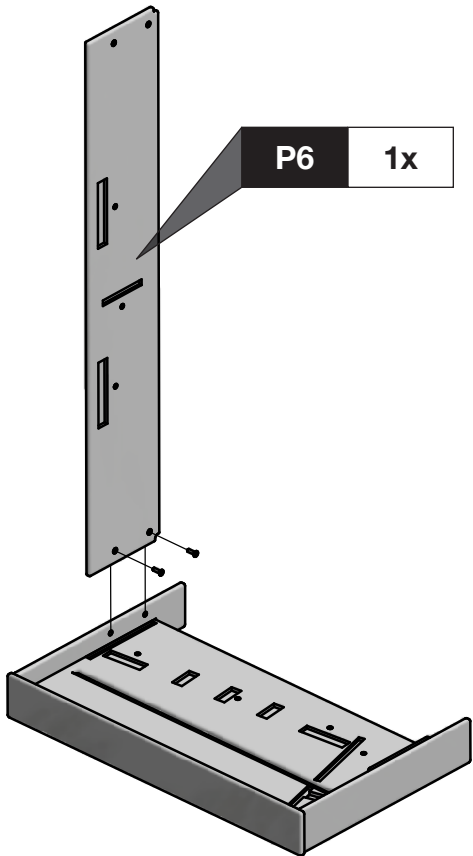

5



7/8"
FLAT
HEAD
2x

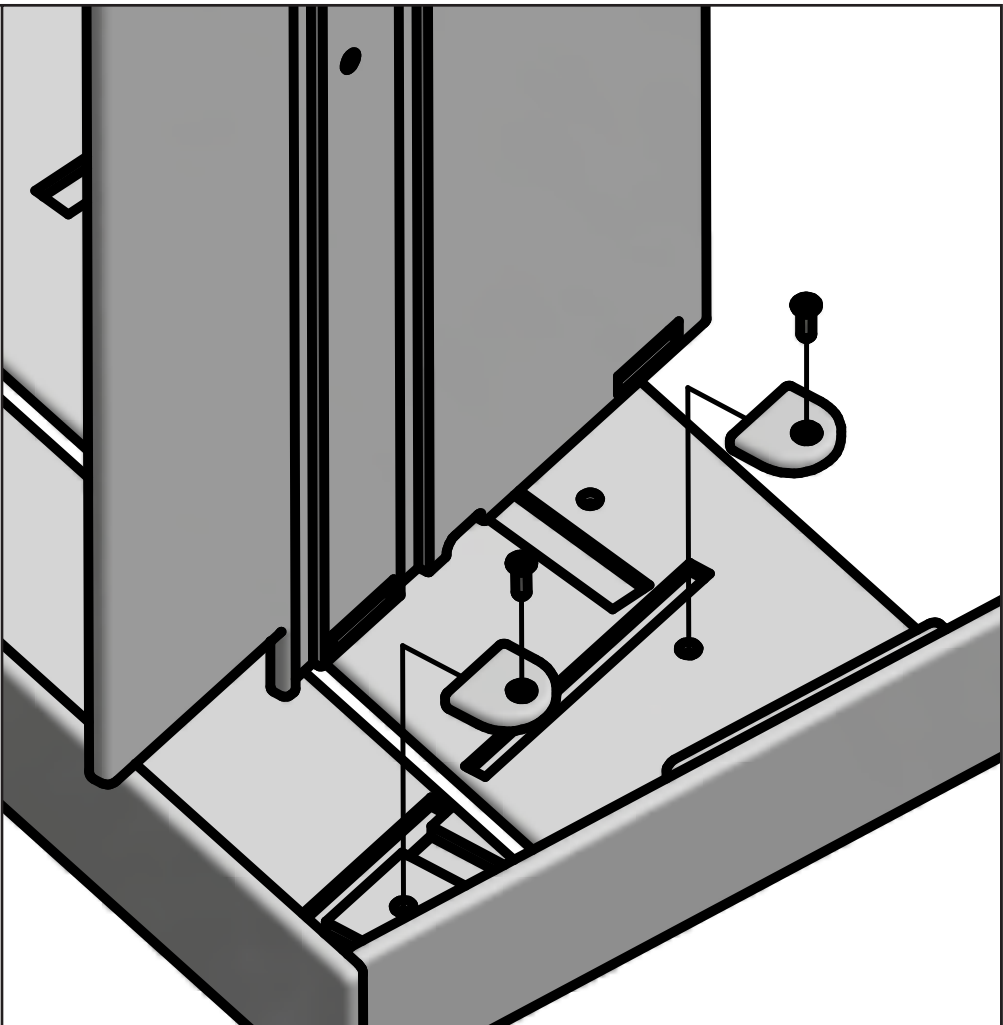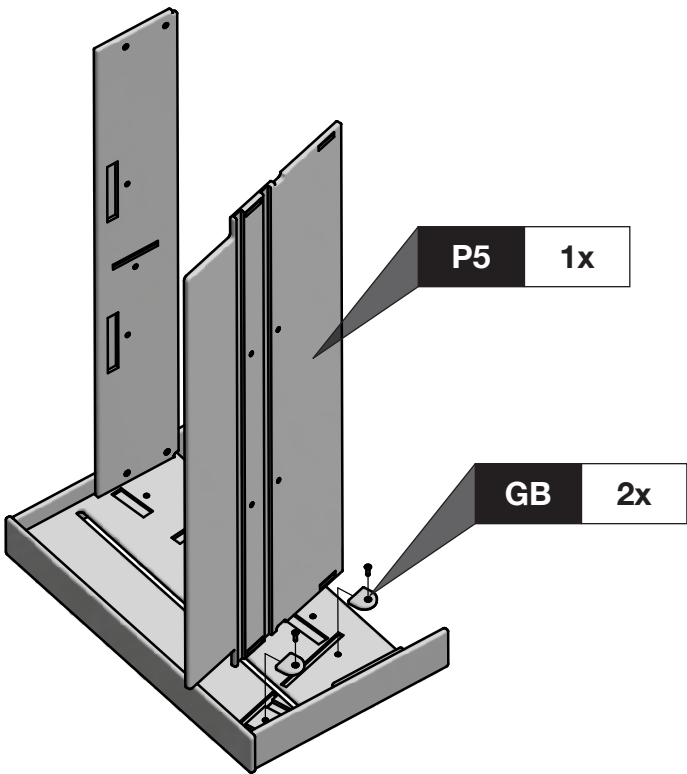

6



| 7/8" FLAT HEAD | |
|----------------------|----|
| 53 / 75 | 92 |
| 4x | 6x |

