


SAWYER WALL SHELF

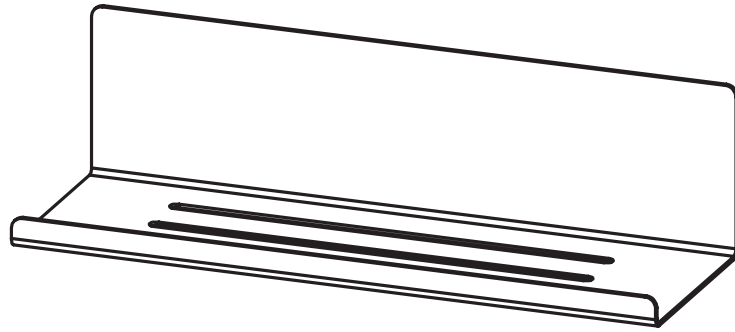

Recommended Tools:

- Tape measure
- Masking tape
- Level

This Product Includes

- Sawyer shelf
- Adhesive primer


Installation Instructions

NOTE: Before adhering, the bonding surfaces must be clean and dry. We recommend using a shower/tub cleanser first. Then using rubbing alcohol to clean any residue left over from the cleanser. **Shelf must be installed on a completely flat surface to ensure it remains secure.**

- 1 To apply the primer, apply pressure on the black dot on the primer tube until you hear a crack. Shake well until the sponge tip is saturated. Mimicking the lines of tape on the back of shelf, apply the primer onto your shower surface liberally, in a circular motion. Wait 5 minutes for the primer to dry.



- 2 Remove the backing from tape, hold the shelf in place with a level and press the shelf onto the lines of primer. Hold the shelf in place firmly for 30 seconds, applying pressure equally to entire back.

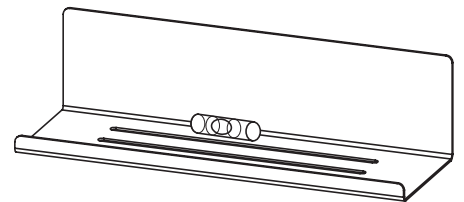

- 3 Use masking tape to hold shelf in position for 24 hours. Do not use shower for at least 24 hours.

NOTE: After installing the shelf, the bond strength will increase as the primer and tape unite. At room temperature, 90% of the ultimate bond strength will be achieved after 24 hours, and 100% after 72 hours.

NOTE: Acetone can help remove the tape if necessary.

