


### TANDEM WALL MOUNT FOR PENDANTS

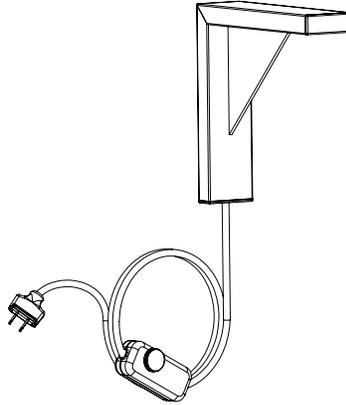

## CAUTION:

- READ these safety instructions entirely prior to installation.
- DO NOT plug in the tandem pendant mount until AFTER installation is complete and all exposed wires are properly managed

#### RECOMMENDED TOOLS AND MATERIALS:


Pencil  
1/16" drill bit

#2 Phillips screwdriver  
Power drill


Tape measure  
Electrical tape

#### THIS PRODUCT INCLUDES:

- A. - Drywall anchors (X2)
- B. - Wire nuts (X2)
- C. - Mounting screws (X5)
- D. - Plastic drywall anchors (X3)
- E. - Tandem wall mount assembly
- F. - Cord clips (X3)

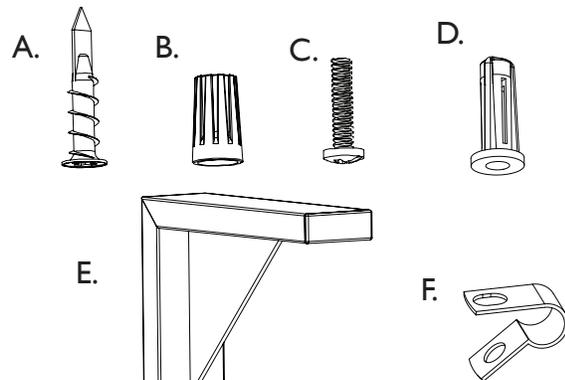

(hardware not to scale)

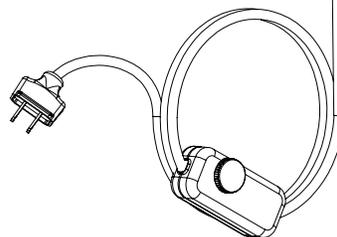

1

Measure where you want to place the Tandem wall mount then mark your wall with the location of the screw slots (located on the back of the wall mount.)

2

Using a power drill fitted with a 1/16" bit, drill pilot holes for the wall anchors at your marks. Insert the wall anchors into the pilot holes with a screwdriver or power drill. Ensure the anchors are flush with the wall.

3


Insert a mounting screw into each anchor. NOTE: Leave a gap between the anchor and screw head that is big enough for the wall mount to slide between.

4

Your pendant must be connected prior to attaching the Tandem wall mount to your wall. To begin, determine the desired cord length for your pendant and mark it with a piece of tape.

5

Insert the cord from the bottom of the wall mount and out the back opening as shown below. Tie a knot in the pendant cord just above your tape mark then remove the tape. Leave 8"-10" of cord beyond the knot to finish assembly. Cut excess cord.

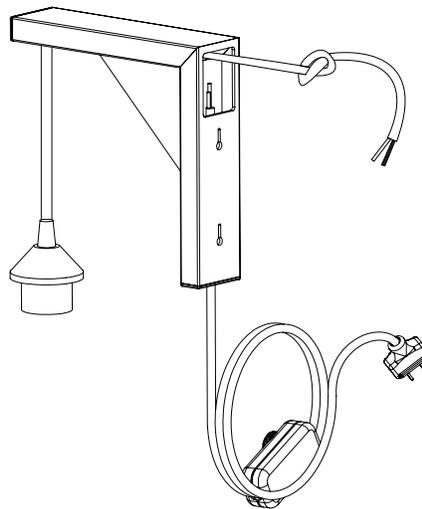

6

Starting at the cut end of the cord, carefully strip each cord's outside insulation, exposing approximately 1/2" each of internal wire. (If your pendant has a green ground wire, cut it off entirely as the pendants are not individually conductive.) Match the colors of the pendant wires and wall mount wires then use the wire nuts to connect them.

7

Now that your pendant is connected to the wall mount, hang the entire assembly on your wall by inserting the anchored screws (from Step 3) into the screw slots on the back of the Tandem wall mount. Slide the wall mount down to lock into place.

### SPECIAL CONSIDERATIONS:

Alternative hardware may be required when mounting to a surface other than drywall. Cord clips, plastic drywall anchors and screws are provided for pendant cord management when using the Tandem wall mount. Consult a professional if you have any questions regarding proper installation.