


URSA SCONCE

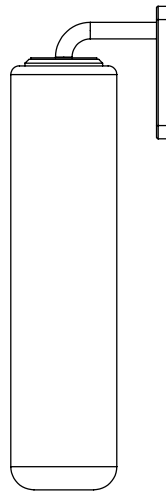


Recommended Tools/Materials

- Electrical tape
- Wire strippers
- Medium flat head screwdriver
- Wire cutters
- Tape measure

This Product Includes

- A. Backplate assembly
- B. Ursa Sconce
- C. Wire lever nuts (x2)
- D. Mounting screws (x2)
- E. Allen wrench

NOTE: Not intended for horizontal hanging

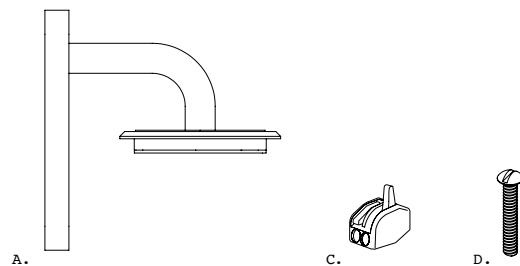


NOTE: Shut off main electrical supply from the main fuse box/circuit breaker. It is recommended that a licenced electrician install this fixture.


Installation Instructions

1. Use wire strippers to remove the outer protective covering from the wires. Then, using the included wire lever nuts, connect the white and black wires from the backplate assembly to the corresponding wires in the junction box through the crossbar.


2. Neatly tuck the excess wire into the junction box. Lift the crossbar to the wall and secure it in place using the mounting screws.

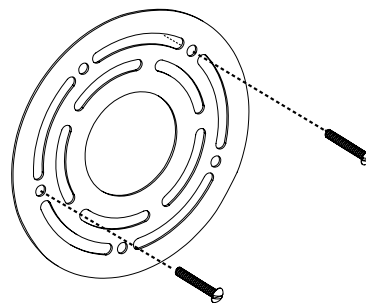

3. Position the backplate assembly over the crossbar and tighten it securely with the Allen wrench.

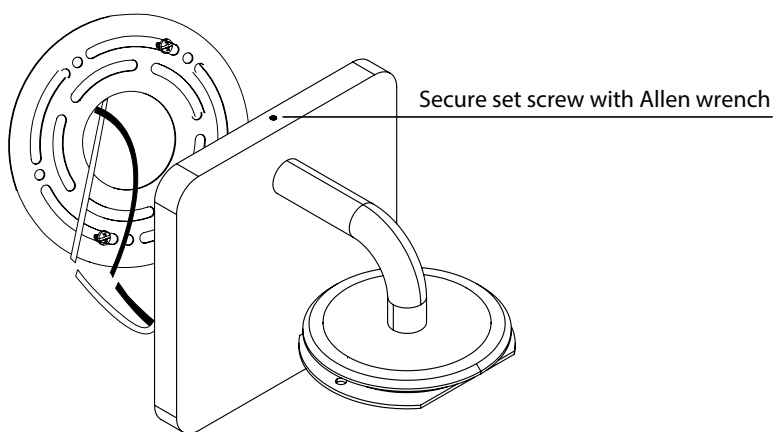

4. Insert the bulb into the socket, then carefully screw the glass shade onto the threaded bracket until secure.

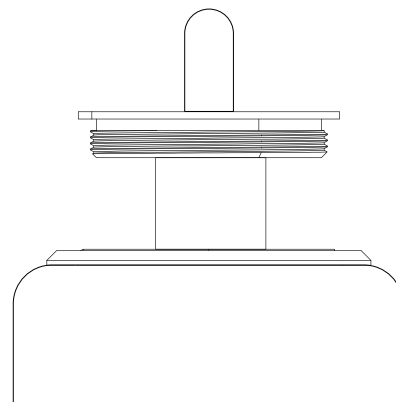

5. Restore power to the installation site.