

Keep these instructions for future use

## AMHERST REFRIGERATION CABINET

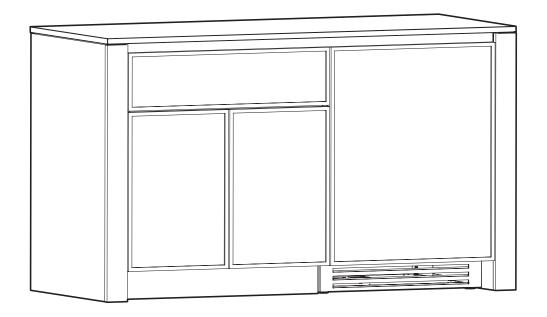



Please reference the included True Refrigeration Install Guide & User Manual for important warnings.

## Recommended Tools and Materials

- Screwdriver or power drill
- Quick-clamp
- #2 Square Driver Bit


Note: We recommend assembling this product with two people.

## This Product Includes


- A. Cabinet
- B. Shipping support crossbar
- C. Shipping screws (x4)
- D. Refrigerator

- E. Refrigerator cover panel
- F. Allen wrench
- G. Allen bolts (x4)
- H. Washers (x4)

Remove shipping support crossbar and tack glides. Use a screwdriver or drill to remove the 6 tack glides on the bottom of the case. Use a screwdriver or drill to remove the 4 screws that connect the temporary shipping support crossbar to the cabinet. The tack glides, crossbar and screws can be disposed of; they are only used for shipping purposes.

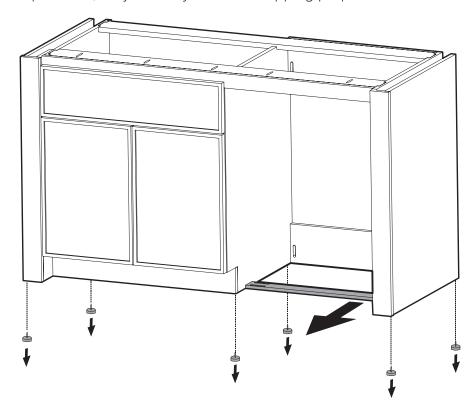


Insert refrigerator. With the unit near its final position but far enough away from the wall to access the cabinet's back, slide the refrigerator into place. The leveling feet on the bottom of the refrigerator can be used to tune the fit and stability.

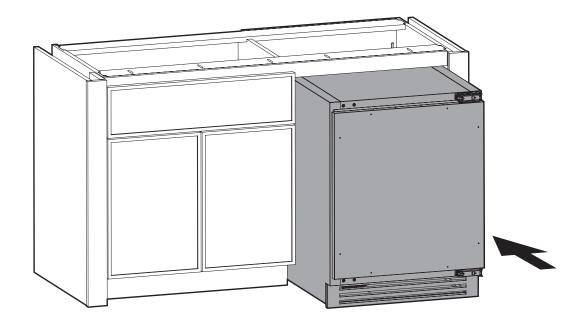

3


Secure refrigerator. Using the included allen wrench, 4 allen bolts and 4 washers, fasten the refrigerator to the back of the cabinet using the 4 vertical slots in the cabinet that align with the threaded inserts on the back of the refrigerator.

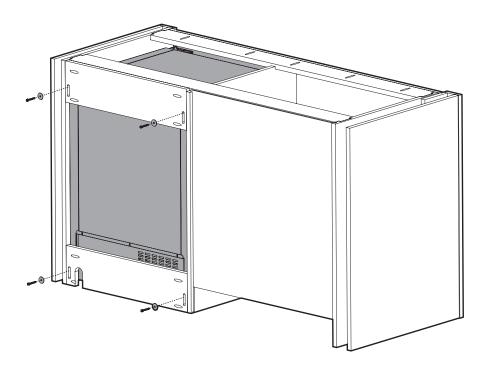




**Instructions for door panel.** Visually align and center the refrigerator cover panel with the doors and drawers, keeping the side with the grooved handle facing up. With a clamp or very firm grip, hold the panel in place while gently opening the door. Have a second person mark at least one drilling location on the panel through the L-brackets that are on the top and bottom of the door.

Note: the mounting holes on the L-brackets are slotted for fine adjustments. Position the panel on the door with one screw in each L-bracket before adding the remaining screws, so as to ensure a perfect placement.

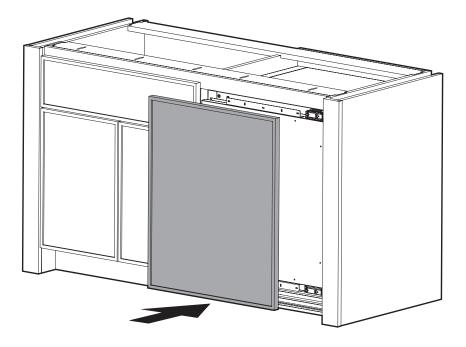




Instructions for 2-drawer panels. Open each drawer and peal back the rubber gaskets around the perimeter of the drawer backsides, then close each drawer. While each drawer is closed, visually align the drawer cover panels with the other doors and drawers of the cabinet, keeping the sides with the grooved handles facing up. With clamps or a very firm grip, hold the cover panels in place on the drawers and gently open the drawers. Then, use the included wood screws to secure the drawer cover panels by screwing through the recessed gasket channels and into the drawer cover panels. Press the rubber gaskets back into place when complete.

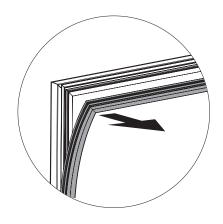

Note: We recommend only screwing one or two attachment points first before adding all screws, so as to ensure a perfect placement.

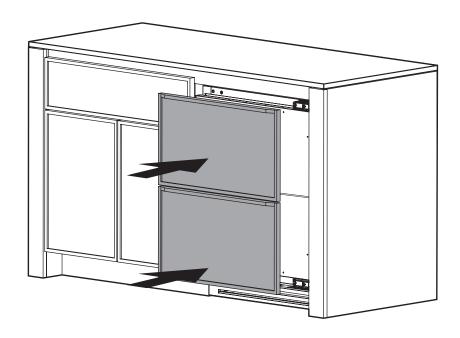

Add stone top. With two people, gently set stone top on top of cabinet.

