


# assembly instructions: studio

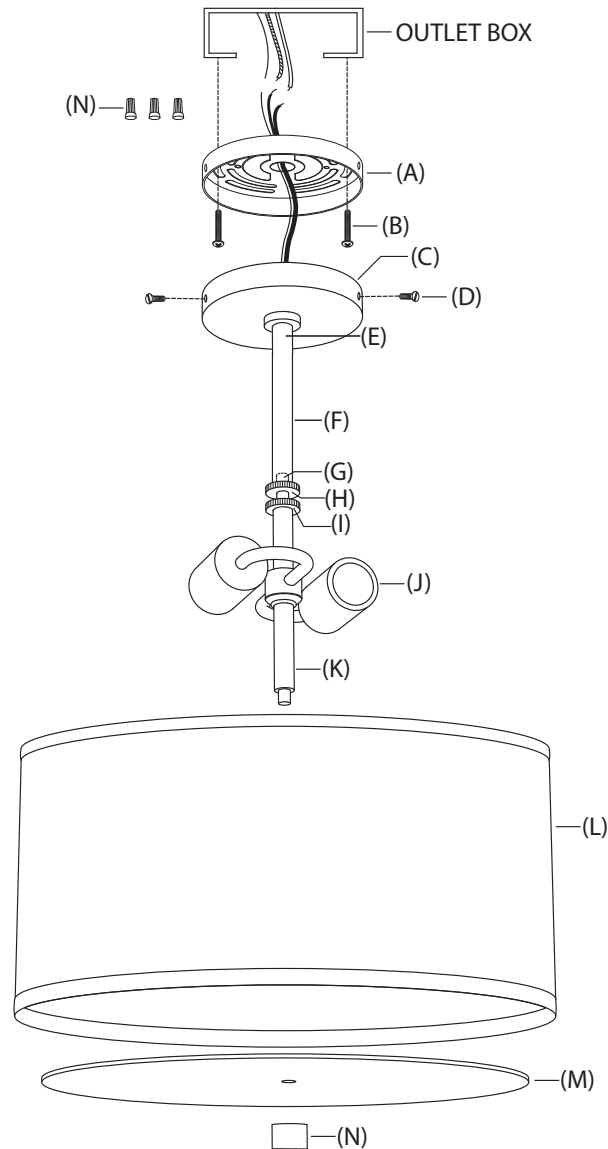

## List of Parts

- |                         |                   |
|-------------------------|-------------------|
| (A) Mounting Plate      | (M) Diffuser      |
| (B) Mounting Screw (X2) | (N) Finial        |
| (C) Canopy              | (O) Wire Nut (X3) |
| (D) Canopy Screw (X3)   |                   |
| (E) Tube                |                   |
| (F) Extension Rod       |                   |
| (G) Tube                |                   |
| (H) Shade Washer        |                   |
| (I) Shade Washer        |                   |
| (J) Sockets (X2)        |                   |
| (K) Tube                |                   |
| (L) Shade               |                   |

## Safety Instructions:

\*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

\*If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If you have questions, contact a qualified electrical contractor.

**\*WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**

## Assembly Instructions:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove all parts from carton, and remove all packing material. Do not throw away any parts.
3. Remove mounting plate (A) from canopy (C) by removing screws (D). Set screws (D) aside.
4. Carefully pull the wiring from the outlet box. Thread the wires through the center hole in mounting plate (A). Affix mounting plate (A) to ceiling outlet box with mounting screws (B) provided.
5. If flushmount drop is desired for fixture, unscrew extension rod (F) from tube (E) and set aside. Pull electrical cord taut from above and thread tube (G) into tube (E).
6. Lift fixture to mounting plate and make electrical connections described in steps 7 - 9. A LICENSED ELECTRICIAN IS RECOMMENDED.
7. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (O). Tightly wrap connection with electrical tape.
8. Attach hot wire from fixture (black or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (O). Tightly wrap connection with electrical tape.
9. Attach neutral wire from fixture (white or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (O). Tightly wrap connection with electrical tape.
10. Carefully push wire connections back into outlet box. Slide canopy (C) over mounting plate (A).
11. Thread screws (D) into vacant holes along the sides of canopy (C) and mounting plate (A).
12. Lift shade (L) over bottom section of fixture. Slide split washer (located in the center of the shade frame) between shade washer (H) and shade washer (I). Secure position of shade by turning shade washer (H) clockwise until it rests firmly against the split washer.
13. Insert two LED Type A, medium base 15.5W MAX (100W equivalent) bulbs into sockets (J).
14. Remove finial (N) from tube (K). Place diffuser (M) inside shade (L) and thread finial (N) back onto tube (K).
15. Reconnect electrical supply at fuse box/circuit breaker and test fixture.

\*\* To clean, wipe surfaces with a soft cloth. Do not use chemical or abrasive cleaners.\*\*